

6", 8" & 10" GRAIN PUMP® LOOP CONVEYING SYSTEM

OWNER'S & OPERATOR'S MANUAL

Effective December 6, 2018

Publication No. 1039052

This Manual is for Serial Numbers of 906815 or Higher

IMPORTANT! The gearbox is shipped **Without Oil**.
Oil must be added before operation.
Refer to the Lubrication Section in this manual.

CE
Original Instructions

AGI  HUTCHINSON MAYRATH

Hutchinson | Mayrath • P.O. Box 629 • Clay Center, KS. USA 67432

P 785.632.2161 • F 785.632.5964 • TF 800.523.6993

hutchinson-mayrath.com

aggrowth.com | **AGI **

HUTCHINSON | MAYRATH

POLICIES and PROCEDURES

Prices: Prices in effect at time of shipment will apply. Prices are subject to change without notice. All prices are F.O.B. Clay Center, Kansas. Orders shipped from locations other than Clay Center, Kansas will be subject to additional charges, such as back freight and/or additional freight.

Service Charge: A service charge will be assessed for all past due balances as permitted by state law not to exceed 1-1/2% per month.

Minimum Order: Processing and handling costs necessitate a minimum charge of \$15.00 net on all orders.

Back Orders: Back orders will be shipped as they become available. Contact Hutchinson,Mayrath Customer Service for alternative shipping options or if cancellation is desired.

Damaged Goods: It is the consignee's responsibility to check all shipments thoroughly upon receipt of goods. If any damage is discovered, it must be noted on the freight bill of lading before signing. The consignee must make necessary claims against the respective freight line. All damage claims must be submitted within 30 days of delivery receipt.

Shortages: All shortages must be noted at time of delivery. Shortages must be noted on the freight bill of lading before signing. Hutchinson,Mayrath must be advised of all concealed shortages upon discovery. Once notified of concealed shortages Hutchinson,Mayrath will advise corrective action to be taken.

Return of Goods: All returns must be approved by Hutchinson,Mayrath prior to shipment. All return requests will be issued a return authorization number. NO RETURNS WILL BE ACCEPTED WITHOUT A RETURN AUTHORIZATION NUMBER AND PRIOR AUTHORIZATION FROM THE FACTORY. All returns must be shipped prepaid. A 15% restocking charge will be applied to all returned merchandise. Custom Products may not be returned for credit. Only current products in new and salable condition may be returned. No safety devices may be returned for credit.

Modifications: It is the policy of Hutchinson,Mayrath to improve its product whenever possible and practical to do so. We reserve the right to make changes, improvements and modifications at any time without incurring the obligation to make such changes, improvements and modifications on any equipment sold previously.

Limited Warranty: (a) For a period of (1) year after receipt of goods by the original consumer buyer, Hutchinson,Mayrath will supply free of charge replacement parts for parts that prove defective in workmanship or material. Defective parts must be returned freight prepaid to a specified Hutchinson,Mayrath location. Only Hutchinson,Mayrath original repair parts may be used for warranty repairs.

(b) This limited warranty does not extend to parts designed to wear in normal operation and be replaced periodically; or to damage caused by negligence, accident, abuse or improper installation or operation.

(c) GOODS NOT MANUFACTURED BY HUTCHINSON,MAYRATH CARRY ONLY THE MANUFACTURER'S WARRANTY.

(d) THIS UNDERTAKING IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

FAILURE TO FOLLOW THE INSTRUCTIONS CONTAINED IN THE OWNER'S & OPERATOR'S MANUALS AND THE ITEMS LISTED BELOW WILL RESULT IN THE VOIDING OF THIS LIMITED WARRANTY.

(1) Improper assembly, including failure to properly install all safety equipment.

(2) Improper installation.

(3) Unauthorized alternations of goods.

(4) Goods operated when obviously in need of repair.

(5) Use of unauthorized repair parts.

(6) Irresponsible operation.

(7) Used to handle materials other than free flowing, nonabrasive and dry materials, as intended.

(8) Damaged through abusive use or accident.

Limitation of Liability: BUYER AGREES THAT IN NO EVENT SHALL HUTCHINSON,MAYRATH HAVE LIABILITY FOR DIRECT DAMAGES IN EXCESS OF THE CONTRACT PRICE OF THE GOODS IN RESPECT OF WHICH CLAIM IS MADE. BUYER FURTHER AGREES THAT IN NO EVENT SHALL HUTCHINSON,MAYRATH ON ANY CLAIM OF ANY KIND HAVE LIABILITY FOR LOSS OF USE, LOSS OF PROFITS, OR FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

TABLE OF CONTENTS

POLICIES AND PROCEDURES	(Inside Front Cover)
TABLE OF CONTENTS	1
SAFETY	2 - 10
General Safety Statement, Safety Alert Symbol	2
Intended Use, Correst Use, Misuse of Equipment	4
Grain Bin Safety	5
Working at Heights	6
Electrical Safety	7
Safety Decals	8-9
Operator's Qualification	10
GENERAL INFORMATION	11 - 19
Chain Loop Specifications, Conveyor Horsepower (kw) Information	11
Electric Motor Drive Information, How to Calculate Total Horsepower	12-13
Installation & Layout Consideration Information	14-16
System Support & Grain Flow & Drive Corner Information	17
Construct Support Structures	18-19
ASSEMBLY INSTRUCTIONS	20 - 42
Assemble & Erect Vertical Ends	20-21
Install Chain & Paddles	22
Install Lower Horizontal Section, Bin Wells	23-30
Install Upper Corners	31
Install Upper Horizontal Sections	32-33
Manual Take-Up Inspection Corner, Connect & Tension Chain	34
Auto Take-Up Inspection Corner, Connect & Tension Chain	35
Drive Corner Motor Installation	36
Discharge w/ Cable Ground Control Gates	37-38
Discharge w/ Chain Ground Control Gates	39-42
CONVEYOR OPERATION	43 - 45
Designated Work Area	43
Start-Up & Break-In Information	43
Operation, Shutdown/Lockout	44-45
LUBRICATION & MAINTENANCE	46 - 50
General Maintenance Information	46
Conveyor Chain	46
Bearings, Inspection Corner, Drive & Standard Corners, R&P Dump Hopper	47
Loop System and Drop Assemblies	48
Drive Belts, Drive and Corner Sprockets	48
Auto Take-Up Corner	48
Gear Reducer	49
Split Sprocket Wear	50
Rack & Pinion, Commercial and Standard	51
Trouble Shooting	51
OPTIONAL ACCESSORIES	52 - 54
Inlet Hoppers & Chain Maintenance Access Hoppers	52-53
Truss Support System	54
PARTS LIST TABLE OF CONTENT	P-1
PARTS LIST	P-2 - P-51
TORQUE CHART	P-52
EC DECLARATION of INCORPORATION	P-53

SAFETY

GENERAL SAFETY STATEMENT

This manual was written with the safety of the operator and others who work with the equipment as our prime concern. The instructions presented will help the reader learn **SAFE** day to day work practices. We want you as our partner in safety.

It is your responsibility as an owner, operator or supervisor to know what specific safety requirements and precautions exist and to make these known to all other personnel working with the equipment or in the area, so that they too may safely perform their duties and avoid any potentially hazardous situations.

We suggest the implementation of a Safety Program for all personnel that includes, but is not limited to, the proper use of PPE (personal protective equipment), Fall Protection Systems and Lock Out-Tag Out procedures.

Please remember safety equipment provides important protection for persons around a grain handling system that is in operation. Be sure **ALL** safety shields and protection devices are installed and properly maintained. If any shields or guards are damaged or missing, contact your dealer to obtain the correct items.

Avoid any alterations of the equipment. Such alterations may create a dangerous situation where serious injury or death may occur.

SAFETY ALERT SYMBOL

The safety symbol shown is used throughout this manual to alert you to information about unsafe actions or situations, and will be followed by the word **DANGER, WARNING, or CAUTION.**

DANGER - Indicates immediate hazards that may result in severe injury or death. **WARNING** - Indicates unsafe actions or situations that may cause severe injury, death and/or major equipment or property damage. **CAUTION** - Indicates unsafe actions or situations that may cause injury, and/or minor property damage.

Watch this symbol - it points out important safety precautions. It means - **ATTENTION! Become alert! Your safety and the safety of others is involved!** Read the message that follows the symbol when a warning is given, be alert to the possibility of personal injury or death.



Follow Safety Instructions

Carefully read all safety messages in this manual and safety signs on your machine. Check to ensure all Safety Decals are present and in good condition.

If a decal cannot easily be read for any reason, or has been painted over, replace the decal immediately. Safety decals are offered free of charge, and can be ordered through your Hutchinson/Mayrath dealer or directly from the factory.


Learn how to operate the machine and how to use controls properly.

Keep your machinery in proper working condition. Understand service procedures before doing work. Never lubricate, service or adjust machine while it is in operation.

Keep work area clean, dry and free from of all debris and tools which may cause accidental tripping or falling.



Read and Understand Manual

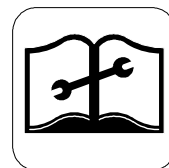

Understand Service Procedures



Keep Work Area Clean

Prepare for Emergencies

Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

Keep a first-aid kit and fire extinguisher handy.

Be prepared if a fire starts



First Aid Equipment



Fire Extinguisher

Wear Proper PPE (Personal Protective Equipment)

Some materials can create flying debris when they are filed, cut or drilled. Safety glasses should be worn at all times to protect your eyes from such debris.

Hearing protection should be worn when operating power tools or other power equipment that could be harmful to your hearing.

Gloves should be worn to protect your hands from sharp metal and plastic edges, as well as providing protection from the handling of heavy objects.


Wear steel toe boots to protect your feet from falling debris.

Wear a hard hat to help protect your head from falling objects as well as from accidental bumping.


Use caution when working at elevations greater than four (4) feet (1.22 m) above the ground.

Use the appropriate fall protection equipment as set forth by OSHA guidelines and regulations.

A respirator may be needed to prevent breathing potentially toxic fumes and dust, especially when working within a grain bin or storage structure.

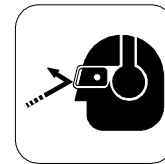

Eye & Hearing Protection

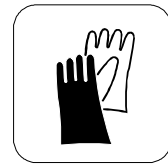

Gloves




Steel Toe Boots



Hard Hat



Fall Protection

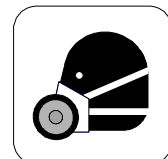


Respirator

Operate Electric Motor(s) Properly

Do not operate electric motor equipped units until motor(s) are properly grounded.

Know how to "Shutdown and Lockout" the power source. Shutdown and lockout power source before performing any service, maintenance or adjustments to the unit.

Disconnect power on electrical driven units before resetting motor overloads.

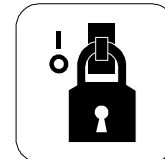

Lockout / Tagout



Electric Shock Hazard


Stay Clear of Moving Parts

Keep all shields, covers and safety devices in place at all times.


Entanglement in moving chains, rotating impeller arms and sprockets will cause serious injury or death.

Wear close fitted clothing. Keep hands, feet and clothing away from moving parts.

Shutdown and lockout power source before making adjustments, cleaning or maintaining the equipment.

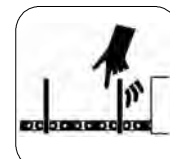

Entanglement Hazards

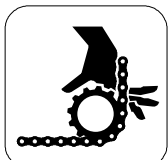

6", 8" & 10" GRAIN PUMP LOOP**CONVEYOR INTENDED USE**

This product is intended to provide the mechanical means to move **only** agricultural whole seeds and grain into and out of grain bins or storage structures to a specific discharge point or points.

This Chain Loop System is designed to move grain from numerous bins or from a single bin. It can also be equipped to receive grains from trucks, trailers or other mechanical grain handling equipment.

The unit can be operated in environmental conditions throughout the seasons in temperature zones ranging from -22°F to 125°F (-30°C to 51°C). Refer to the manufacturer's manual shipped with the gearbox for oil viscosities relating to specific ambient temperatures.

Power recommendations are referenced on Page 14.

Allowable capacities are 1500 bph (41 *mtph*) for the 6" unit at a chain speed of 325 fpm (99.1 *mpm*), 4000 bph (108 *mtph*) for the 8" unit at a chain speed of 325 fpm (99.1 *mpm*) and 6000 bph (162 *mtph*) for the 10" unit at a chain speed of 325 fpm (99.1 *mpm*).


Any use other than specified in the above is not recommended by the manufacturer.

CORRECT USE

- Where installed in or under a grain bin or storage structure, the Chain Loop shall never be used with personnel inside the bin or storage structure.
- Electrical control systems shall be designed to the requirements of the Machinery Directive 2006/42/EC, risk assessment should be in accordance with EN60204:2006, EN ISO 13849:2006 or EN954-1.
- Final installation shall be in accordance with all safety requirements outlined in this manual and fulfill the Essential Requirements of the Machinery Directive 2006/42/EC.
- Be aware that when stopped, the drive, belts, chain and paddles may move unexpectedly due to the weight of grain held in the vertical tubes. Whenever possible run the Chain Loop empty before stopping the system.
- **Never** leave the Chain Loop running unattended.
- **Always Turn Off and Lockout** the power supply to the Chain Loop before leaving it unattended.
- **Never** allow someone under the influence of alcohol or drugs to operate the equipment.
- **Never** work alone.
- **Never** start equipment until all persons are clear of the grain bin.

CORRECT USE (con't.)

- **Always** think before acting. Never act impulsively around the equipment.
- **Never** allow anyone inside a bin, truck or wagon which is being loaded or unloaded. Flowing grain can trap and suffocate in seconds.
- **Never** enter the grain bin or storage structure, or attempt to work on the Chain Loop unless the power supply to the Chain Loop and all other equipment associated with the Chain Loop is **Shutdown, Locked-Out and Tagged**.

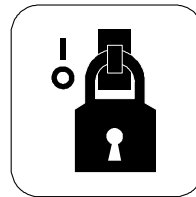**MISUSE OF THE EQUIPMENT**

WARNING! Misuse of this equipment can be extremely dangerous. Moving chain, paddles, pulleys and shafts can cause serious injury or death.

- **Do Not** convey materials other than what is specified in the "Intended Use" section.
- **Do Not** modify the drive system.
- **Do Not** convey over longer distances than what the horsepower (*kw*) calculation determines. Reference Page 14 for the formula to calculate horsepower (*kw*).
- **Do Not** run grains through the take-up corner. Grain should always discharge from the system before it reaches the take-up corner (See Page 17).
- **Do Not** hang objects other than drops, chain wheels or equipment meant to be used with the product, from the horizontal sections of the Loop System.
- **Do Not** climb on the Loop System housing, always use ladders, catwalks or other specific structures that are erected for such a purpose.
- **Do Not** operate the system with any guards removed.

GRAIN BIN SAFETY - POSSIBLE INSIDE HAZARDS

The Loop Conveying System is generally designed to move grain into or from grain bins or other storage structures. **Be aware of the dangers inherent in grain bins.**

The inside of a grain bin, no matter what size, is a dangerous location. Grain bins should be kept **locked shut** at all times.


Consult the grain bin manufacturer's manual for information on the proper loading and unloading of the bins, structural stress analysis, adequate venting and other important bin safety information.

It is a recommended **additional safety measure** to fit grain bin doors and hatches with electrical interlock switches to stop all equipment if the door or hatch is opened. However this does not override the need to lockout power before entering.

Never allow a child, or untrained, inexperienced person to enter a grain bin.

Exposed machinery such as fans, augers, conveyors and other grain handling equipment can create hazards in which you can become entangled (or sucked into an abyss so deep you'll never get out).

Never enter the bin unless monitored by another person.

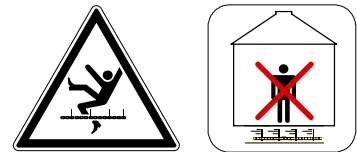


Keep out of bin when filling or emptying as the mass flow of grain can draw you in and cause suffocation/burial.

Do Not enter the bin if the grain has "Bridged" or has not flowed normally out of the bin. The grain may suddenly break loose and bury resulting in suffocation.



Bridged, crusted or capped grain can collapse if you stand on it. It is recommended **NEVER** to walk on the surface of stored material.


If grain has stopped flowing, become bridged, capped or crusted, the only safe way to remedy this is from the outside of the bin.

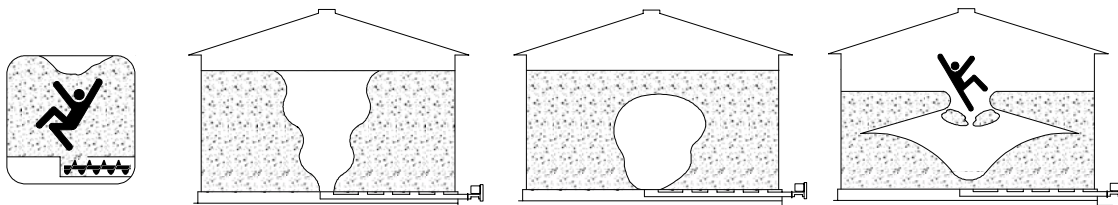

It is recommended to develop a Confined Space Entry program that conforms to Directive 89/391/EEC or OSHA 29 CFR 1910.46.

Proper PPE should be worn at all times when working in and around grain bins and storage structures.

Hazardous substances such as dust, mold spores, vapors and gasses or low oxygen levels can cause respiratory problems and even death.

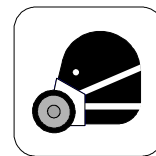

Another possible hazard is the presence of high temperature combustible material.

Do Not enter the bin unless all power driven equipment has been shut down and locked out.



WORKING at HEIGHTS

The equipment has been designed to operate primarily at ground level, at some stages during the life cycle it will be necessary to work at heights. For this reason, the equipment should be provided with access ladders and platforms to minimize the risk to health and safety.

The majority of routine service can be carried out from the service platforms provided. In the rare event that access is required outside these structures, additional access and safety equipment may be required.

We recommend the use of power access lift platforms and safety harness. Such work must only be carried out by specialist technicians trained and qualified in working at heights and only after a complete risk assessment has been carried out and safe working methods established.

In addition, attention should be paid to the following safety requirements:

- The ladders, platforms and walkways are for use by competent and trained personnel only. NEVER allow children or members of the general public to gain access to the equipment, its ladders or access platforms.
- Where the equipment is sited in an unsecured location, access must be restricted by use of security fencing and lockable gates.
- Lower sections of ladders on the equipment should be fitted with a lockable safety gate to prevent unauthorized access.
- Never attach lifting equipment to ladders or platforms.

When working on the equipment, Never go outside the safety rails.

- The equipment should be **OFF** and all power **LOCKED OUT** before work on or in the equipment. Ensure the power source is **OFF** and **LOCKED OUT** and **TAGGED OUT** to prevent inadvertent re-start.



Do Not work at heights during winds, heavy rain, snow, ice or storm. Metal buildings, scaffolding and other types of work surfaces can become slippery, especially when surfaces are wet and/or oily. This can create hazardous working conditions. Use caution when working, climbing or walking on these surfaces.

Use caution when working above the ground. Persons operating, servicing or repairing equipment that requires above ground work shall be properly secured with the use of "Fall Protection" equipment as set forth in the EU-OSHA guidelines and regulations.



ELECTRICAL SAFETY



All electrical design, motors, controls, installation and testing must be carried out by a qualified electrician in accordance with EU Directives and Standards or the standards set by the National Electrical Code and all local and state codes.



The electrical supply must include a properly designed protective earth system (PE), with connection to all exposed conductive parts.

All motors shall be connected to protective earth at the terminal provided.

Equipment shall include:

Fuse protected main power supply. The electrical supply should include earth leakage protection, e.g. residual current device (RCD) or residual current circuit breaker (RCCB), to provide automatic disconnection in the event of a fault.

Lockable main safety disconnect.

Disconnects **ALL** electrical power.

Lockable motor service disconnect.

Adjacent to each motor (or group of motors).

Disconnects all power to the motors.

Emergency stops.

Stops all equipment immediately when pressed.

Must remain engaged until manually disengaged.

Equipment shall not immediately re-start when the emergency stop is re-set.

The control system shall include:

Short circuit protection.

Start/Stop controls (labeled I and O respectively).

Equipment shall not immediately re-start following re-establishment of power.

Motor circuits shall include over current protection set according to the full load current stated on the motor rating plate,

Motor thermal protection may also be required.


Door safety interlocks - Where doors provide access to dangerous machinery.

Interlock immediately stops and prevents re-start of all equipment when the door is open.

Equipment shall not immediately re-start when the door is closed.

Safety switches shall be SIL3 in accordance with IEC62061:2005.

Safety circuits should be category 3 in accordance with EN954-1:1997 or PLC in accordance with ISO 13849-1:2006.

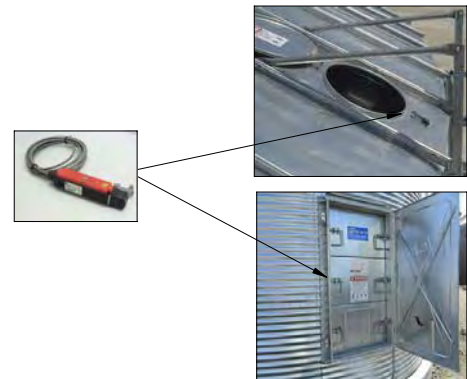



SAFETY DECALS

Check to ensure all Safety Decals are present and legible.











If a decal cannot be easily read for any reason, or has been painted over, replace decal immediately.

Decals are offered free of charge and can be obtained through your Hutchinson/Mayrath Dealer or ordered directly from the factory:

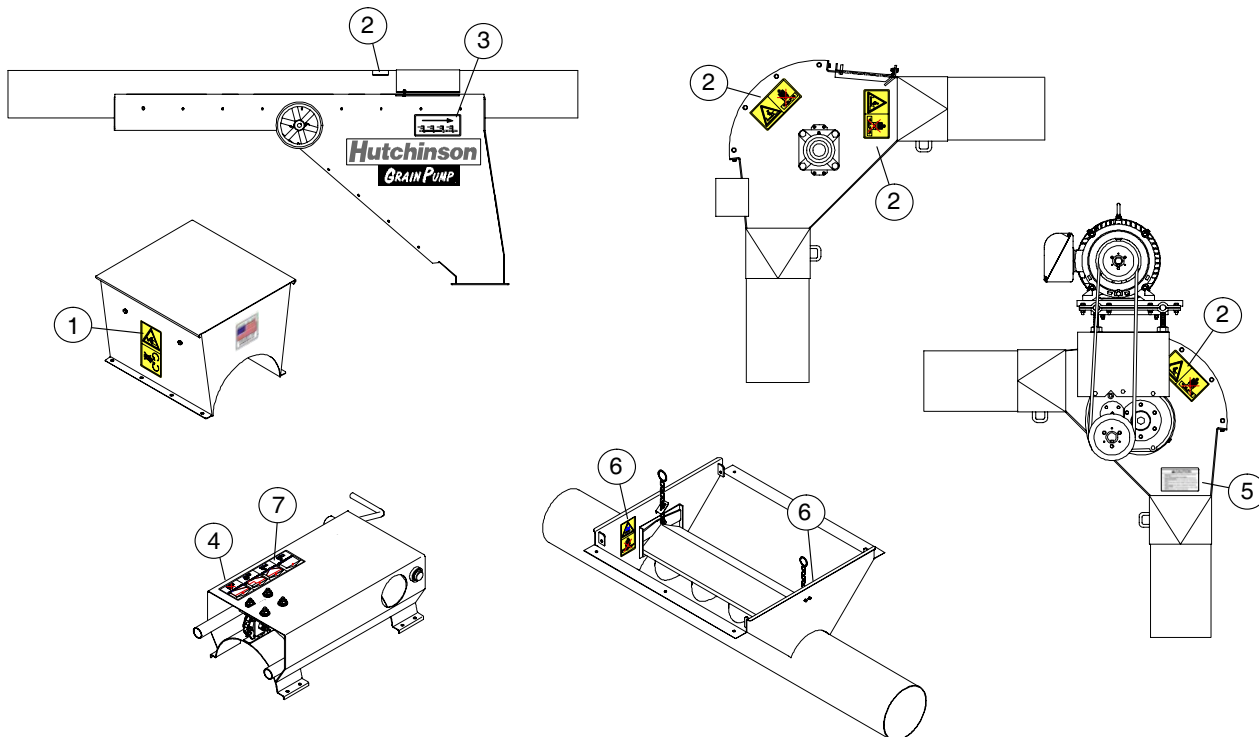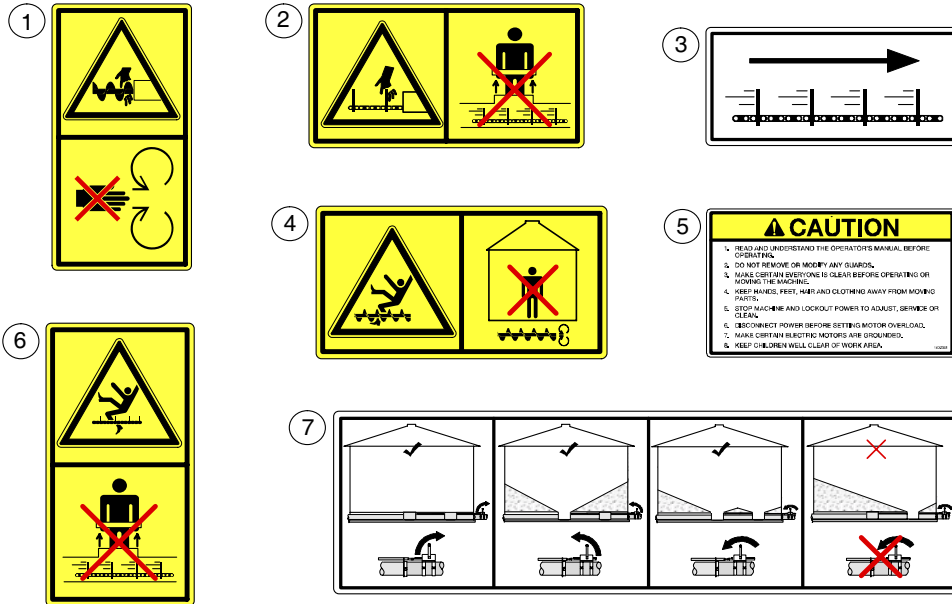

Hutchinson/Mayrath
 P.O. Box 629
 Clay Center, KS 67432
 1-800-523-6993

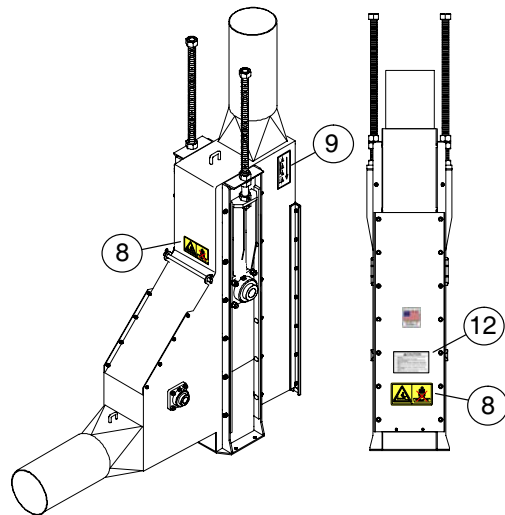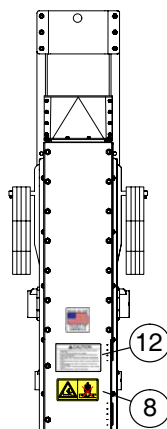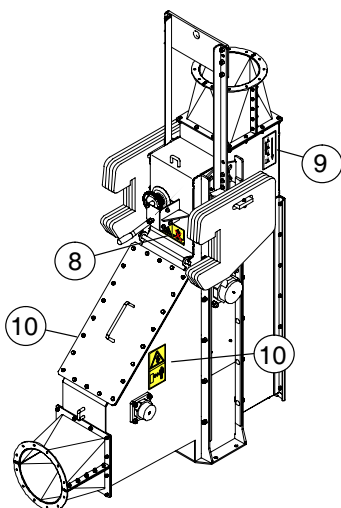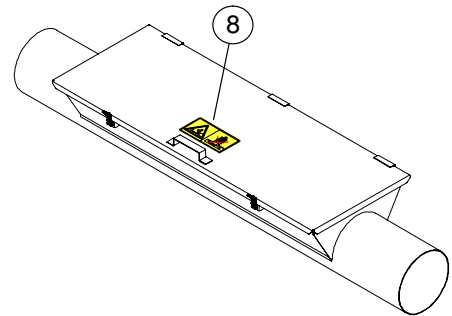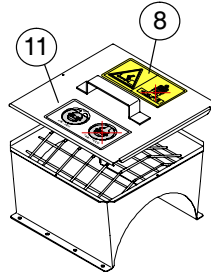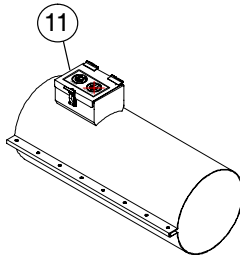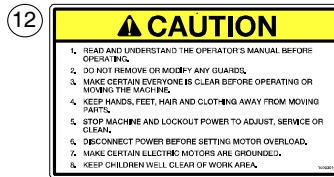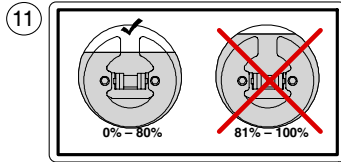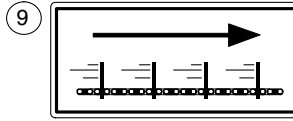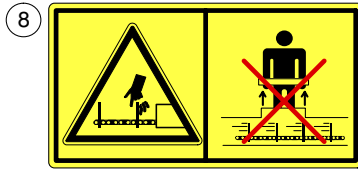

SAFETY DECALS (con't.)



OPERATOR QUALIFICATIONS

WARNING!
 Anyone who will operate or work around this machine shall first read this manual! This manual must be delivered with the equipment to its owner. Failure to read this manual and its safety instructions is a misuse of the equipment.

Operation of this conveyor system shall be limited to competent and experienced persons. In addition, anyone who will operate or work around a conveyor must use good common sense. In order to be qualified, they must also know and meet all other requirements, such as:

1. Some regulations specify that no one under the age of 16 may operate power machinery. This includes this conveyor. It is your responsibility to know what these regulations are in your area or situation.
2. Current EU/OSHA regulations state in part: "At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee in safe operation and servicing of all equipment with which the employee is, or will be involved." *

3. Unqualified persons are to stay out of the work area. See Page 43.
4. A person who has not read and understood all operating and safety instructions is not qualified to operate the machine.
5. Persons operating, servicing or repairing equipment that requires above ground work shall be properly secured with the use of "fall protection" equipment as set forth by EU/OSHA guidelines and regulations.

***Federal Occupational Safety & Health Standards for Agriculture Subpart D, Section 1928.57 (a) (6).**

SIGN OFF SHEET

As a requirement of EU/OSHA, it is necessary for the employer to train the employee in the safe operation and safety procedures with this conveyor. We include this sign off sheet for your convenience and personal record keeping.

<u>Training Sign-Off Sheet</u>		
Date	Employer Signature	Employee Signature

SERIAL NUMBER

To ensure efficient and prompt service, please furnish us with the model and serial number of your conveyor in all correspondence or other contact. The serial plate is located on each of the drive corners.

CHAIN LOOP SPECIFICATIONS

Conveyor Size	6" (15.2 cm)	8" (20.3 cm)	10" (25.4 cm)
Maximum Capacity	1,500 BPH (41 TPH)	4,000 BPH (108 TPH)	6,000 BPH (162 TPH)
Chain Travel in FPM (mpm)	325 FPM (99.06 mpm)	325 FPM (99.06 mpm)	325 FPM (99.06 mpm)
Head Shaft RPM	124	109	94
Housing Gauge, Galv.	12 ga. (2.66 mm)	12 ga. (2.66 mm)	12 ga. (2.66 mm)
Paddle Thickness (UHMW)	3/8" (10 mm)	3/8" (10 mm)	1/2" (13 mm)
Corner Shaft Diameter	1 1/2" (38 mm)	2" (51 mm)	3" (76 mm)
Conveyor Chain	81X	81XHH	81XHH
Conveyor Sprocket	12 Tooth	14 Tooth	16 Tooth
Conveyor HP (kw) Required*			
– Per foot (meter) Vertical	.20 HP (.48 kw)	.35 HP (.85 kw)	.50 HP (1.2 kw)
– Per foot (meter) Horizontal	.05 HP (.12 kw)	.08 HP (.19 kw)	.11 HP (.27 kw)
Weight per foot of Tubular Conveyor – Empty	10.5 lbs./ft. (14.9 kg/m)	18 lbs./ft. (17.9 kg/m)	20 lbs./ft. (22 kg/m)
Weight per (meter) of Tubular Conveyor – Empty			
Full of 56 lb. per bushel material	19.5 lbs./ft.	34 lbs./ft.	45 lbs./ft.
Full of (720 kg per cu. meter) material	(28.3 kg/m)	(41.7 kg/m)	(59.5 kg/m)
Weight f/ Standard Corner	127 lbs. (58 kg)	191 lbs. (88 kg)	242 lbs. (110 kg)
Weight f/ Drive Corner	276 lbs. (125 kg)	710 lbs. (322 kg)	700 lbs. (318 kg)
Weight f/ Discharge Drop	186 lbs. (84 kg)	194 lbs. (88 kg)	242 lbs. (110 kg)
Weight f/ Manual Take-Up Corner	385 lbs. (175 kg)	484 lbs. (220 kg)	550 lbs. (249 kg)
Weight f/ AutoTake-Up Corner	476 lbs. (216 kg)	540 lbs. (245 kg)	580 lbs. (263 kg)

*Clean, dry and non-abrasive grain

CONVEYOR HORSEPOWER (KW) INFORMATION

The height and length of a loop system are limited by the combined power required to move grain those distances. The vertical component requires greater power per foot (meter), so taller units will be more limited in horizontal length. System lengths of several hundred feet are common. However, relatively small systems to accomplish more specific tasks are often built.

Loop units are provided with Dodge gear reducer drives to be driven by one or two electric motors. There are maximum power limits for each drive, but when greater power than can be provided by one drive is needed, a second drive of equal power can often be added. Drives are always located at upper corners. A single drive must always be located at the top corner after the last discharge.

Overfeeding a grain pump loop may cause plugging. We recommend the loading rate be monitored by an amp meter on the electric motor drive(s).

The Grain Pump® will operate more smoothly, move more grain and last longer if loaded **80% of fill, instead of an uncontrolled approach to 100% of fill.**

“Soft Start” motors are always recommended to protect a conveyor from high torque shocks against a unit that may have inadvertently been stopped under load or has become plugged.

GENERAL INFORMATION

ELECTRIC MOTOR DRIVE INFORMATION

Always use a motor with required HP (*kw*) as calculated using the formula's shown below and on Page 13. Use a 60 hz motor that operates at 1750 rpm (*50 hz @ 1460 rpm*). **Units using 50 hz motors require different drive pulleys, consult factory for specifications.**

Electrical motor and controls shall be installed by a qualified electrician and must meet the standards set by Machinery Directive 2006/42/EC, risk assessment and should be in accordance with EN60204:2006, EN ISO 13849:2006 or EN954-1.

A magnetic starter should be used to protect your motor when starting and stopping. It should stop the motor in case of power interruption, conductor fault, low voltage, circuit interruption or motor overload. Then the motor must be restarted manually.

Some motors have built-in thermal overload protection. If this type motor is used, use only those with a manual reset.

Install with an ampmeter on motor or motors, so that the load can always be monitored to prevent overloading.

A main power disconnect switch that can be locked only in the "Off" position shall be installed. This shall be locked whenever work is being done to the conveyor.

HOW TO CALCULATE TOTAL HORSEPOWER (KW)

NOTE: The power recommendations are for conveying reasonably dry grain at approximately 56 lbs. per bushel (*720 kg per cu. meter*). Adjust the power requirements up or down for material of a different density.

1. Determine the vertical height of the system, usually the peak height of the tallest bin plus 4' (*1.22 m*). **Multiply the vertical height by the vertical HP (*kw*) factor** to determine the vertical power requirement.
2. Add the total upper and lower horizontal length of conveyor that will contain material during operation. If you plan to recirculate the grain at full capacity from one storage structure to another, it may add length to the power calculation. **Multiply the total horizontal length by the horizontal HP (*kw*) factor** to determine the horizontal power requirement.
3. Add the vertical and horizontal power together to find the total system power required.

Pump Dia.	Vertical per ft. (<i>m</i>)	Horizontal per ft. (<i>m</i>)
6"	HP (<i>kw</i>) factor = .20 (.48)	HP (<i>kw</i>) factor = .05 (.12)
8"	HP (<i>kw</i>) factor = .35 (.85)	HP (<i>kw</i>) factor = .08 (.19)
10"	HP (<i>kw</i>) factor = .50 (1.2)	HP (<i>kw</i>) factor = .11 (.27)

NOTE: As stated in the Conveyor Horsepower Information section, there are maximum power limits for the drive motors. For excessively long runs (horizontal) with short heights (vertical), the far drive corner can only pull grain for its rated HP/HP per ft. (*kw/kw per meter*).

To determine the maximum horizontal length a motor can handle: **divide the motors rated HP (*kw*) by the horizontal HP (*kw*) factor .05 (.12 *kw*).**

For example, to determine how long of a horizontal run you can have using a 30 HP (*22 kw*) motor.

Pump Dia.	30 HP (<i>22 kw</i>)
6"	HP (<i>kw</i>) factor = .05 (.12)
30 divided by .05 = 600 ft.	(22 divided by .12 = 183 m)
that is the maximum distance grain can be moved in the top tube.	that is the maximum distance grain can be moved in the top tube.

HOW TO CALCULATE TOTAL HORSEPOWER (KW) (con't.)

When determining the length of your system, take into consideration, not only the horizontal and vertical HP (kw) required as determined below, but the limits of the rated HP/HP per ft. (kw/kw per meter) of the motor.

In this example (using the 6" pump)

There is 40 ft. (12.19 m) of vertical conveyor, 20' (6.10 m) from dump hopper to vertical and 100 ft. (30.48 m) for a total of 120 ft. (36.58 m) of horizontal conveyor that will contain grain.

Vertical HP (kw) Requirement 40' x .20 (vertical HP factor) = 8 hp
 (12.19 m x .48 vertical kw factor) . = (5.9 kw)

Horizontal HP Requirement 120' x .05 (horizontal HP factor) = 6 hp
 (36.58 m x .12 horizontal kw factor) = (4.4 kw)

Total HP (kw) Vertical + Horizontal = 14 hp (10.4 kw)

Electric Motor size required = 15 hp (11 kw)

If there are plans to transfer grain from Bin A to Bin B, an additional 35 ft. (10.67 m) of horizontal length must be added to the calculation.

For example with the 6" pump:


multiply the extra 35 ft. (10.67 m) of horizontal by the horizontal HP (kw) factor,

$$35 (10.67 m) \times .05 (.12) = 1.75 \text{ hp } (1.3 \text{ kw})$$

Add that to the total HP (kw) of the 40' & 120' calculation from above; 1.75 hp + 14 hp = 15.75 hp
 (1.3 kw + 10.4 kw = 11.7 kw)

Total HP (kw) - Vertical + Horizontal = 15.75 (11.7 kw)

Electric Motor Size Required = 20 HP (15 kw)

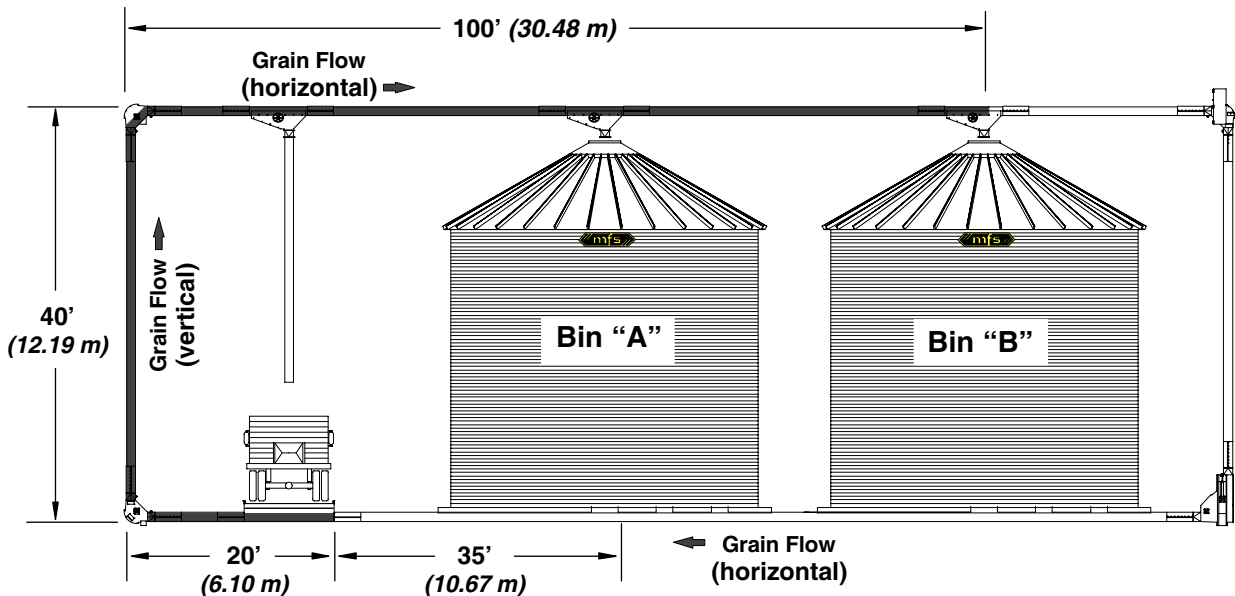

GENERAL INFORMATION

INSTALLATION INFORMATION


The purpose of this section is to advise and instruct owners on how the equipment can be installed.

A millwright or other experienced contractor should perform the installation. **The installer should read this manual and understand the complete operation of the equipment.**

- All systems require the joining of four or more sections of tubular conveyor housing.
- All systems will include four 90° corners.
- The 90° discharge with gate includes either an 8' (2.44 m) or 12'-6" (3.81 m) long section of tubular housing that must be fit within other conveyor tubing so the discharge is properly located.
- The inlet dump hoppers include a length of tubular conveyor housing that must fit within other tubular housing so the hopper is located properly.
- Wells used in grain bin floors fasten onto standard tubular conveyor housing. Access openings must be cut in the tubing to install wells.

LAYOUT CONSIDERATIONS

Typical 4-Corner System setup.

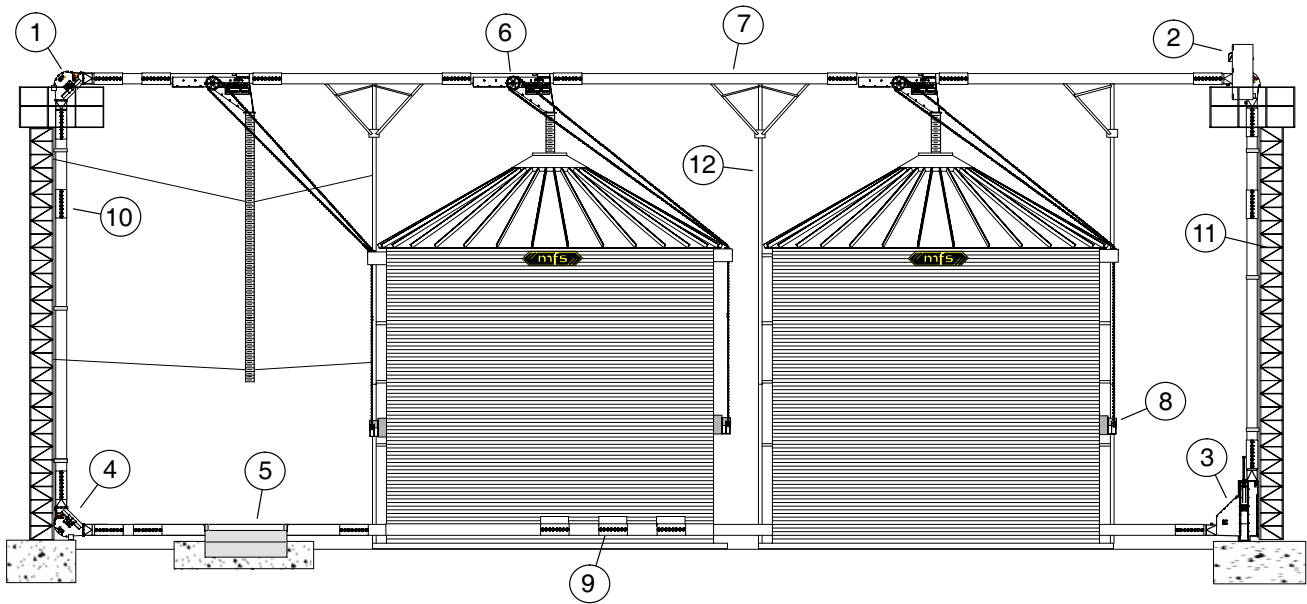

Ref. #	Description	Ref. #	Description
1	Upper Standard Corner	7	Conveyor Tube
2	Drive Corner	8	Ground Gate Control
3	Inspection Corner	9	Bin Wells
4	Lower Standard Corner	10	Connecting Bands
5	Dump Hopper	11	End Supports
6	Discharge Spout	12	Intermediate Supports

1. Vertical support towers shall be fitted with personnel access ladder and service platform in accordance with relevant sections of EN 14122.

LAYOUT CONSIDERATIONS (con't.)

Dimensional information of components is found in the Parts List Section beginning on Page P-3.

IMPORTANT! If using the chain access assembly, it is recommended that it be installed on a horizontal section of the loop system.

Following are major items that should be considered when laying out the system:

- A. Type of material to be conveyed.
- B. Volume of material to be conveyed [bushels (*tons*) per hour].
- C. Location and amount of material fed into system.
- D. Location and number of outlets.
- E. How will the conveyor be supported?
- F. Installation of a catwalk?
- G. Further expansion. Will more bins be added and where?
- H. The direction of grain flow.

Grain Pump® Systems are usually installed around rows of storage structures, with access for vehicle or rail traffic and other devices.

Grain bins may be conventional or elevated on a supporting structure with hopper bottoms.

Grain dryers, cleaners or other devices may have access to the system.

Systems have been used to transfer between trucks and rail cars with several temporary storage tanks included.

The Grain Pump® conveyor can be used in many different ways and operation can vary from installation to installation.

Thought given to proper grain system layout prior to conveyor installation can prevent later problems in the grain flow plan and avoid possible "bottle-necks".

A layout should be made to determine the exact location of conveyor, inlets, outlets, power source, support and mounting locations.

The illustration on Page 16 shows some of the various components that can be used with your system. Consideration during the layout process should be given to their location if any of them are to be used in your application.

Note: If two drive corners are used, the regular drive corner and the reversed drive corner can be switched to allow the belt guard (drive motor) to be on a particular side of the loop.

Use these general guidelines to help layout your conveyor system:

- Grain pumps are designed to move grain in one direction only.
- Leave adequate room to perform periodic maintenance.
- The conveyor will handle a wide range of free flowing grains. It should not be used with highly corrosive material, such as fertilizer. The life of the conveyor chain will be shortened when the chain is allowed to sit in water or is operated in acidic conditions, so avoid these situations.
- Be sure not to overfeed the conveyor. This will cause plugging. Intake rate should not exceed the particular capacity of the conveyor.
- It is important that a firm, level foundation or support structure be provided on which the conveyor can be mounted. This support should be ample to carry the load of the conveyor when fully loaded.
- Locate outlets where connecting bands will not interfere with outlets or control. **Do Not cut or modify tube connecting bands.**


GENERAL INFORMATION

Location of Components shown as a reference only.


(2, 3 & 5) Can be installed on upper tubing if catwalk is available

(2, 3 & 5) Can be installed on upper tubing if catwalk is available

(2, 3, 5) Can be installed on upper tubing if catwalk is available

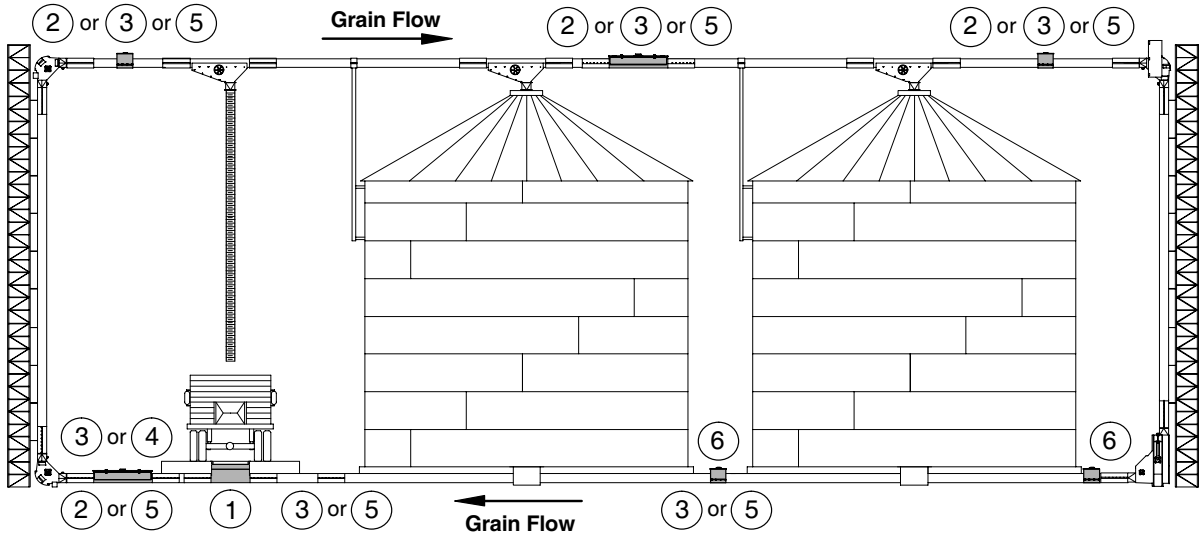


2 Grate Dump Hopper
(also 5, 6 and 7 grate hoppers)

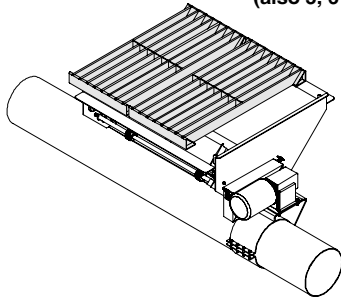

1

Typically located near standard corner where chain and paddles turn to carry grain into the system.


Chain Inspection Access
(horizontal installation only)

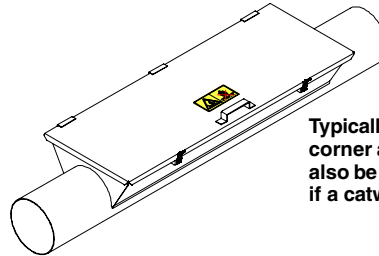

2

Typically located near standard corner after dump hopper, can also be installed in upper tubing if a catwalk is available

Inspection Port

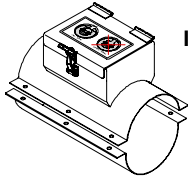


3

Inspection Ports may Differ in Appearance

Typically located near standard corner, usually after dump hopper (must be installed in horizontal tube). Can also be installed in upper horizontal tubing if a catwalk is available .

Inlet Hopper

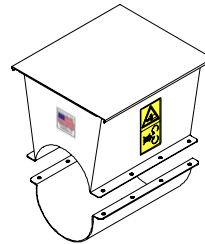


4

Used mainly for dumping grain into the system without using the drive-over dump hopper. Typically located near standard corner or outside of the loop system tying into another loop system.

Inspection Hopper


5

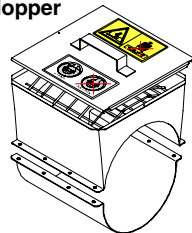

Generally installed after dump hopper or each bin. Can basically be installed anywhere along the horizontal tube of the loop system to view grain flow.

Rack & Pinion Control

6

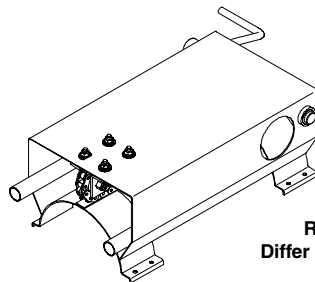

R&P's may Differ in Appearance

Located outside of grain gin or storage structure close to outside wall. Opens and closes center and intermediate well gates.

SYSTEM SUPPORT INFORMATION

Towers or other adequate supports are needed to hold the vertical ends of the Grain Pump® System in position. Consider the weight **per foot (meter) of a fully loaded tubular conveyor**, based on **56 lb. per bu. of material (720 kg per cu. meter)**, the individual corners and all other components, particularly the ones with drives which weigh considerably more.

The horizontal tubular conveyor should be supported at 20 ft. to 30 ft. (6.10 to 9.14 m) intervals. This can be done with vertical supports from the ground, from the bin side walls or from the bin roof at the peak. **Consult the bin manufacturer concerning their recommendations for loads their bin will support in these areas.**

Weight per foot (meter) of tubular conveyor:

Conveyor Tubing Empty:

6" = 10.5 lbs./ft. (14.9 kg/m) 8" = 18 lbs./ft. (17.9 kg/m) 10" = 20 lbs./ft. (22 kg/m)

Conveyor Tubing Fully Loaded:

6" = 19.5 lbs./ft. (28.3 kg/m) 8" = 34 lbs./ft. (41.7 kg/m) 10" = 45 lbs./ft. (59.5 kg/m)


GRAIN FLOW AND DRIVE CORNER LOCATION

Grain Pump® Loop Systems will include one or two drive corners. The drive corner, on systems with one (shown in the illustration below), must be located at the overhead point toward which the overhead chain will travel. On systems with two drive corners locate them at the two overhead positions.

The inspection corner includes the adjustable slide that is used to tighten the conveyor chain. Locate the inspection corner on the bottom at the end where the conveyor chain travels down from top to bottom. The inspection corner also provides access to the conveyor chain and paddles for periodic maintenance.

There will be one or two standard corners, depending on the number of drive corners. They will be located at the end where the conveyor chain moves up carrying grain from the bottom to the top. When there are two drives, there is only one standard corner located at the bottom.

The system should be laid out to minimize the distance grain must be moved to perform the necessary loading and unloading operation. In the example, the dump hopper is located next to the end where the grain will be carried up to the overhead part of the system. If the dump hopper were located at the other end of the system the grain must travel a greater distance in the system to reach a bin. Grain would also travel a greater distance to the load out point when unloading bins.

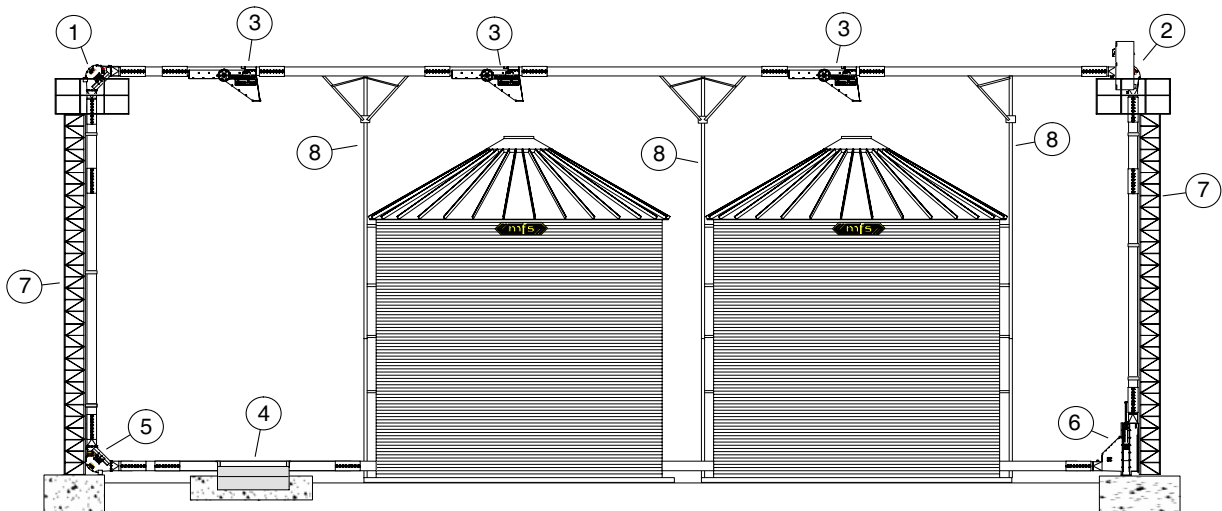


Ref. #	Description
1	Standard or Drive Corner
2	Always Drive Corner
3	90° Discharge Spout
4	Dump Hopper

Ref. #	Description
5	Always Standard Corner
6	Always Inspection Corner
7	Support for Vertical Section
8	Horizontal Supports

ASSEMBLY INSTRUCTIONS

CONSTRUCT SUPPORT STRUCTURES


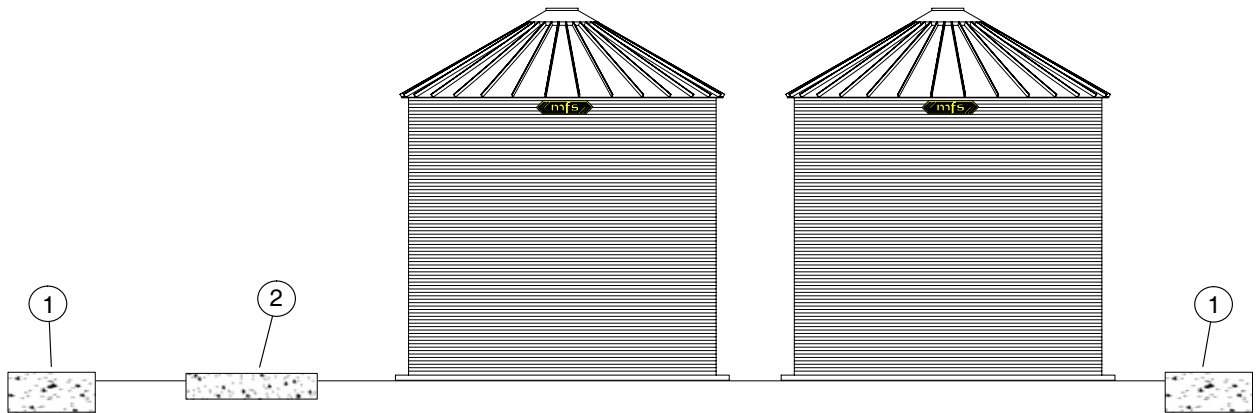


Ref. #	Description
1	Main Tower Bases (dimension accordingly)
2	Dump Hopper Base (see hopper dimensions)

Use concrete structures for Drive-Over applications.


Use similar support structures for Non-Drive Over applications.

Concrete structures to include rebar reinforcement as dictated by structural engineers requirements (Example A).

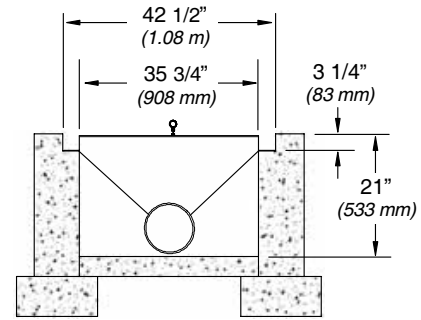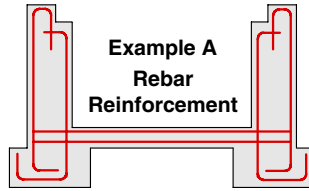


Concrete Dimensions for 6" Dump Hoppers


- For drive-over applications, the dump hopper must be fitted into and supported by a suitable concrete structure and may require a ramp to allow tipping vehicles to drive up.

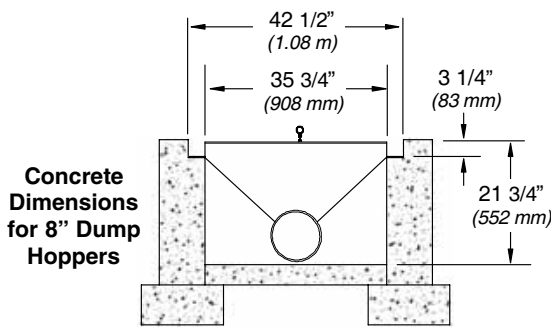


Concrete Dimensions for 8" Dump Hoppers

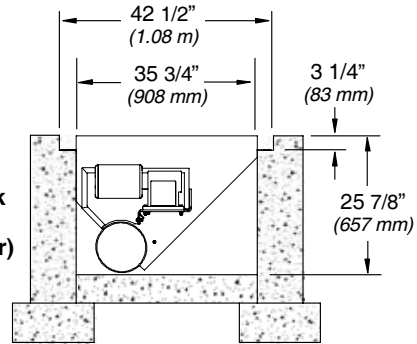

5 Grate Dump Hopper w/ Rack & Pinion Gate (8" Dump Hopper)

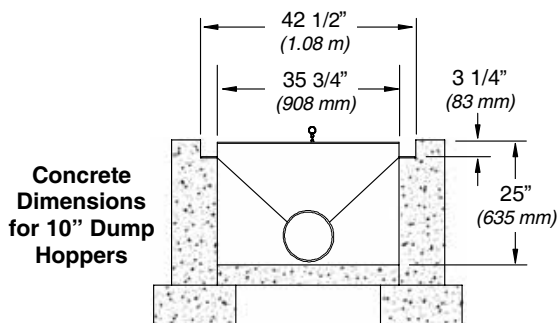


Concrete Dimensions for 10" Dump Hoppers

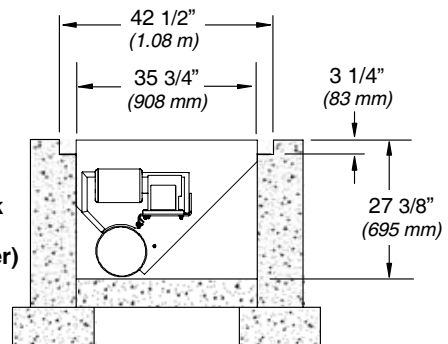

7 Grate Dump Hopper w/ Rack & Pinion Gates (10" Dump Hopper)

CONSTRUCT SUPPORT STRUCTURES (con't.)

Dump hopper lengths are shown in the following chart.

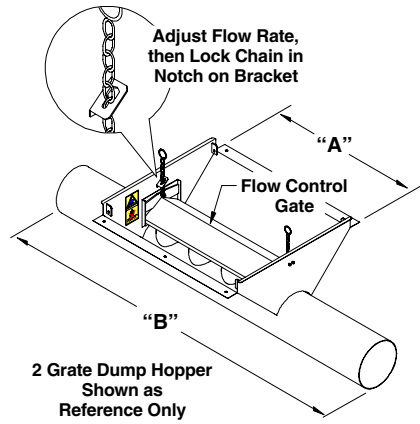


Dump Hopper Lengths		2 Grate	3 Grate	5 Grate	5 Grate w/ R&P Gates	6 Grate	7 Grate	7 Grate w/ R&P Gates
6" Loop	"A"	42 1/2" (1.08 m)	62 1/2" (1.59 m)	102 1/2" (2.60 m)	-NA-	-NA-	-NA-	-NA-
	"B"	72" (1.83 m)	92" (2.34 m)	132" (3.35 m)				
8" Loop	"A"	42 1/2" (1.08 m)	62 3/4" (1.59 m)	-NA-	102 1/2" (2.60 m)	125 5/16" (3.18 m)	-NA-	-NA-
	"B"	72" (1.83 m)	92" (2.34 m)		132" (3.35 m)	154 5/8" (3.93 m)		
10" Loop	"A"	42 1/2" (1.08 m)	62 1/2" (1.59 m)	102 1/2" (2.60 m)	-NA-	125 5/16" (3.18 m)	142 1/2" (3.62 m)	142 1/2" (3.62 m)
	"B"	72" (1.83 m)	92" (2.34 m)	132" (3.35 m)		154 5/8" (3.93 m)	172" (4.37 m)	172" (4.37 m)

2. Site must be well drained and free from vegetation.
3. Foundation must be free of frost.
4. Reinforcement and concrete specifications checked to structural engineers requirements.
5. Horizontal supports spaced a maximum of 20' to 30' (6.10 to 9.14 m).
6. Erect tower supports and horizontal supports according to the dimensions and height of your application.


NOTE: Truss support kits are available for the loop system and can be used in lieu of tower supports. Truss supports can be used for tubular spans up to 100' (30.48 m) between main support structures. Refer to Page 53 in this manual for more information on truss kits.

NOTE: It is recommended that the discharge outlets (drops) are supported in some manner.

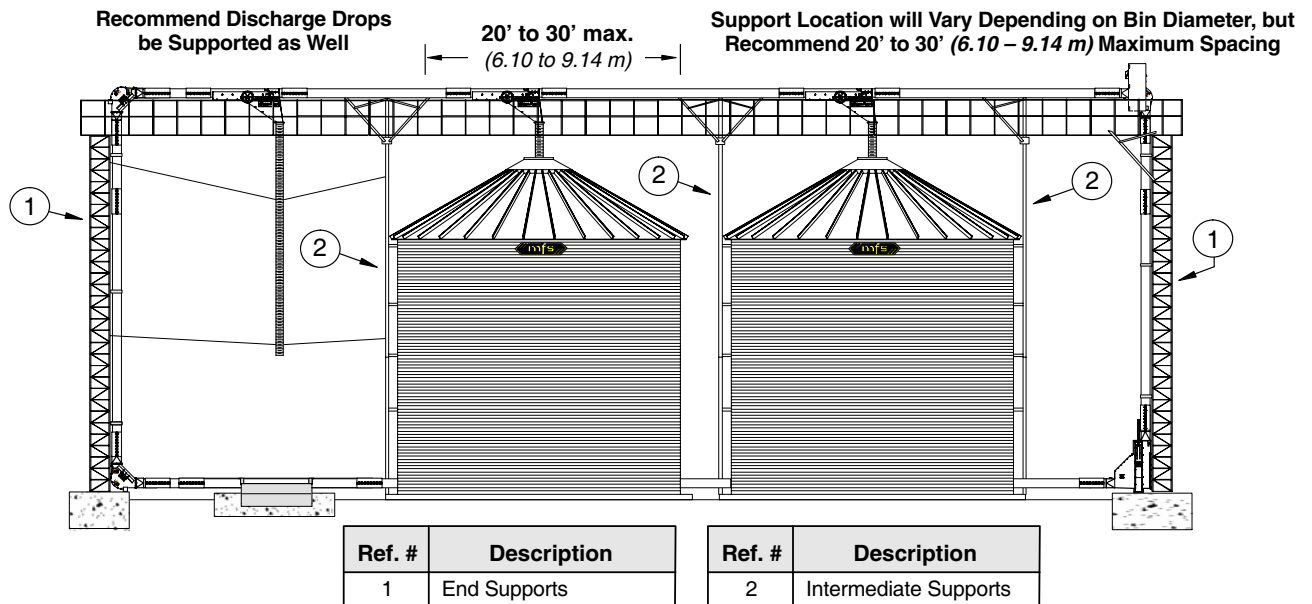

ASSEMBLY INSTRUCTIONS



ASSEMBLE & ERECT VERTICAL ENDS

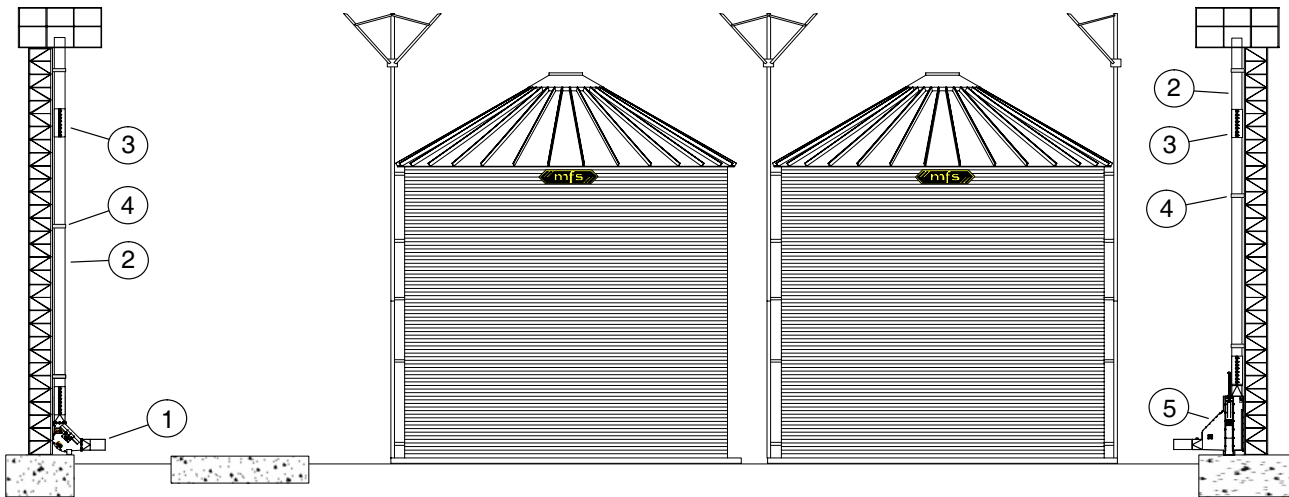


NOTE: Mechanical lift equipment is required to handle and position conveyor components.

1. Position lower corner and inspection corner in appropriate locations.
2. Install vertical tubes, connecting bands and tube supports. Tubes must be cut square with burrs removed and inner edge chamfered.


See Page 21 for reference number component identification.

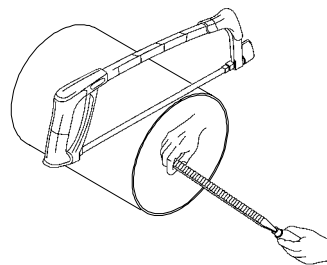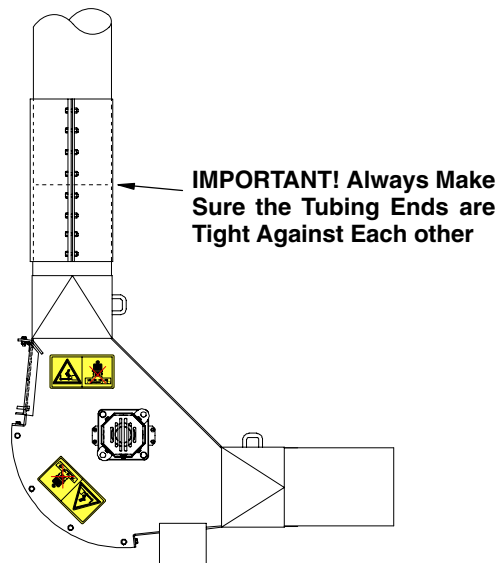

Tubes must be cut square, all burrs removed and inner edge chamfered.


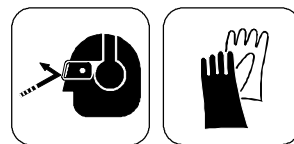


ASSEMBLE & ERECT VERTICAL ENDS (con't.)

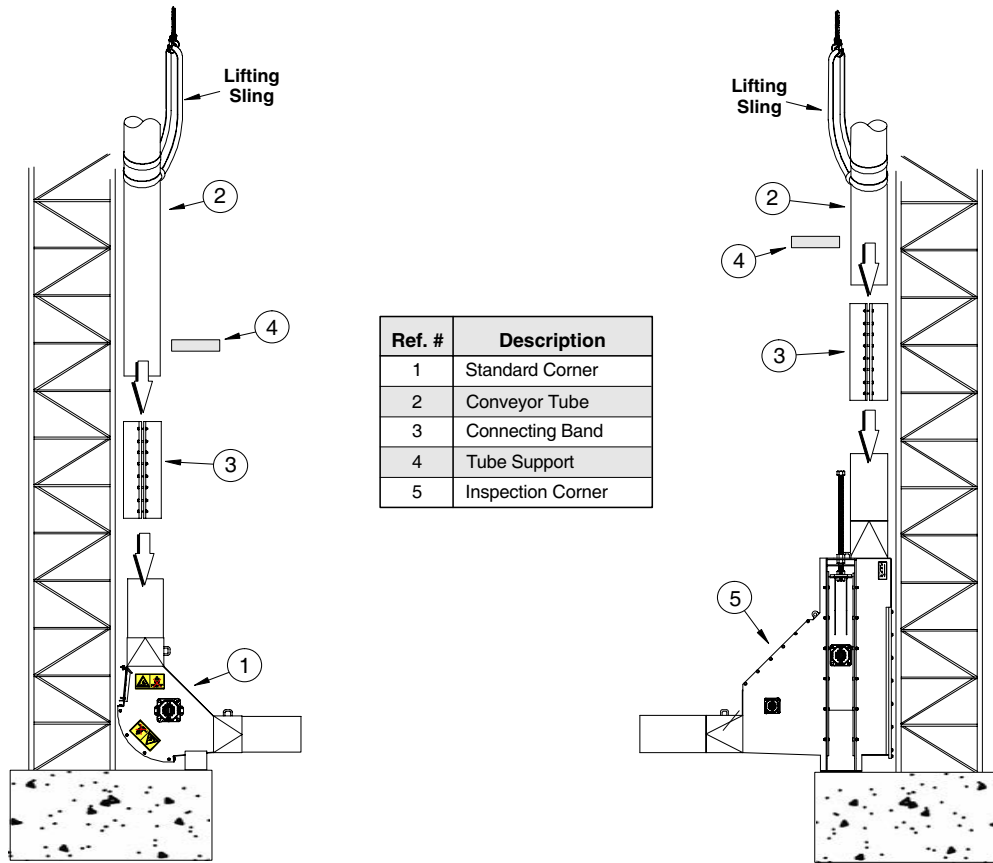

WARNING! Do Not attempt to lift the vertical sections when assembled. Tubes may slip out of the connecting bands and fall.



When Tightening Connecting Bands

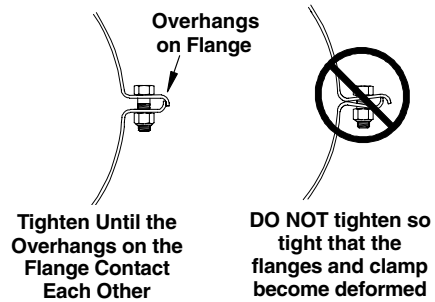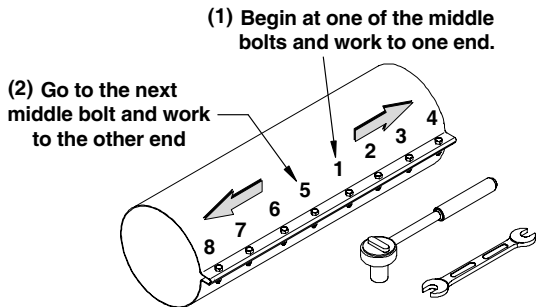


ASSEMBLY INSTRUCTIONS

INSTALL CHAIN & PADDLES

1. Use a nylon rope or similar object to help pull chain and paddles through tubing.
2. Install chain in sections with each tube and splice.
2. Connect chain sections together using connecting links provided.

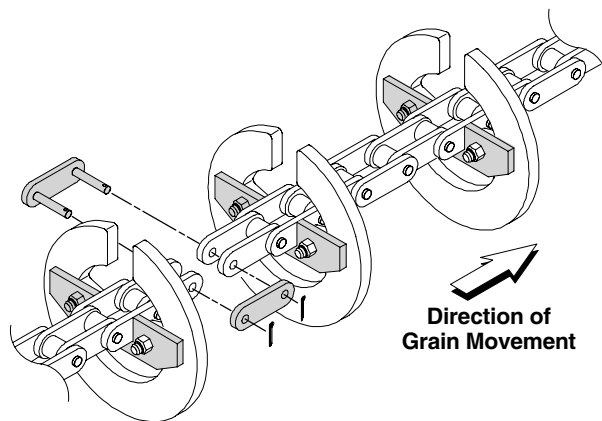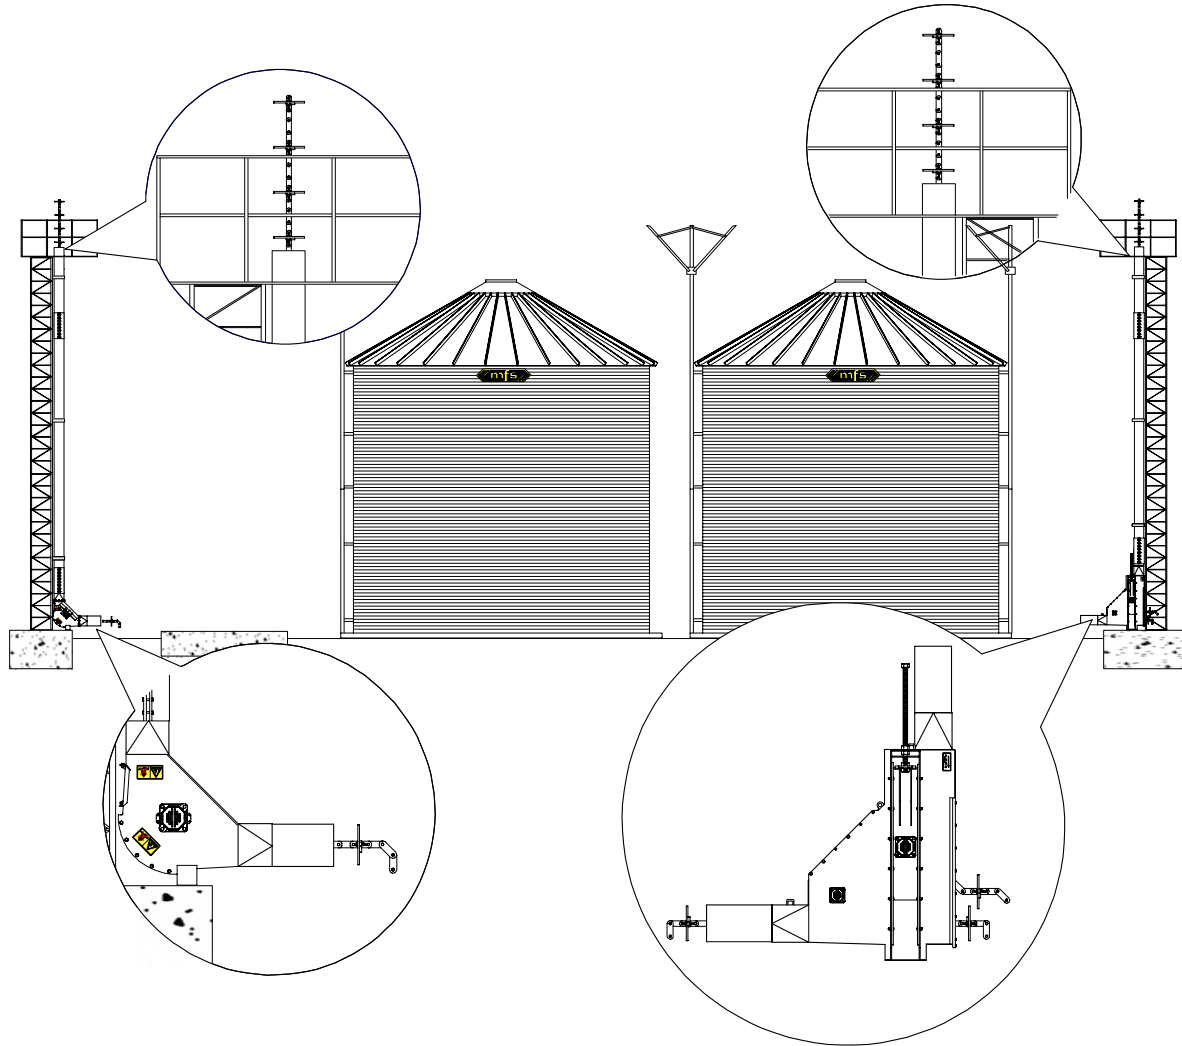

INSTALL LOWER HORIZONTAL SECTION

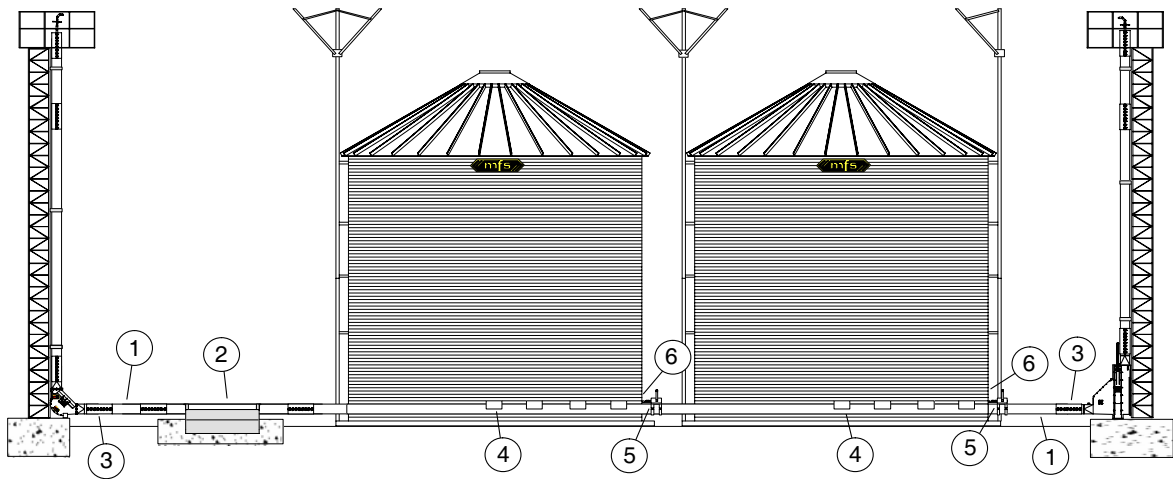

Ref. #	Description	Ref. #	Description
1	Conveyor Tube	4	Bin Wells
2	Dump Hopper	5	Rack & Pinion
3	Connecting Band	6	Bin Wall Flange

Bin Well Assembly


6", 8" & 10" Standard Bin Wells

Lay the sections of conveyor tubing in the bin according to your particular application (for example: will tubing be passing through the bin below a floor, or through a concrete trough under the bin). Whatever method is used, the tubing needs to pass exactly through the center of the bin.

If applicable, cut opening(s) in bin wall to allow tubing to pass through (there are bin flanges available for use on the outside of the bin). Use connecting bands to attach the tubing together.

Position the center bin well on top of the conveyor tube so the bin sweep mounting tube is in the exact center of the bin (See illustration below), **make sure the flow control gate is in a direction that can be pulled by the control rods.**

The illustration below shows the minimum spacing allowed from the center well to the intermediate well and from the intermediate wells in relation to each other.

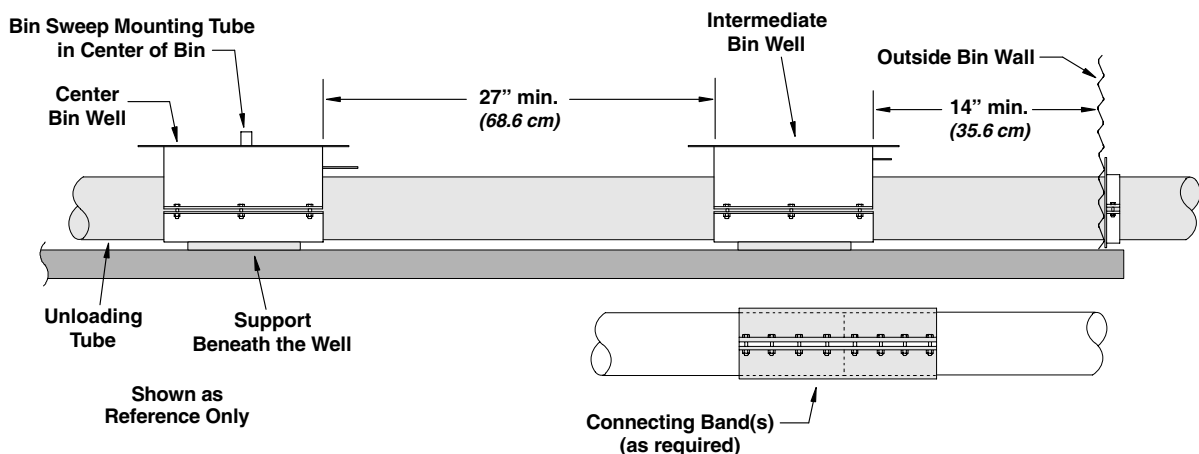

ASSEMBLY INSTRUCTIONS

Bin Well Assembly

6", 8" & 10" Standard Bin Wells (con't.)


The intermediate wells will be positioned between the center well and the bin wall.

Use the illustration and the chart below as a guideline for well spacing as determined by bin diameter, but keep in mind if a sweep tractor is to be used, you do not want the tractor to travel over the top of a well, so it may be necessary to position an intermediate well in a location other than the recommended spacing (if the well does have to be moved, keep it as close to the intended measurement as possible).

Also, note that it may be necessary to reposition an intermediate well from its intended position because of the location of the connecting band attaching the tubes together.

Bin Diameter	Number of Intermediate Wells	Distance from Center of Bin to Wall (A)	Distance Between Wells (B)	Length of Int. Well Control Pipe (C)	Length of Center Well Control Pipe (D)
14 – 15 ft (4.27 – 4.57 m)	1	7' – 7'-6" (2.13 – 2.29 m)	3'-9" (1.14 m)	5'-6" (1.68 m)	8'-4 1/2" (2.55 m)
17 – 19 ft (5.18 – 5.79 m)	1	8'-6" – 9'-6" (2.59 – 2.90 m)	4'-6" (1.37 m)	6'-3" (1.91 m)	9'-10" (3.00 m)
20 – 22 ft (6.10 – 6.71 m)	2	10'-11" (3.33 m)	3'-6" (1.07 m)	8'-9" (2.67 m)	11'-4" (3.45 m)
23 – 25 ft (7.01 – 7.62 m)	2	11'-6" – 12'-6" (3.51 – 3.81 m)	4'-0" (1.22 m)	9'-9" (2.97 m)	12'-10" (3.91 m)
26 – 28 ft (7.92 – 8.53 m)	2	13' – 14' (3.96 – 4.27 m)	4'-6" (1.37 m)	10'-9" (3.28 m)	14'-4" (4.37 m)
29 – 31 ft (8.84 – 9.45 m)	2	14'-6" – 15'-6" (4.42 – 4.72 m)	5'-0" (1.52 m)	11'-9" (3.58 m)	15'-10" (4.83 m)
33 ft (10.06 m)	3	16'-6" (5.03 m)	4'-2" (1.27 m)	14'-1 1/2" (4.31 m)	17'-4" (5.28 m)
36 ft (10.97 m)	3	18' (5.49 m)	4'-6" (1.37 m)	15'-3" (4.65 m)	18'-10" (5.74 m)
42 ft (12.80 m)	4	21' (6.40 m)	4'-3" (1.30 m)	18'-3" (5.56 m)	19'-4" & 2'-6" (5.89 m & 762 mm)
48 ft (14.63 m)	4	24' (7.32 m)	5'-2" (1.57 m)	18'-3" (5.56 m)	21' & 2'-6" (6.40 m & 762 mm)

Shown as Reference Only

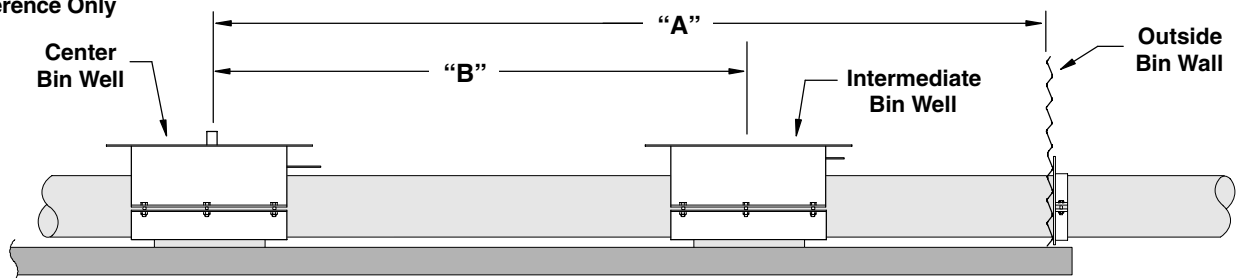


Bin Well Assembly


6", 8" & 10" Standard Bin Wells (con't.)

When well locations are determined on the conveyor tubing, cut an opening in the tube for each well. There should be about a minimum of 1/2" (13 mm) of tube left all around the inside of the well (See illustration below). Grain will leak if the opening is cut too large.

NOTE: DO NOT cut the tube openings when the chain and paddles are inside the tube. Damage to the chain and/or paddles can occur.

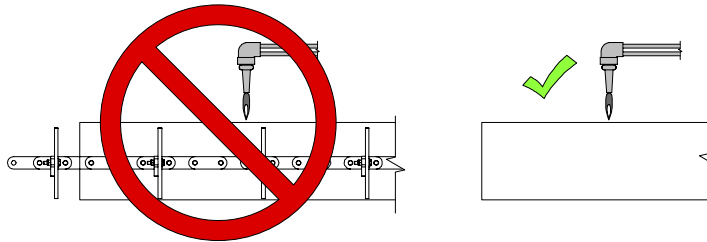

**Well Cut-Out
(Shown as Reference Only)**

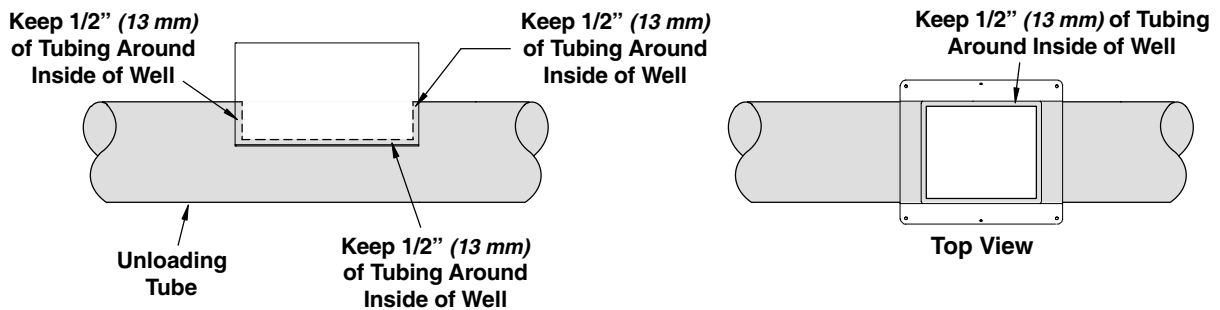

Secure the bin wells to the tubing using the back bands and hardware provided. Be sure the tops of the wells are level after they have been attached to the conveyor tube. Place suitable support beneath the wells to hold into position. **The supports used should be of a material that will not deteriorate, ie. brick, treated 2x4, etc.**

ASSEMBLY INSTRUCTIONS


Bin Well Assembly

6", 8" & 10" Standard Bin Wells (con't.)

An optional bin flange is available to help support the unload tube that extends out past the bin wall. The bin flange is attached to the outside bin wall. An extra set of bin flanges can also be used on the opposite bin wall that will not have the control pipes passing through, this not only helps support the unload tubing, but also allows for a better seal around the opening cut for the tubing. If used on the opposite bin wall, the holes for the control pipes do not need to be punched out.


To install the bin flanges: Position the upper and lower bin flange to the conveyor tubing on the outside of the bin wall. Knock out the appropriate hole(s) for the intermediate well(s) on the upper bin flange (See illustration below). Reposition the upper and lower flanges onto the unload tube. Using the flange as a template, mark and cut the holes for the control pipes and the four corner mounting holes [drill an 11/32" (9 mm) dia. hole for the four mounting holes].

After the holes have been cut/drilled, apply some type of sealing material in the gap(s) around the unload tube and bin wall. Attach the bin flanges and decal plate to the bin wall using four 5/16" x 1" bolts and non-lock nuts. Secure the bin flanges to the unload tube using four 5/16" x 1 1/2" bolts and non-lock nuts.

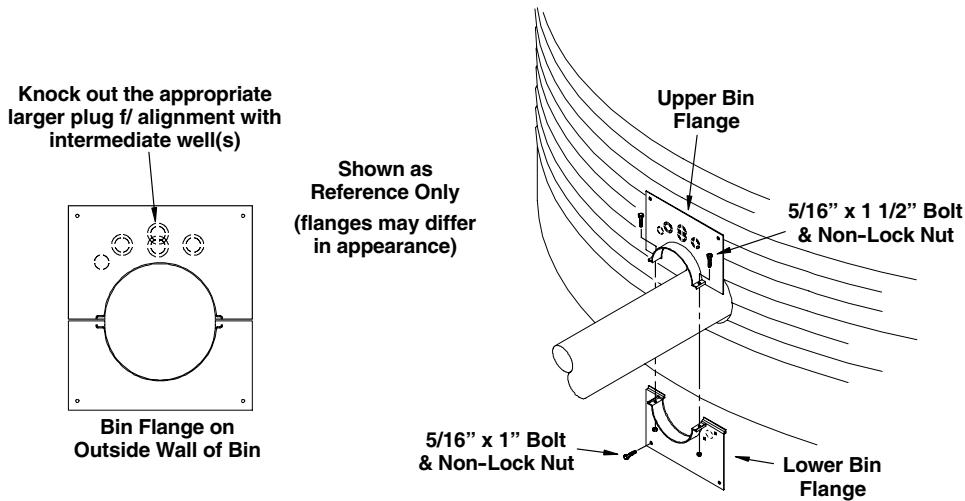

After the bin wells have been installed, the control pipes can be assembled and installed. The control pipes are installed to open and close the bin well gates. Depending on bin diameter, the number of wells will vary. The illustration below shows an example of how a bin with three intermediate wells may look like.

Three Intermediate Wells Shown as Reference Only

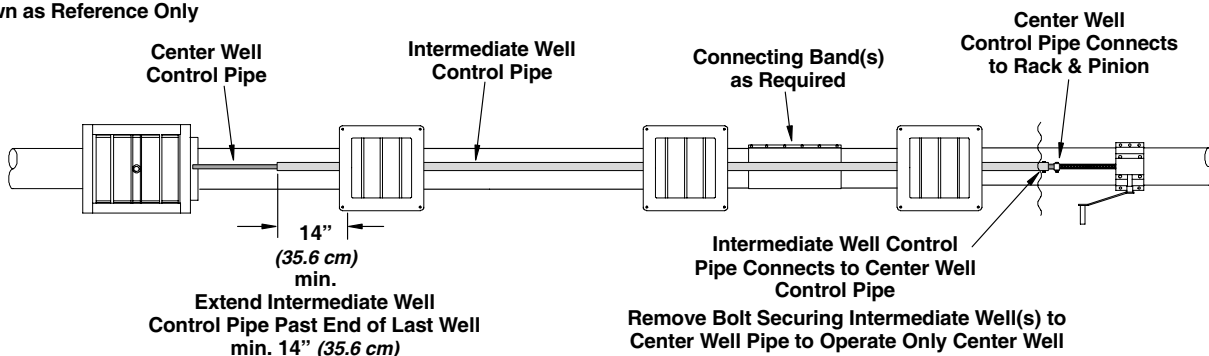


Bin Well Assembly

6", 8" & 10" Standard Bin Wells (con't.)

Install Control Pipes


Use the following illustration and chart for control pipe lengths as determined by bin diameter.

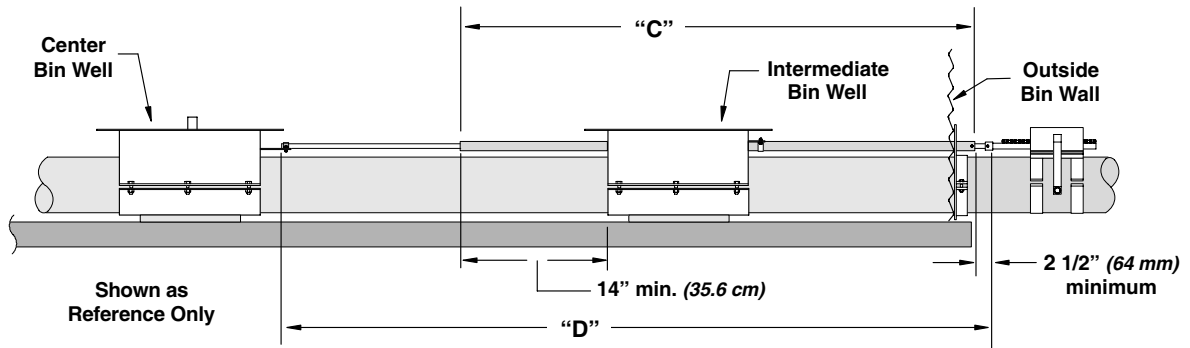

Reference "C" and "D" for control pipe lengths

Bin Diameter	Number of Intermediate Wells	Distance from Center of Bin to Wall (A)	Distance Between Wells (B)	Length of Int. Well Control Pipe (C)	Length of Center Well Control Pipe (D)
14 – 15 ft (4.27 – 4.57 m)	1	7' – 7'-6" (2.13 – 2.29 m)	3'-9" (1.14 m)	5'-6" (1.68 m)	8'-4 1/2" (2.55 m)
17 – 19 ft (5.18 – 5.79 m)	1	8'-6" – 9'-6" (2.59 – 2.90 m)	4'-6" (1.37 m)	6'-3" (1.91 m)	9'-10" (3.00 m)
20 – 22 ft (6.10 – 6.71 m)	2	10'-11" (3.33 m)	3'-6" (1.07 m)	8'-9" (2.67 m)	11'-4" (3.45 m)
23 – 25 ft (7.01 – 7.62 m)	2	11'-6" – 12'-6" (3.51 – 3.81 m)	4'-0" (1.22 m)	9'-9" (2.97 m)	12'-10" (3.91 m)
26 – 28 ft (7.92 – 8.53 m)	2	13' – 14' (3.96 – 4.27 m)	4'-6" (1.37 m)	10'-9" (3.28 m)	14'-4" (4.37 m)
29 – 31 ft (8.84 – 9.45 m)	2	14'-6" – 15'-6" (4.42 – 4.72 m)	5'-0" (1.52 m)	11'-9" (3.58 m)	15'-10" (4.83 m)
33 ft (10.06 m)	3	16'-6" (5.03 m)	4'-2" (1.27 m)	14'-1 1/2" (4.31 m)	17'-4" (5.28 m)
36 ft (10.97 m)	3	18' (5.49 m)	4'-6" (1.37 m)	15'-3" (4.65 m)	18'-10" (5.74 m)
42 ft (12.80 m)	4	21' (6.40 m)	4'-3" (1.30 m)	18'-3" (5.56 m)	19'-4" & 2'-6" (5.89 m & 762 mm)
48 ft (14.63 m)	4	24' (7.32 m)	5'-2" (1.57 m)	18'-3" (5.56 m)	21' & 2'-6" (6.40 m & 762 mm)

The intermediate wells will need to have the appropriate knock-out holes punched out for control pipe installation.

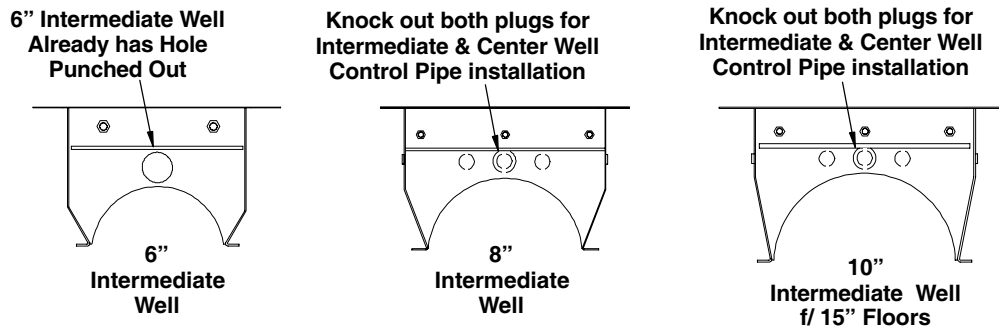

ASSEMBLY INSTRUCTIONS

Bin Well Assembly

6", 8" & 10" Standard Bin Wells (con't.)

Intermediate Well Control Pipe

1. Install the 1 3/8" dia. (1" sch.) control pipe so it passes through the outside bin wall and through all intermediate wells. Extend the control pipe a minimum of 14" (35.6 cm) past the end of the last intermediate well (this is so the pipe will not become pulled inside the well when the gate is being opened).
2. With all intermediate well gates closed, position a gate clamp below each well gate and mark the pipe where the dimple on the clamp would be located.


You may want to mark and drill all holes for the gate clamps at one time prior to assembly, this will allow the pipe to be slid back only one time for drilling the holes.

3. Drill a 3/8" (10 mm) hole through only one wall of the pipe at each of the marked locations (the dimple on the clamp will fit in this hole when it is bolted into place).
4. Once all holes have been drilled, reposition the control pipe. Place a spacer between the gate and control pipe, position the dimple on the clamp in the previously drilled hole and secure the pipe clamp to the gate using two 5/16" x 1" bolts, lock washers and non-lock nuts (See illustration below).

Continue securing any remaining gates to the control pipe until all gates have been attached.

5. Wells are furnished with a wiper belt at the front of each well to help prevent grain from leaking out of the well. Check that the wiper belt is contacting the top of the well gate. Adjust as necessary.

Two 5/16" x 3/4" bolts are installed on the back of the control gate to prevent the gate from accidentally being pulled out of the well. Check bolts to ensure they are installed securely

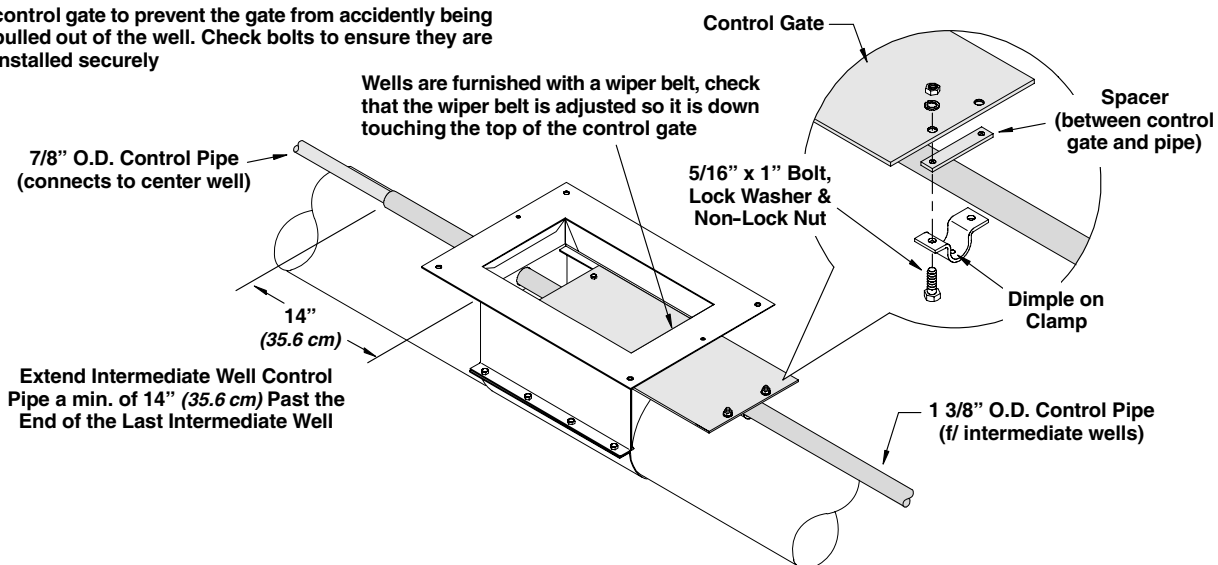

6. Check well gate operation by pulling the control pipe to open and close the gate(s). Gates should slide freely and should all close completely at the same time.

The intermediate well(s) are opened and closed with the rack and pinion control. A bolt will be inserted through the intermediate and center well control pipes at the rack and pinion connection. Intermediate wells should not be opened until all grain that can flow through the center well has been stopped flowing. When grain flow through the center well has stopped, leave the center well gate open and gradually open intermediate well gates to desired flow [3" to 6" (7.6 to 15.2 cm) is usually sufficient].

Do Not open intermediate well(s) until all flow has stopped through the center well. Plugging of the conveyor and excessive stress to the bin walls can occur, thus creating dangerous situations and possible damage to the conveyor system.

Note: There are two 5/16 x 3/4" bolts at the back side of the well gates. These are installed to prevent the gate from accidentally being pulled out of the well. Ensure these bolts are tight.

Bin Well Assembly

6", 8" & 10" Standard Bin Wells (con't.)

Center Well Control Pipe

Some sections of the 7/8" O.D. (1/2" sch.) control pipes will have a 3/8" (10 mm) dia. hole pre-drilled in one end. This control pipe is typically used for the center well gate. In applications where more than one length (section) of pipe is used, a threaded connector will be used to attach the control pipe sections together (some control pipes may have both ends already tapped).


1. Insert the center well control pipe through the larger intermediate well pipe (the center well pipe may have one end already drilled, position this end towards the center well). If more than one length of pipe is used, assemble the lengths with the threaded connectors as they are being slid into the larger pipe.
2. Position the pre-drilled end of the control pipe onto the top side of gate and align the clamp with the mounting holes in the gate.
3. Place the clamp into position aligning the slots in the clamp with the predrilled hole in the pipe (if necessary, drill a 3/8" (10 mm) dia. hole as shown in the illustration below. Insert the 5/16" x 1 3/4" roll pin through the clamp and hole in the control pipe so there is an equal amount of the roll pin extending past the sides of the clamp.
4. Secure the clamp to the gate using two 5/16" x 3/4" carriage bolts, flat washers, lock washers and non-lock nuts (insert bolts from the bottom side of the gate (See illustration below). The mounting hardware will be used to keep the roll pin in place.
5. Wells are furnished with a wiper belt at the front of each well to help prevent grain from leaking out of the well. Check that the wiper belt is contacting the top of the well gate. Adjust as necessary.
6. Check well gate operation by pulling the control pipe to open and close the gate. Gate should slide freely and should close completely.

The center well gate is opened and closed with the rack and pinion control. A bolt will be inserted through the center well control pipe at the rack and pinion connection. When unloading the bin or storage structure, start unload conveyor and open center well gradually until desired flow is obtained [3" to 6" (7.6 to 15.2 cm) is usually sufficient].

When grain flow through the center well has stopped, leave the center well gate open and gradually open intermediate well gates to desired flow [3" to 6" (7.6 to 15.2 cm) is usually sufficient].

Note: There are two 5/16 x 3/4" bolts at the back side of the well gates. These are installed to prevent the gate from accidentally being pulled out of the well. Ensure these bolts are tight.

Though most control pipes are predrilled and tapped, it may be necessary to drill a hole in the control pipe for insertion of roll pin. If so, drill a 3/8" (10 mm) dia. hole in center of pipe and locate it 5/8" (16 mm) from end of pipe.

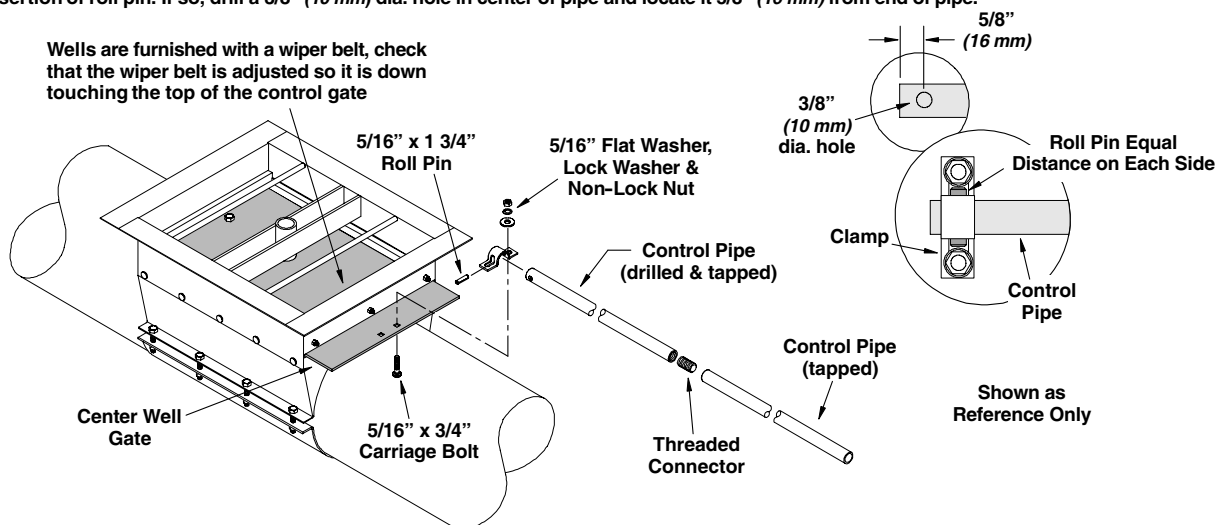

A 5/16" x 3/4" bolt is installed on the back of the control gate to prevent the gate from accidentally being pulled out of the well. Check bolt to ensure it is installed securely

ASSEMBLY INSTRUCTIONS

Bin Well Assembly

6", 8" & 10" Standard Bin Wells (con't.)

Rack & Pinion Connection

It may be necessary to assemble the rack & pinion controller. Use the assembly instructions that are included with the rack & pinion kit for proper assembly procedures.

1. Make sure all bin wells are completely closed. Temporarily position the rack & pinion control at the desired location on the unload tube outside the bin wall. Rotate the handle on the rack & pinion control so that the pinion shaft is in the full forward position (reposition the controller, if necessary, so the control pipe lengths will be able to be connected to the controller.).

Note: It may be necessary to cut-off the intermediate and/or the center well control pipes to proper length to fit the location of the rack & pinion control. It may also be necessary to drill a 3/8" (10 mm) hole through the control pipes for proper gate operation.



2. Begin by connecting the center well control pipe to the rack & pinion. Some center well control pipes may already have a hole drilled through this end and are of the correct length. If it is necessary to drill a hole through the control pipe, use the hole in the rack & pinion shaft as a template and drill a 3/8" (10 mm) hole through the control pipe.

Secure the center well control pipe to the rack & pinion shaft using one 3/8" x 1 1/2" roll pin.


3. Position the intermediate well control pipe a minimum of 2 1/2" (64 mm) from the end of the rack & pinion shaft. Drill a 3/8" (10 mm) hole through both control pipes. Secure the intermediate well control pipe to the center well control pipe using one 5/16" x 2 1/2" bolt and nylon locknut (See illustration below).

4. Check for proper operation of the rack & pinion. **When the bolt connecting the intermediate well control pipe is inserted**, the center well **and** the intermediate well gates will all open. Pull rack & pinion handle back to ensure all well gates are open, adjust rack & pinion location if needed so all gates are opening properly.

To open only the center well gate, remove the bolt securing the intermediate well(s) control pipe to the center well control pipe. Rotate handle to open center well gate.

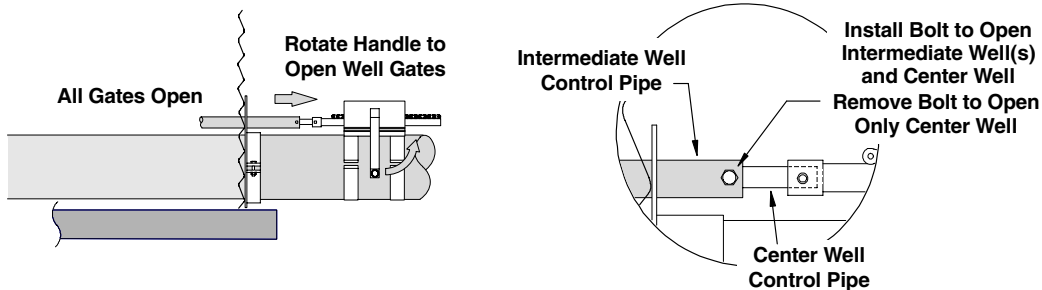
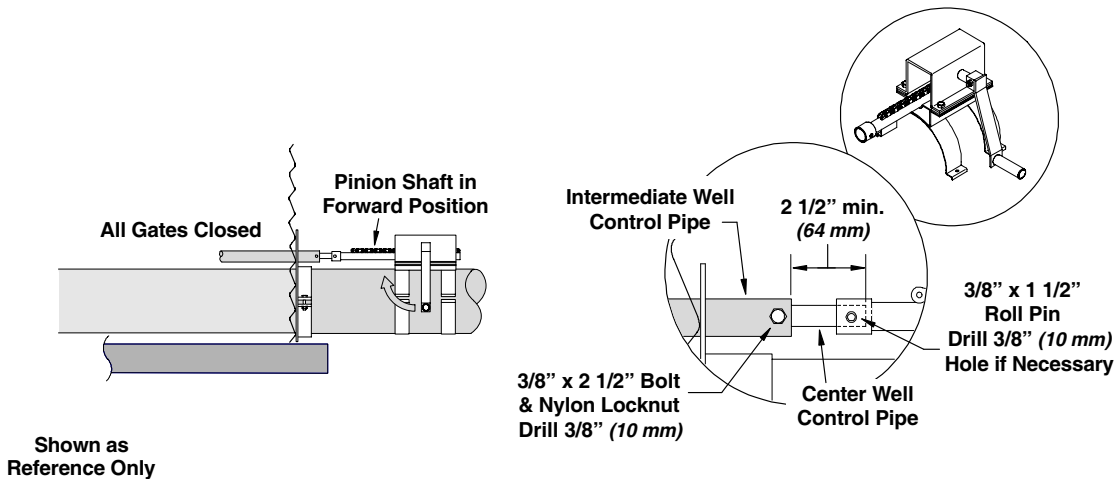


INSTALL UPPER CORNERS

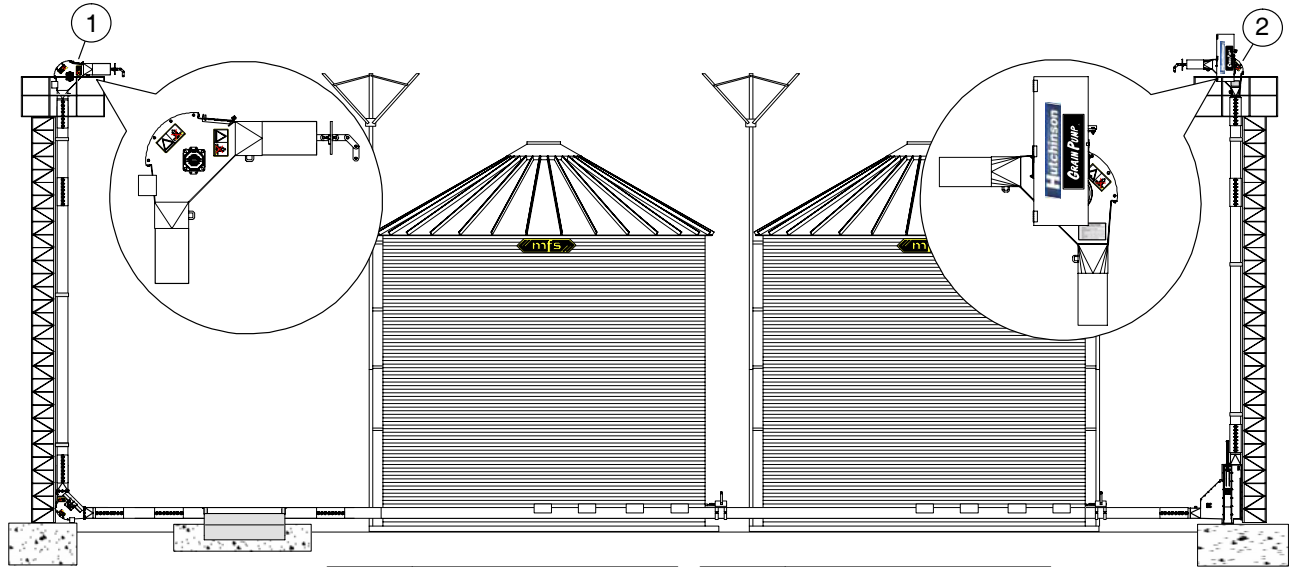

Ref. #	Description
1	Standard Corner



Ref. #	Description
2	Drive Corner

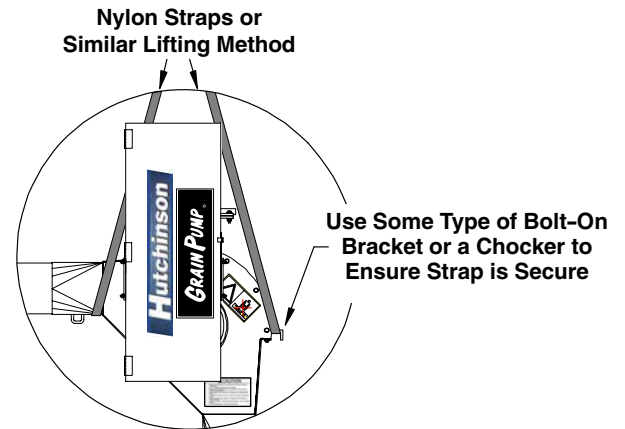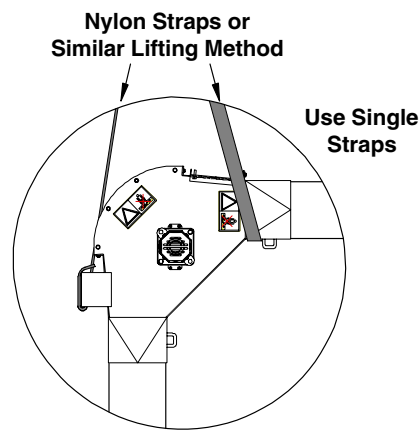

1. Install the upper corners to the vertical sections.
2. Route chain around corner sprockets and continue assembly with the horizontal sections.

ASSEMBLY INSTRUCTIONS


INSTALL UPPER HORIZONTAL SECTIONS

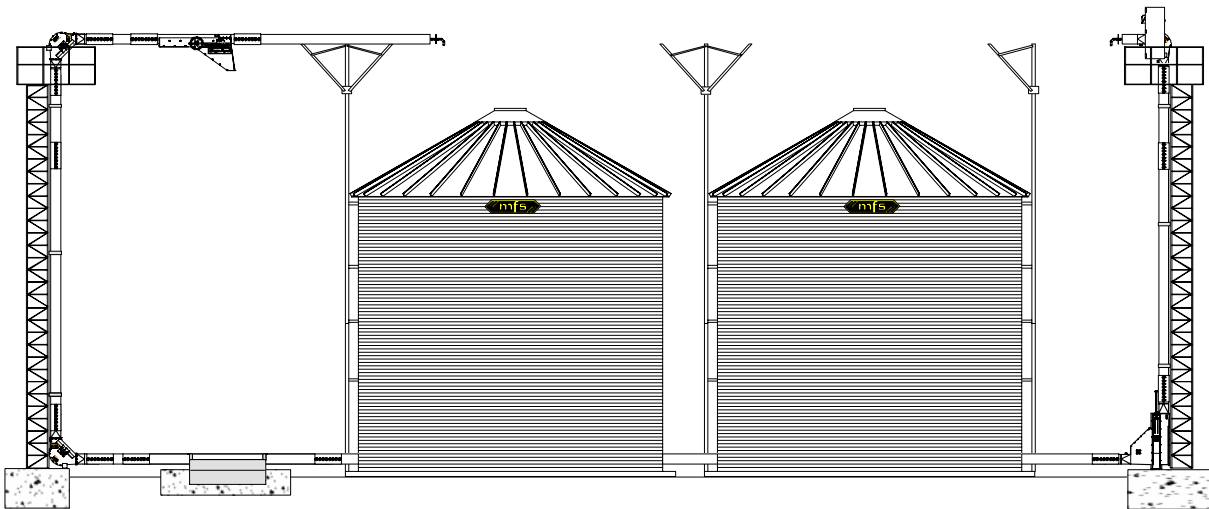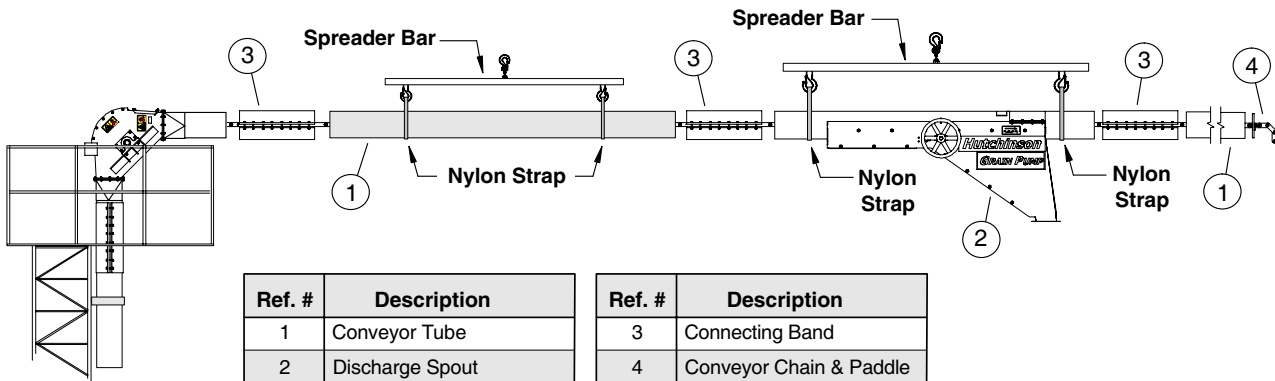

Lay the upper horizontal sections out on the ground first to get accurate dimensions for the entire span.



Use a spreader bar or similar device to assist with safely lifting the conveyor tubes and discharge spouts into place.

1. Raise and position the upper horizontal assembly section-by-section, ensuring the chain does not get twisted or kinked and the conveyor tubes butt together perfectly.
2. Join the conveyor tubes and discharge spouts together using the provided connecting bands.

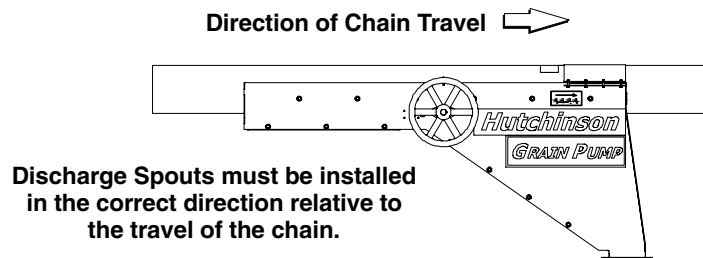


INSTALL UPPER HORIZONTAL SECTIONS (con't.)

Continue assembly of the horizontal sections whilst securing conveyor tubes to the horizontal supports.

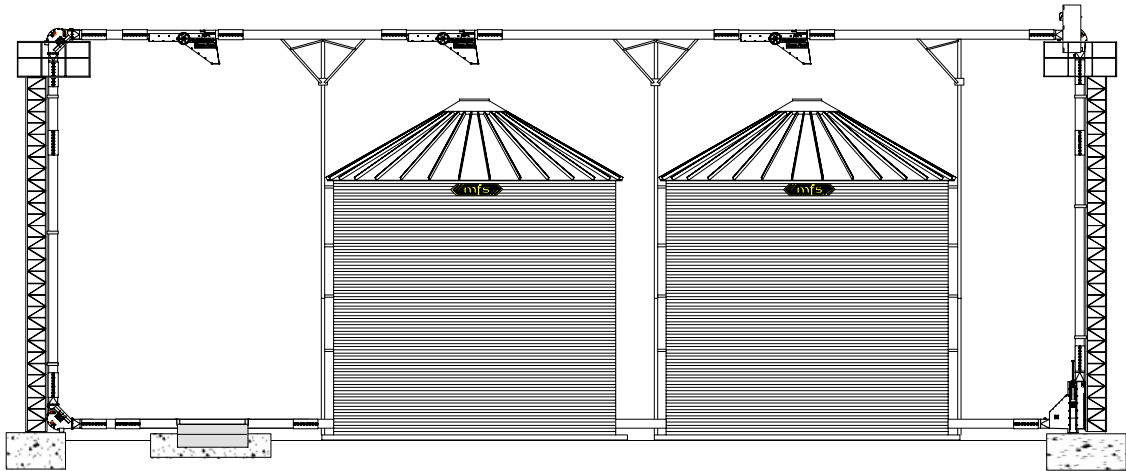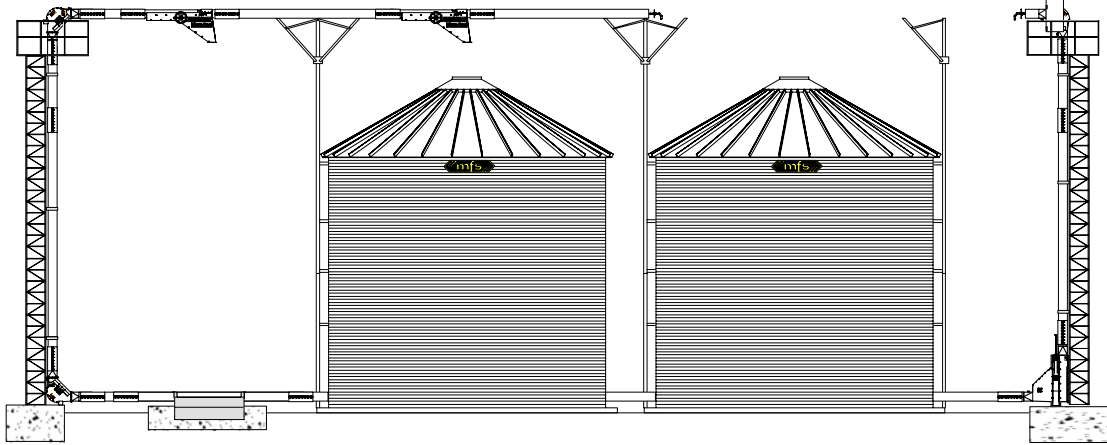


Install outlet spouts.

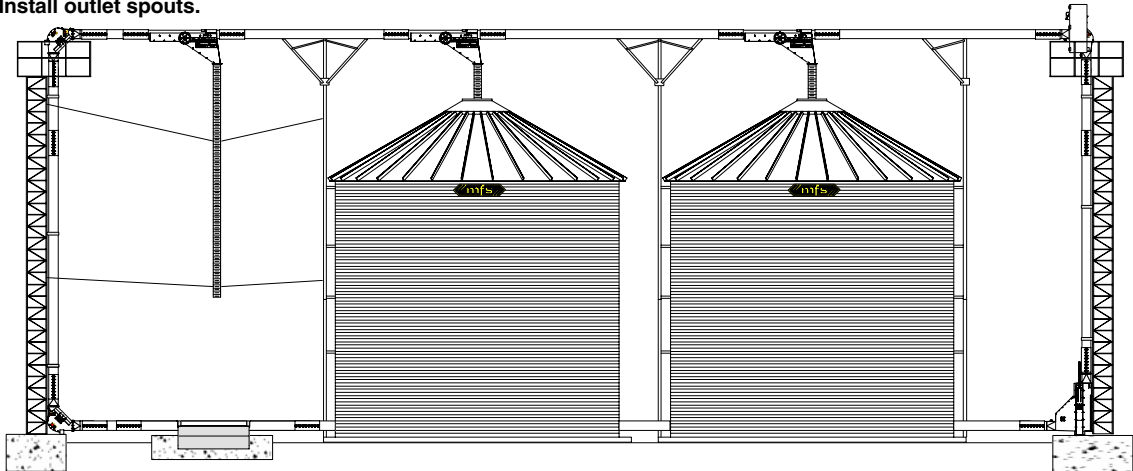




WARNING! When open, discharge gates expose the chain and paddles. To reduce the risk from these parts when moving, the outlet must be directly connected to the bin inlet, additional handling equipment, or be fitted with a discharge tube longer than 20 inches (500 mm).

ASSEMBLY INSTRUCTIONS

CONNECT and TENSION CHAIN MANUAL TAKE-UP CORNER

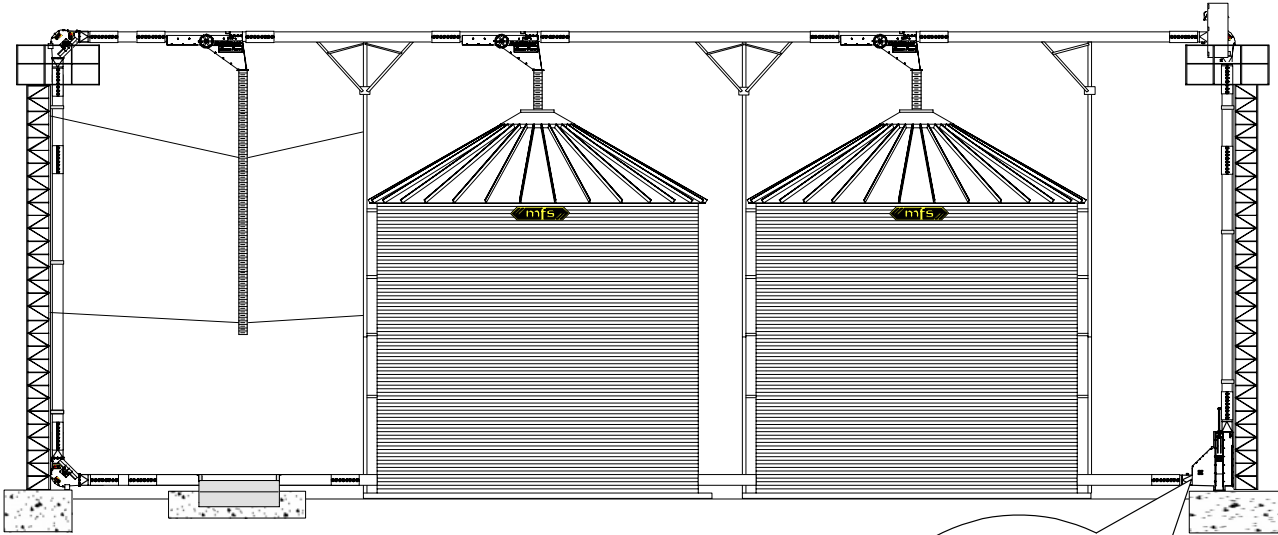

1. Remove links from chain to adjust final length.
2. Connect chain with connecting links provided.
3. Lower sprocket slide weldment to apply tension.
To check chain tension, grasp one of the paddles and attempt to rotate it towards the chain. Proper tension should allow only minimal movement.

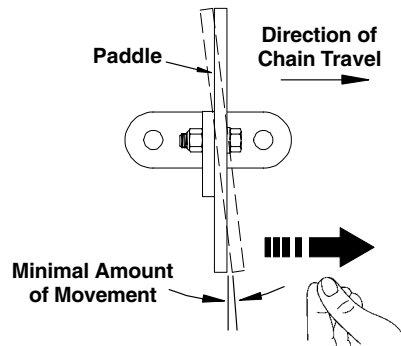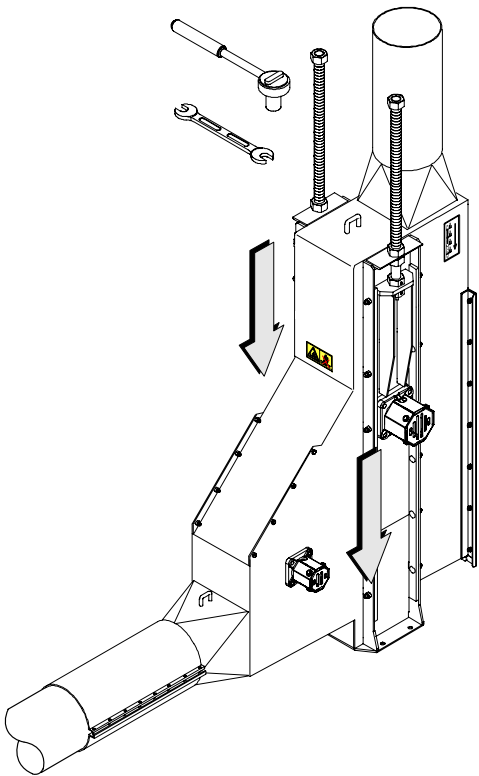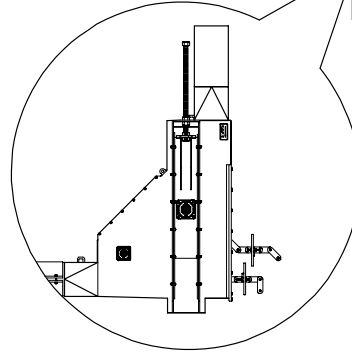

CONNECT and TENSION CHAIN AUTO TAKE-UP CORNER

After the location for the corner assembly has been determined, attach the upper and lower tubing sections to the conveyor tube system and secure using the connecting bands provided.

1. Install the winch onto the mounting bracket located on the inside face of the corner assembly. Secure the winch using three 3/8" x 1" bolts and nylon locknuts. Attach the winch handle to the winch.
2. Mount the weights onto the auto take-up carriage. Place a single weight on one side, then another weight on the opposite side. Repeat until all eight weights have been placed onto the auto take-up carriage. To keep the weights from sliding off, install a 3/8" x 1-1/2" bolt and nylon locknut onto each end of the take-up carriage.
3. Assemble the pulley using the provided pulley wheel, side plates, bushing and 1/2" x 2" bolt and nylon locknut. Hang the pulley assembly from the pulley bracket mounting tabs and secure using one 1/2" x 2-1/2" bolt and nylon locknut.
4. Fasten the pulley bracket w/pulley onto the vertical tube above the auto take-up weights, as shown below. Position the pulley bracket approximately 34" (86.4 cm) above the top of the corner, and using one halfband and six 3/8" x 1-1/2" bolts and non-lock nuts, secure the pulley bracket to the tube. (Make sure the pulley hangs directly above the large hole centered between the two sides of the auto take-up carriage).

5. Attach the lift cable to the winch drum as shown below. Wind the cable onto the drum such that the cable wraps around the drum three times. (The cable should wrap from the bottom of the drum when the handle is turned in a clockwise direction).



String the loose end of the cable up and through the pulley previously installed above the take-up carriage. Attach the cable hook to the cable and leave a little slack in the cable.

Secure the ends of the cable using the two cable clamps provided. (Make sure the u-bolt portion of the clamps are against the loose end of the cable).

IMPORTANT! When the weights and take-up carriage are in the full down position, there needs to be some slack in the cable. This allows the chain tension sprocket to provide proper pressure on the chain.

6. Operate the winch and check to see that the take-up carriage travels through its entire range of travel (when the take-up carriage is in its full raised position, the lockout pin will be inserted through the slide plates to support the carriage when servicing the unit is required).

When lowered to its full down position, there needs to be some slack in the cable.

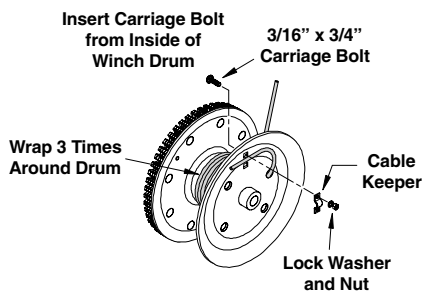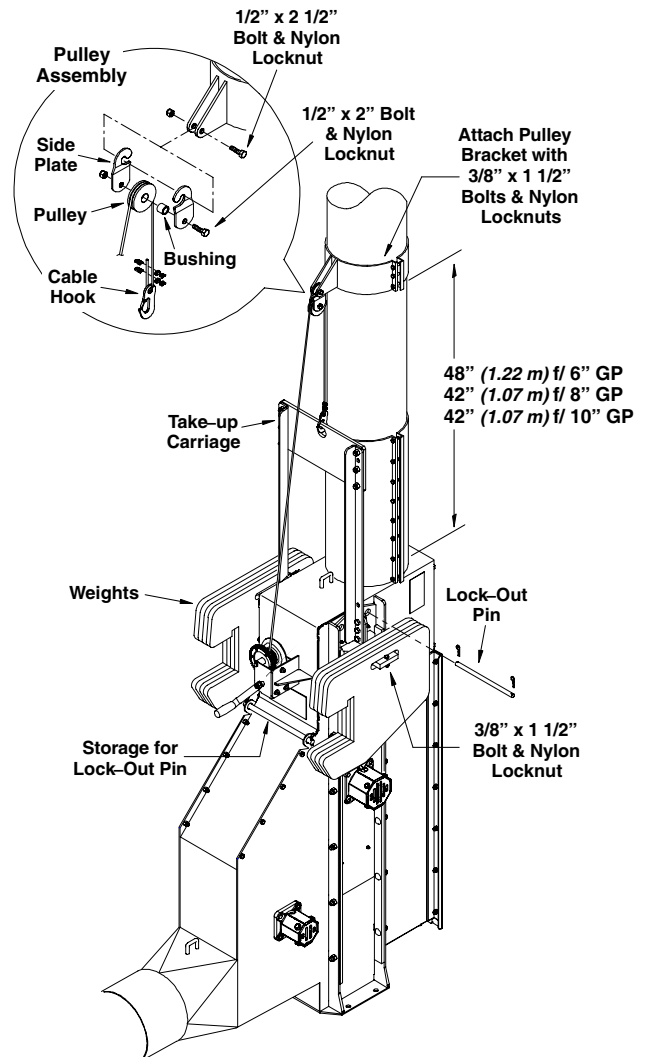


ASSEMBLY INSTRUCTIONS

DRIVE CORNER MOTOR INSTALLATION



WARNING! Whenever you must service or adjust the equipment, make sure to stop the motor and lock-out the power source.
 A main disconnect switch capable of being locked in only the “Off” position shall be used. This shall be locked whenever work is being done to the conveyor.

1. Install the motor onto the motor mount plate.
2. Install motor sheave and bushing and align sheave with driven sheave by placing a straight edge on the outer face of the sheaves. Ensure drive key is in place and secure into place.
3. Install belts onto the sheaves and set belt tension [approx. 1/2” (13 mm) of deflection when belts are firmly pressed in the center of the span between the two sheaves].
4. Check that all fasteners are tightly secured. Close belt guard door.

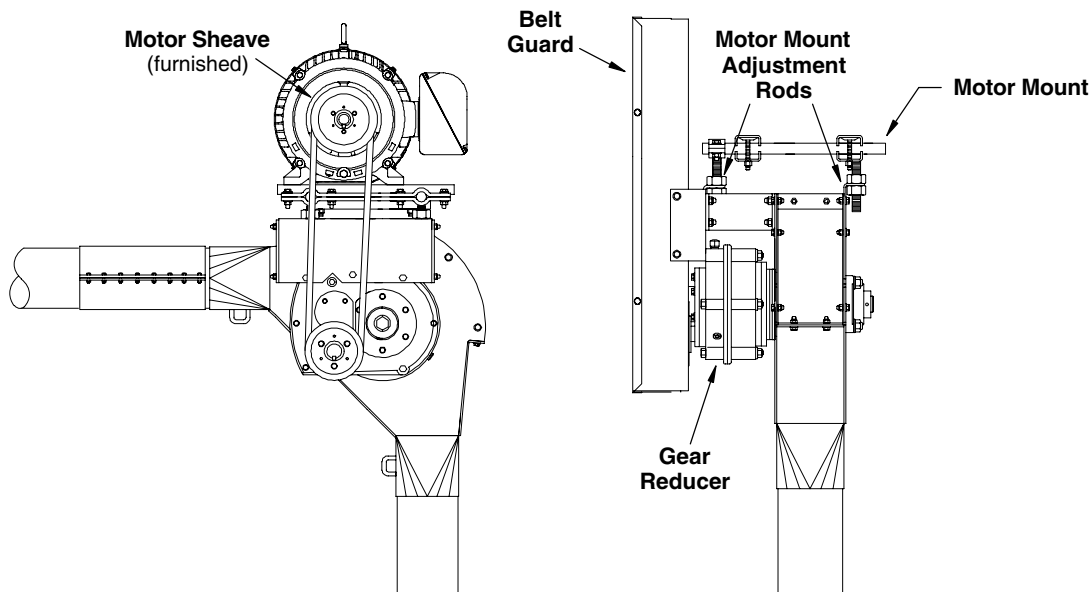

Unit Size	6"	8"	10"
Recommended Chain Speed	325 FPM (99.06 MPM)	325 FPM (99.06 MPM)	325 FPM (99.06 MPM)
Corner Shaft RPM	124 RPM	109 RPM	94 RPM

IMPORTANT! The gear reducer is shipped without oil. It is necessary to add oil before unit operation.

Refer to the “Lubrication & Maintenance” section in this manual for proper type and quantity of oil. Also, refer to the instructions that are shipped with the reducer.

DISCHARGE SPOUT with CABLE GROUND CONTROL GATES



CAUTION! Metal parts may have sharp edges and can create flying debris when filed, cut or drilled. Use proper safety equipment such as gloves, eye protection and hearing protection when working with metal materials.



Use caution when working in areas above the ground. Use fall protection equipment and follow applicable OSHA guidelines and regulations.



Metal buildings, scaffolding and other types of work surfaces can become slippery, especially when surfaces are wet and/or oily. This can create hazardous working conditions. Use caution when working, climbing or walking on these surfaces.

The location of the discharge controls and routing of the control cables (or ropes) should have been determined before ordering the Grain Pump® Loop System.

The discharge gate controls must be located in line with the conveyor tube so the control cable, or rope will track properly on the control wheels.


The cable, or rope should be one continuous length. If splicing is necessary, splice the ends together with cable clamps. Plan where the splice(s) in the control cable, or rope are to be located. Avoid splicing where the splice will be pulled onto a control wheel or through a pulley while the gate is being opened or closed.

The wall brackets are designed to be mounted directly to the grain bin wall. Locate the control wheel about 5' off the ground (or at a height that is easy and convenient to reach). Locate the upper wall bracket (with pulleys) at the top of the bin wall so the control cable, or rope will clear the eave of the roof or other hanging structures.


The ground control wheel can be mounted to the same bin that the discharge spout is attached to (See Example 1), or the ground control wheel can be mounted to an adjacent bin (Example 2).

Refer to the following page, Page 38, for assembly procedures of the wall brackets, pulleys and cable control wheels.

The control cable, or rope must be anchored to both the upper and lower wheels to provide positive control and to prevent the cable or rope, from slipping on the control wheels.

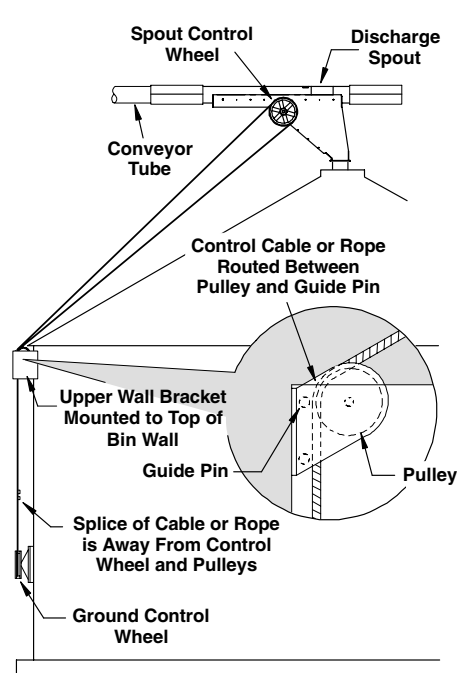

Example 1
Controls Mounted on Bin
Where Spout is Located
(pulley mounted on inside of bracket)

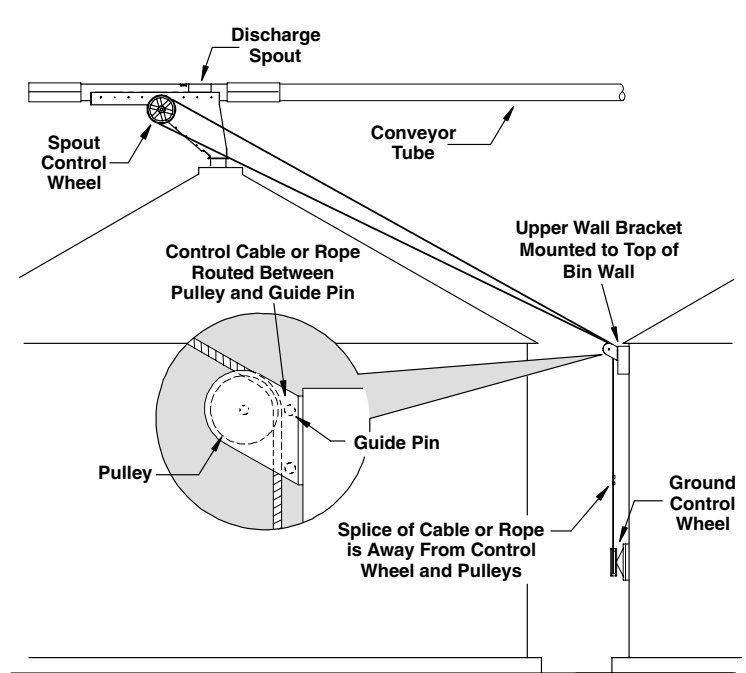


Example 2
Controls Mounted
on Adjacent Bin
(pulley mounted on outside of bracket)

ASSEMBLY INSTRUCTIONS


DISCHARGE SPOUT with CABLE GROUND CONTROL GATES (con't.)

The upper wall bracket and the ground control wall plate are designed to be mounted directly to the grain bin wall. Use the existing hardware from bin wall to fasten the bracket and plate to the bin.

1. Attach the two pulleys to the upper wall bracket using four (4) 1/4" x 3/4" bolts and nylon locknuts for each pulley. **Note: Mount the pulleys so both of them are either on the inside or on the outside of the wall bracket.**
 - A. If the controls are mounted on the same bin that the discharge spout is attached to, mount the pulleys on the inside of the wall bracket (See Example 1 on Page 37 and illustration below).
 - B. If the controls are mounted to an adjacent bin, mount the pulleys on the outside of the wall bracket (See Example 2 on Page 37 and the illustration below).
2. Locate the wall bracket and pulleys so they are in line with the discharge spout control wheel (this will allow the cable, or rope to properly track onto the spout control wheel). Attach the wall bracket to the top of the bin wall in a position that allows the cable, or rope to clear the eave of the bin.

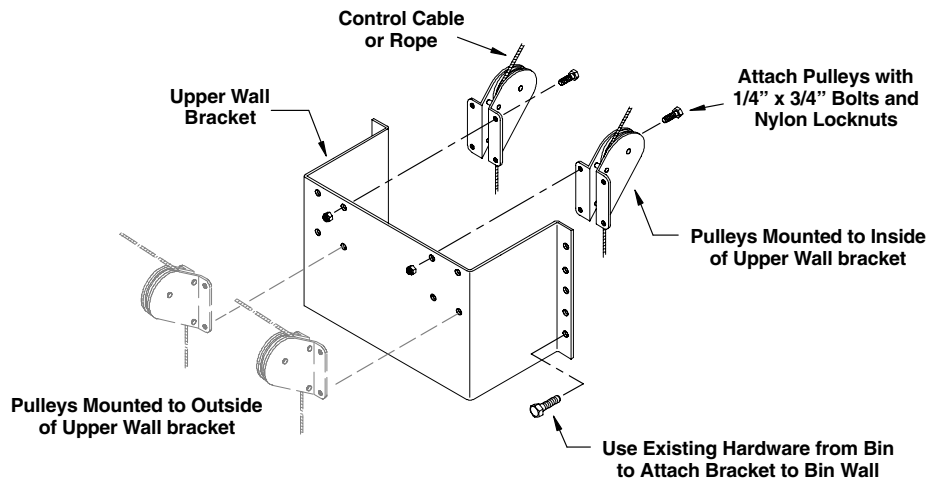

3. Attach each wall plate to the wheel bracket as shown below. Secure the brackets using two (2) 3/8" x 1" bolts, four (4) flat washers, and two (2) nylon locknuts (be sure to use a flat washer over each slot). Slide the wheel bracket up so the bolts are at the bottom of the wheel bracket slots, but at the top of the wall plate slots.
4. Determine the location of the ground control wheel and attach the wall plates to the bin wall (use the existing hardware from the bin to mount the plates).
5. Slide a 1" flat washer over the shaft on the wheel bracket and install the control wheel. Slide another 1" flat washer onto the shaft and secure using a 3/16" x 1 3/4" cotter pin.

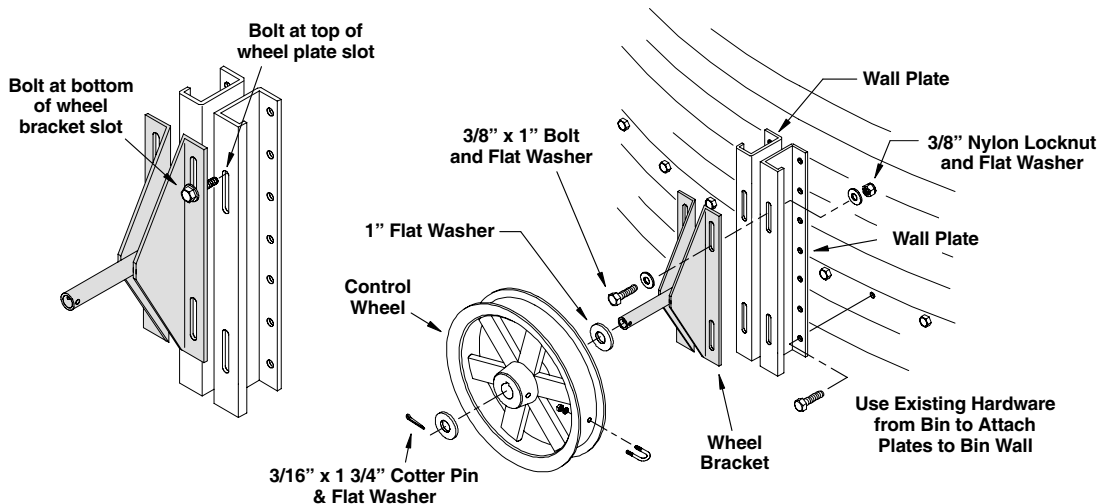

DISCHARGE SPOUT with CHAIN GROUND CONTROL GATES



CAUTION! Metal parts may have sharp edges and can create flying debris when filed, cut or drilled. Use proper safety equipment such as gloves, eye protection and hearing protection when working with metal materials.



Use caution when working in areas above the ground. Persons working on equipment that requires above ground work shall be properly secured with the use of “fall protection” equipment as set forth by OSHA guidelines and regulations.



Metal buildings, scaffolding and other types of work surfaces can become slippery, especially when surfaces are wet and/or oily. This can create hazardous working conditions. Use caution when climbing, walking or working on these of surfaces.

The location of the discharge controls and routing of the control chains should have been determined before ordering the Grain Pump® Loop System.

The discharge gate controls must be located in-line with the conveyor tube so that the control chain will track properly on the control sprockets.

The chain should be one continuous length having only one splice. Plan where the splice(s) in the chain will be located (**the splice needs to be located so it cannot be pulled onto the sprocket wheel.**)


Although a chain is furnished with the kit, it does not mean the length provided will be long enough for your application. If additional chain is needed and requires more than one splice, make sure to locate the additional splice in the same manner.

The upper wall bracket and the ground control wall plate were designed to be mounted directly to the grain bin wall. Use the existing hardware from the bin wall to attach the bracket and plate to the bin.


The lower chain mount can be mounted to the same bin that the discharge spout is attached to, or it can be mounted to an adjacent bin (See Examples 3 & 4 below). Whichever method is used, both rollers need to be mounted either on the inside or on the outside of the wall bracket.

Locate the lower chain mount about 2' to 3' (61.0 cm to 61.4 cm) off the ground (or at a height that is easy and convenient in order to reach the chain above the lower chain mount).

Locate the upper wall bracket (with rollers) at the top of the bin wall so the control chain will clear the eave of the roof or other hanging structures.

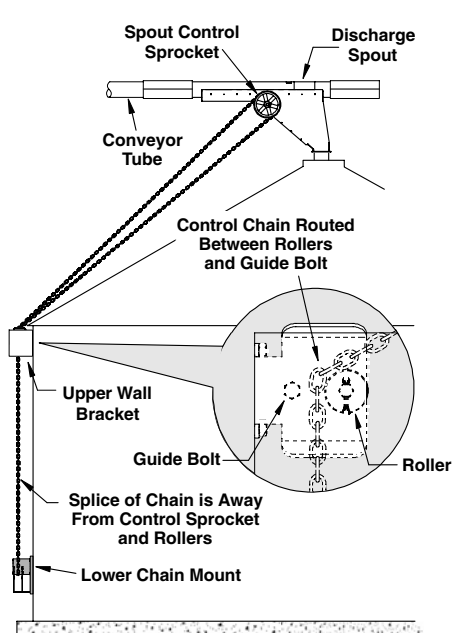

Example 3
Controls Mounted on Bin
Where Spout is Located
(rollers mounted on inside of bracket)

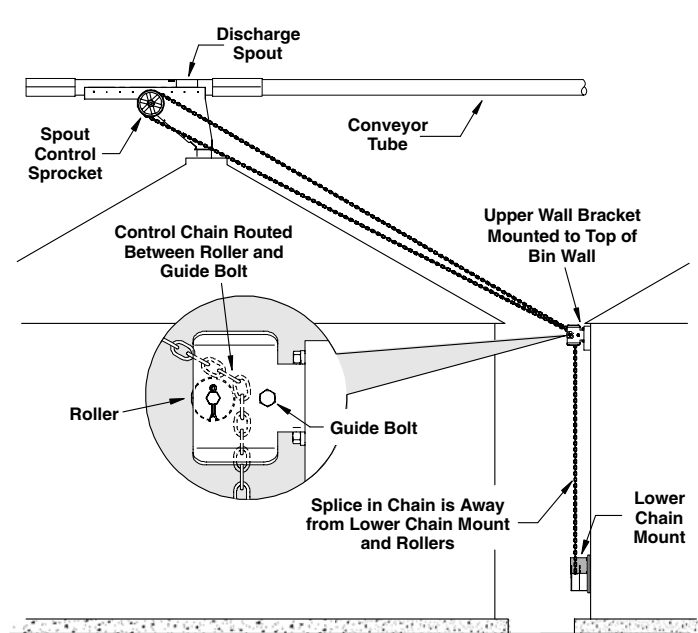

Example 4
Controls Mounted
on Adjacent Bin
(rollers mounted on outside of bracket)


ASSEMBLY INSTRUCTIONS

DISCHARGE SPOUT with CHAIN


GROUND CONTROL GATES (con't.)

Install Chain Ground Control Components

1. Install the spout control sprocket onto spout shaft as shown below. Install the bushing onto the shaft using the 1/4" sq. x 3" long key and tighten setscrews to secure bushing to shaft. Attach the sprocket to the bushing using the bolts provided with the sprocket.

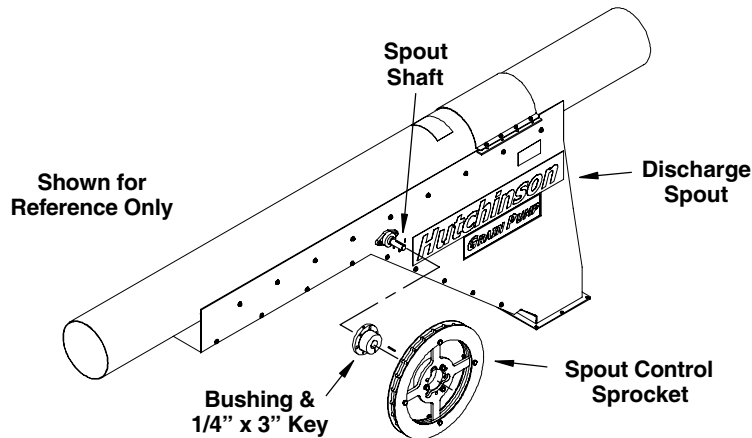


2. Attach the two rollers to the upper wall bracket using four (4) 3/8" x 1" bolts and nylon locknuts for each pulley (See illustration below).
 - If the controls are mounted on the same bin that the discharge spout is attached to, mount the pulleys on the inside of the wall bracket as shown in Example 3 on Page 39.
 - If the controls are mounted to an adjacent bin, mount the pulleys on the outside of the wall bracket as shown in Example 4 on Page 39.
3. Locate the wall bracket and rollers so they are in-line with the discharge spout control sprocket (this will allow the chain to track properly onto the spout control sprocket). Attach the wall bracket to the top of the bin wall in a position that allows the chain to clear the eave of the roof.

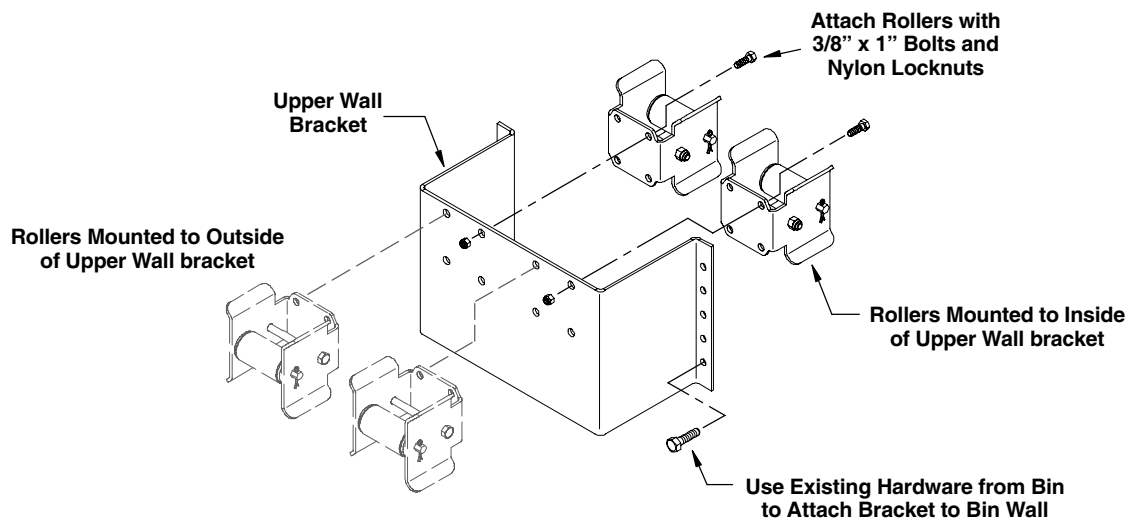

Install Chain Ground Control Components (con't.)

- Attach each wall plate to the lower chain mount as shown in illustration below. Secure each bracket using two (2) 3/8" x 1" bolts, four (4) flat washers and two (2) nylon locknuts. Slide the chain mount up so the bolts are at the bottom of the chain mount slots, but at the top of the wall plate slots (See illustration below).
- Determine the location of the lower chain mount and attach the wall plates to the bin wall (use the existing hardware from the bin to mount the wall plates).
The bottom of the wall plates should be approximately 2' to 3' (61.0 cm to 91.4 cm) off the ground.

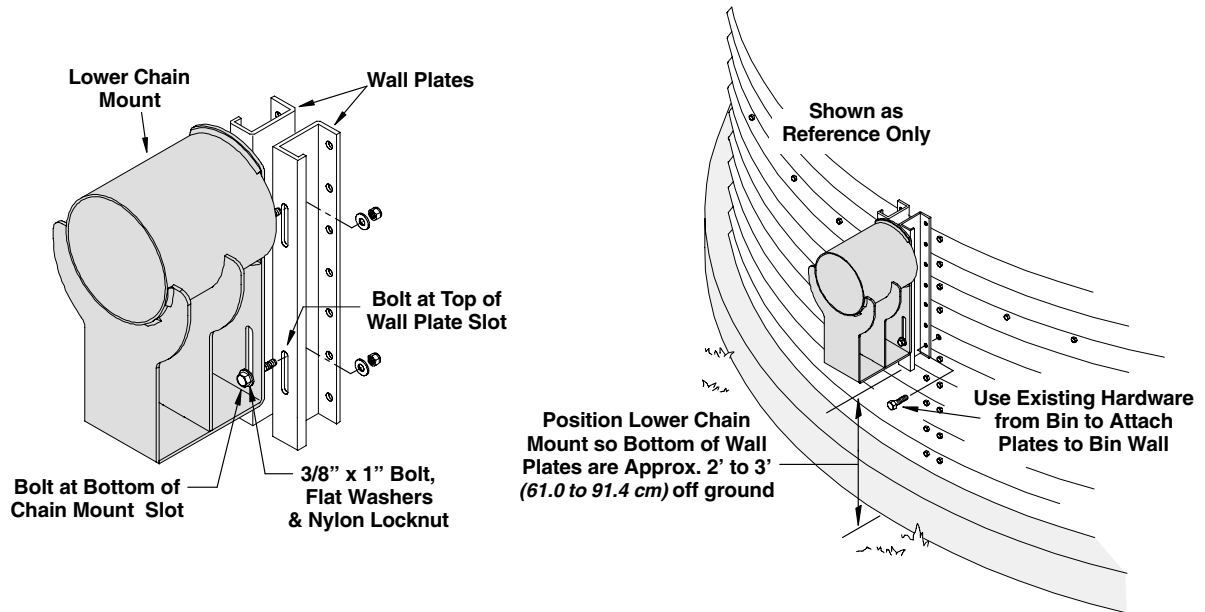

- Route the control chain through one of the rollers on the wall bracket and up to the discharge spout control sprocket (make sure the chain is positioned between the roller and the guide bolt). **The chain can be clamped to the wall bracket to keep it from slipping through the bracket and roller while it is being routed up and around the control sprocket.**
 - Leave a good portion of the chain hanging below the roller on the wall bracket. This will be the end of the chain that will be spliced [this location is only a reference, it does not mean the splice has to be at this location. Just keep in mind that the splice (splices if more than one chain is used) need to be far enough away so it cannot be pulled onto the control sprocket.
- Route the chain down and behind the remaining roller on the wall bracket and down to the lower chain mount (make sure the chain is engaged with the teeth on the sprocket).
Keeping the chain fairly taut, route the end of the chain to the portion of chain left hanging below the wall bracket roller. Connect the two ends of chain together using one (1) 3/16" threaded chain coupler. **The lower chain mount has adjustment slots to tighten the chain after it has been installed. If you determine that the chain is still too long, even after this adjustment has been made, cut off the excess chain length and then connect the ends together with the threaded coupler.**

ASSEMBLY INSTRUCTIONS

Install Chain Ground Control Components (con't.)


- Loosen the bolts securing the lower chain mount to the wall plates. Slide the chain mount down to tighten the chain. Retighten the bolts securing the lower chain mount into place.

Note: 120' (36.58 m) of chain is included with this kit. If more chain is required for your application, keep in mind that the splices cannot be pulled onto the control sprocket. Determine splice locations accordingly.

Operation Notes:

The controls should be clearly marked as to which spout they control to prevent accidentally discharging grain into the wrong bin.

Controls should be marked to indicate when a spout is open or closed.

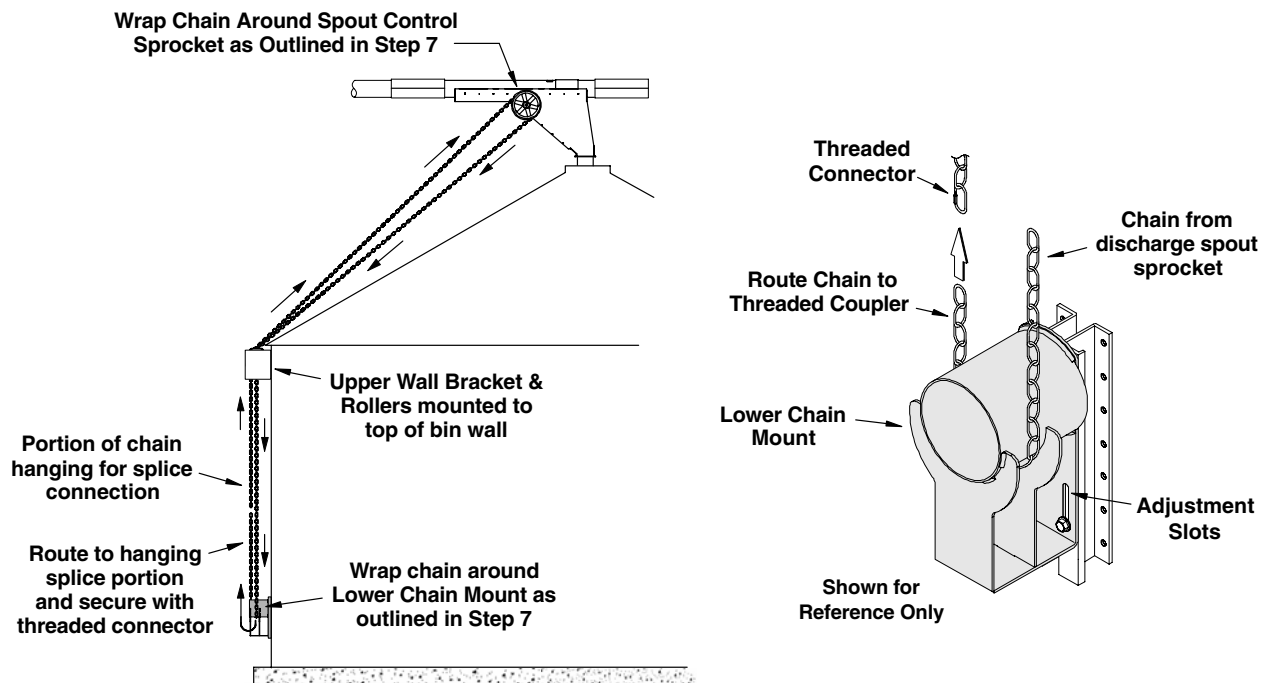

DESIGNATED WORK AREA

The area around the conveyor and inside the grain storage units is considered the work area. Use the following to ensure a safe working environment.



WARNING! Under no circumstances should persons not involved in the operation be allowed to trespass into the work area.

It shall be the duty of all operators to see that children and/or other persons stay out of the work area! Trespass into the work area by anyone not involved in the actual operation, or trespass into a hazard area by anyone shall result in an immediate shutdown by the operator.



It shall be the responsibility of all operators to see that the work area has secure footing, is clean and free of all debris and tools which might cause accidental tripping and/or falling. It shall also be their responsibility to keep the work area clean and orderly during the operation.

Use caution when working in areas above the ground. Persons operating, servicing or repairing equipment that requires above ground work shall be properly secured with the use of “fall protection” equipment as set forth by EU-OSHA guidelines and regulations.



Metal buildings, scaffolding and other types of work surfaces can become slippery, especially when surfaces are wet and/or oily. This can create hazardous working conditions. Use caution when working, climbing or walking on these surfaces.

START-UP and BREAK-IN INFORMATION



WARNING! During initial start-up and break-in period, the operator shall be aware of any unusual vibrations or noises that would indicate a need for service or repair.

Keep all safety shields and devices in place. Keep hands, feet, and clothing away from moving parts.

The operator should have a full view of the conveyor work area and check that all personnel are free from designated work areas before adding power.

It is essential to inspect your conveyor and drive components before adding power and to know how to shut down in an emergency. During the operation of your conveyor, one person shall be in a position to monitor the operation.

During the initial start-up and break-in period, the operator should watch for any unusual vibrations or noises.

Any conveyor, when it is new or after it sits idle for a season, should go through a “break-in” period. It should be run at partial capacity at full speed until the inside of the housing becomes polished, before attempting full capacity. A failure will most likely occur when it is run at full capacity before it has a chance to “shine up”.

If at all possible, do not start or stop the Grain Pump® Conveyor under load, especially before the housing becomes well polished, as this may cause the unit to stall. If so equipped, inspect and lubricate the automatic take-up corner. Be sure that the sprocket carriage is free to move up and down.

OPERATION INFORMATION

Operation of the Grain Pump® Conveyor will generally include moving grain into or out of grain storage structures.

Grain will enter the conveyor through a dump hopper or through bin wells in grain bins. There are flow control devices included with these components that should be used to control grain flow rates into the conveyor.

It is possible to use more than one inlet component at the same time, such as when blending is desired or simply to increase the flow rate into the conveyor.


Grain is discharged from the conveyor through outlets with movable gates for opening and closing the outlets. Optional ground controls are available for operating the gates. All gates should be closed except the one at the selected discharge point.

Typically with a system of this size, a sweep auger is installed and kept inside the bin. Refer to the operator’s manual that is supplied with the sweep auger for installation instructions and safety practices.

CONVEYOR OPERATION

FULL LOAD OPERATION INFORMATION

For unloading bins into a truck, the operator may want to leave the discharge gate over the bin being unloaded open, in addition to the discharge gate over the truck load-out. This will allow the operator to close the gate to the truck when it is full and let the loop clean-out as the inlet (bin well) is closed (See illustrations below).

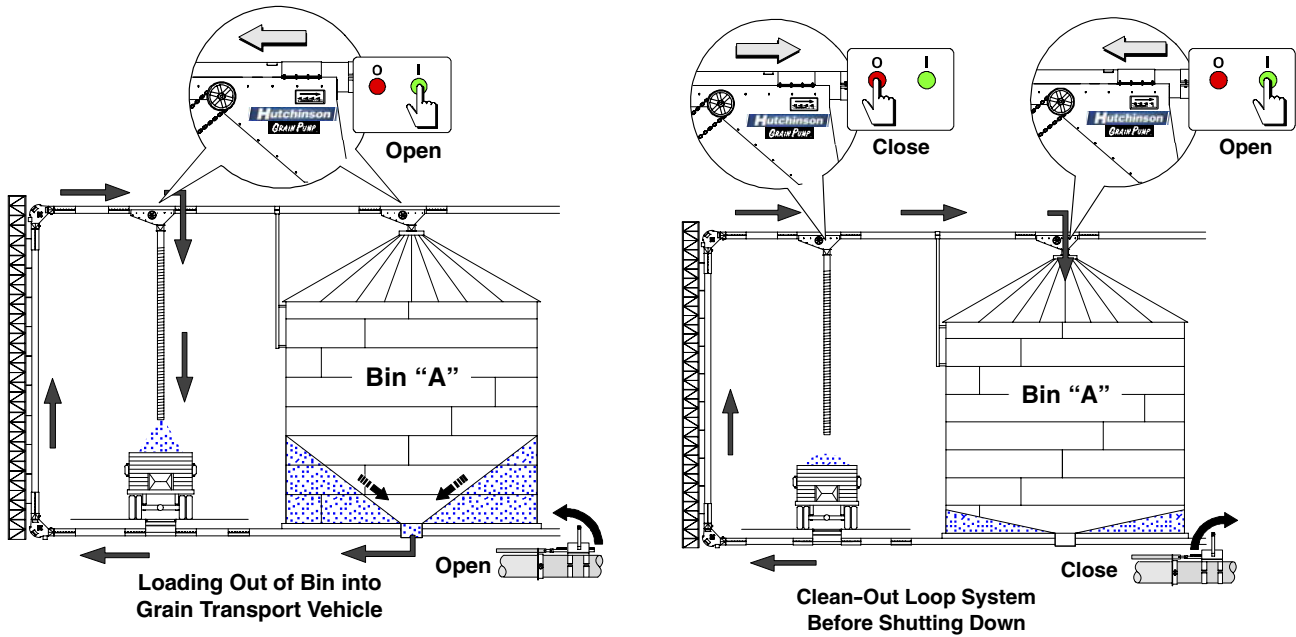

Although the noise parameters do not exceed the 70 db(A) threshold, when working in close proximity of the unit and its components, it is recommended that ear protection be worn at all times.



OPERATING PROCEDURES



WARNING! Make certain everyone is clear before operating the equipment.

The operator shall be aware of any unusual vibrations or noises that would indicate the need for service or repair.

Keep all safety shields in place.

Keep hands, feet and clothing away from moving parts.



The operator shall have a full view of the entire work area and check that all personnel are clear of the designated work area before adding power.

If the operator must leave the work area, or whenever servicing or adjusting, the conveyor must be stopped and the power source turned off and locked out.



Precaution should be made to prevent anyone from operating the conveyor when the operator is absent from the work area.

The reset and starting controls must be located so that the operator has full view of the entire operation.

Do Not enter the grain bin unless all power driven equipment has been shut down and locked out.



Make certain electric motor is grounded.

Disconnect power before resetting motor overloads.

Shut off power and lockout whenever cleaning or servicing the conveyor.

Never enter the bin when the sweep auger is in operation. Never attempt to control the operation of the sweep auger by pushing on an operating sweep auger with shovels, brooms or other devices.



Do Not attempt to restrain the movement of the sweep auger by attaching ropes, bars or other devices to be held by an operator.

1. Start the conveyor for operation. Open the conveyor outlet gate for the desired discharge point (all gates should be closed except the one at the selected discharge point).

2. If moving grain from bins or storage structures, gradually open the gate in the center well until desired flow is established. **Do Not** overload the conveyor.

If intermediate wells are used, they should be opened **after** grain has stopped flowing into the center well.

When the desired amount of grain has been moved or unloaded, close all bin wells and allow the conveyor to clean itself out. **Shut down and lock out power source.**

3. If moving grain through a dump hopper, begin unloading grain from dump vehicle in small increments and gradually build up to desired flow. **Do Not** overload conveyor.

After grain flow from dump vehicle has stopped, allow the conveyor to clean itself out and close outlet gate.

Shut down and lock out power source.

EMERGENCY SHUTDOWN

Should the machine need to be immediately shut down under full load, **disconnect** and **lockout** the power source. Clear as much grain from the hopper and conveyor as possible. Use the release door provided in the standard corner to drain the vertical tube after the dump hopper.

Never attempt to restart when full. Starting the unit under full load may result in damage. Such damage is considered abuse of the equipment and will not be warranted.

NORMAL SHUTDOWN

Close flow controls in bin wells and allow the conveyor to empty before stopping the unit.

Before the operator leaves the work area, the power source shall be locked out.

INTERMITTENT SHUTDOWN

When a conveyor is stopped and started under full load, it may result in damage to the conveyor. Therefore, if intermittent operation is to be carried out, it is advisable to reduce the load level.

If a conveyor is kept from absolute filling, it will make start-up easier and will convey grain more efficiently.

LOCKOUT

The power source shall have a main disconnect box that can be locked only in the “**Off**” position. This is what “**shutdown and lockout**” refers to, shut off the main power source and lock handle or breaker switch in the “**Off**” position.

**GENERAL MAINTENANCE
INFORMATION**

WARNING! A main power disconnect switch that can be locked in only the "OFF" position shall be provided. This shall be locked whenever work is being done on the conveyor.



Keep all safety shields and devices in place.

Never clean, adjust or lubricate a machine that is in operation.

Disconnect power before resetting motor overloads.



Shut off power and lockout whenever cleaning or servicing the conveyor.

Keep hands, feet and clothing away from moving parts.

For economical and efficient operation of your Grain Pump® maintain regular and correct lubrication. Neglect leads to reduced efficiency, excessive wear, and needless down time. Regular inspections should be established in order to ensure that the equipment is in good operating condition at all times.

The following information will detail the parts that require lubrication and the various conditions that determine the frequency span.

CONVEYOR CHAIN

It is important not to overtighten the conveyor chain. However, if the chain is not sufficiently tight, it will slip at the drive sprocket as capacity is increased. Should this occur, shut off grain flow to the unit and allow conveyor to clean itself out. **Shutdown and lockout the power source (See Page 45).**


To check conveyor chain tension, open the inspection door, grasp one of the paddles and attempt to rotate it up toward the chain. Proper chain tension should allow only minimum rotation of the paddle (See Fig. 1).

Inspect the conveyor chain for loose bolts, missing chain parts, missing or damaged chain paddles and the overall chain condition.

IMPORTANT SERVICE - MAINTENANCE NOTICE:

The life of the conveyor chain will be shortened when the chain is allowed to sit in water or is operated in acidic conditions, so avoid these situations as much as possible.


To extend chain life, spray a light coat of vegetable oil on the chain after each season's use.

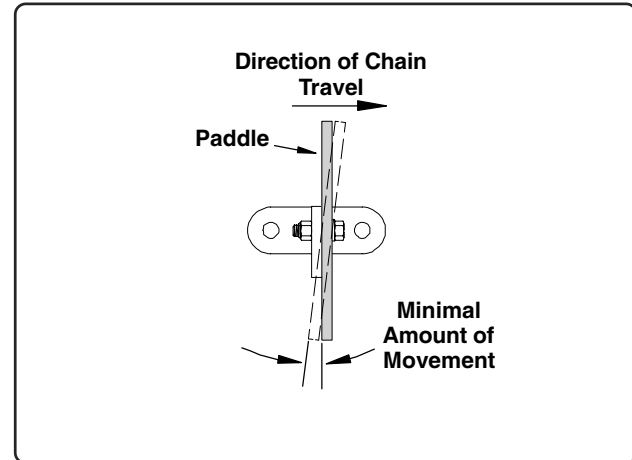**Fig. 1**

Another indicator of proper chain tension is whether the traction wheel is turning while the loop system is running. When the chain gets slack in it, it loses contact with the smooth surface of the traction wheel so the wheel and shaft do not turn.

Also, the wheel and shaft may turn when the loop is being run with no-load, but when loaded, slack is created and the shaft and wheel will not turn.

To check chain tension in this manner, start loop system operation and note if shaft is turning (See Fig. 2). Run both no-load and loaded to help determine proper tension. Adjust chain tension accordingly.

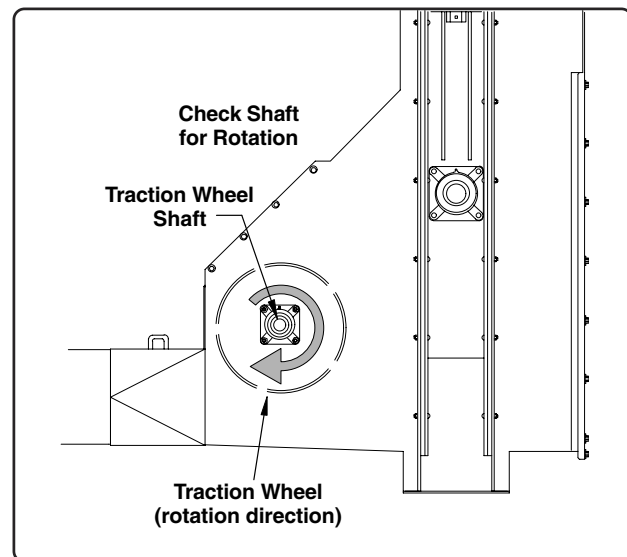**Fig. 2**

BEARING LUBRICATION

The bearings used in the various components of the loop system are equipped with lubrication fittings (grease zerks).

These bearings are self-aligning, sealed ball bearings which have been packed at the factory. They should be lubricated at approximately **fifty (50) hour intervals** with an SAE multipurpose type grease (See Fig. 3, Fig. 4, Fig. 5 & Fig. 6).

Typically only 1 pump is sufficient, Do Not over grease as this may damage the seals on the bearings.

Inspect bearings closely for wear and/or seal damage. Check that the bearings and lock collars are firmly fastened.

These bearings use an eccentric type lock collar. To tighten this type of lock collar, first slide it against the cam end of the inner ring of the bearing. Rotate collar in the direction of shaft rotation until the cams engage. Tap the collar further into this rotation to lock it, then tighten the setscrew.

Check all setscrews and hardware for tightness.

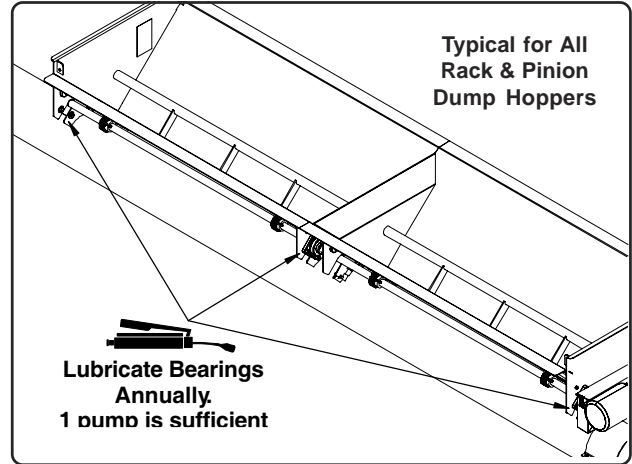


Fig. 4

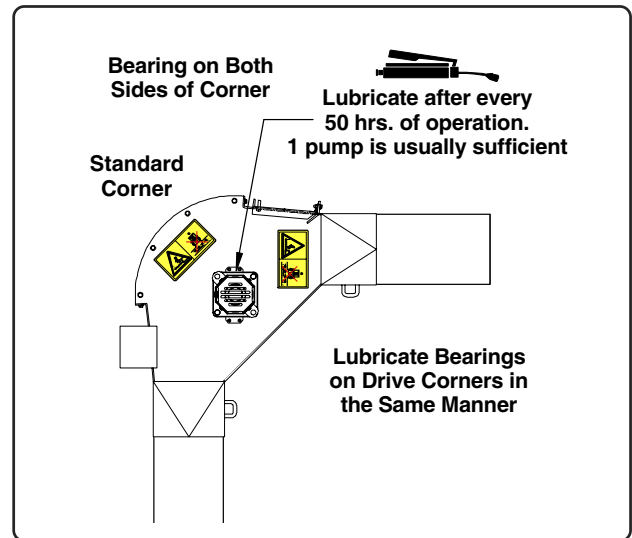


Fig. 5

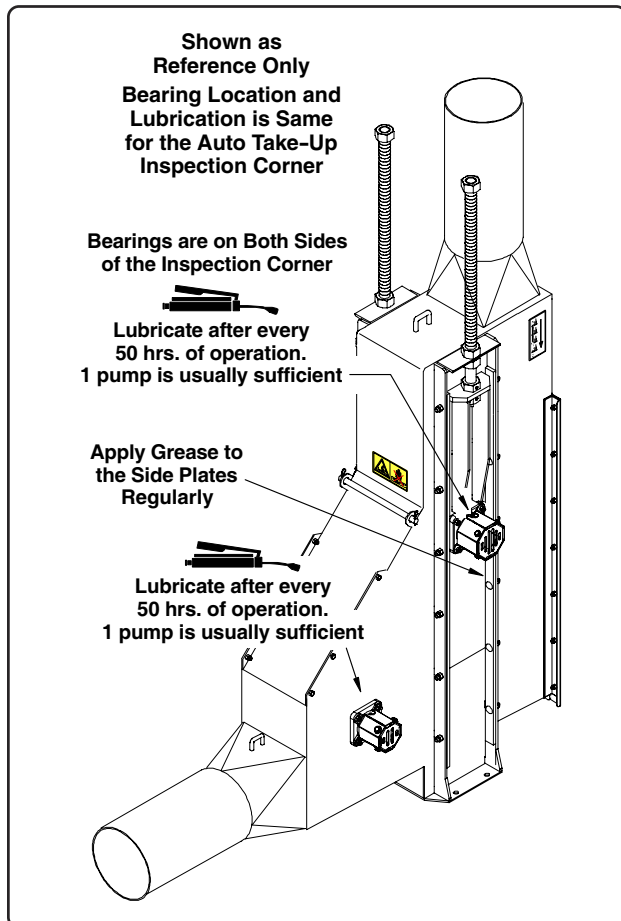


Fig. 3

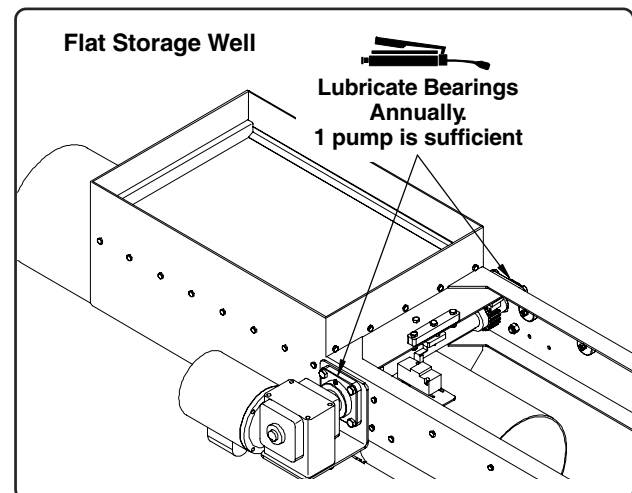


Fig. 6

LOOP SYSTEM & DROP ASSEMBLIES

Check hardware and fasteners to make sure they are all in place and secure.

For ground control discharge drops, ensure cables or chains are properly routed around the sprocket and pulleys (rollers) and operate freely.

Check connecting bands to ensure they are secure.

Ensure all hardware securing the towers and other support systems are tight and properly installed.

DRIVE CORNER BELTS

WARNING! A main power disconnect switch that can be locked in only the "OFF" position shall be provided. This shall be locked whenever work is being done on the conveyor.

The drive belt tension should be checked regularly. Check belts for tightness, cracking, fraying or other damage. Replace as necessary.

To tighten belts, turn the 3/4" nuts on the motor mount rods to raise the motor mount assembly (See Fig. 7). Raise all the rods the same distance so the motor mount assembly is parallel with top of conveyor trunking.

Proper tension is **1/2" (13 mm)** of deflection per belt when belts are firmly pressed at the center of the span between the two sheaves.

Sheaves must be aligned with each other. Check alignment by placing straight edge across the outer face of both sheaves.

Check that drive keys are properly installed and mounting bolts in sheave taper lock bushings are tight.

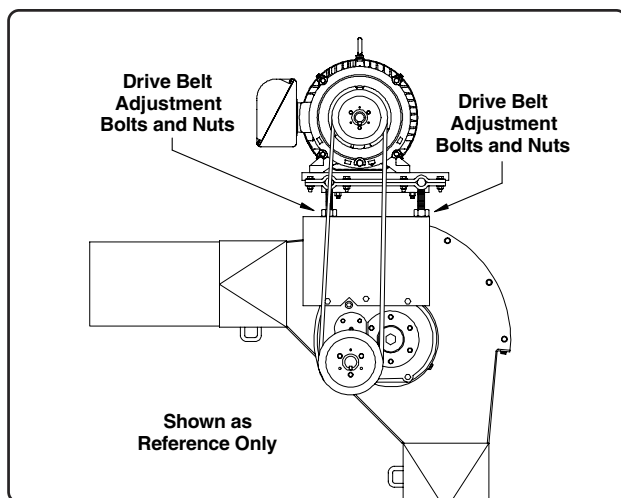


Fig. 7

AUTO TAKE-UP CORNER

If the conveyor is equipped with an Auto Take-up on the inspection corner, the take-up slide mechanism needs to be inspected and lubricated regularly.

There are two lubrication fittings (grease zerks) for the slide mechanism located on each side of the inspection corner (See Fig. 8). **These fittings should be lubricated after approximately every 10 hrs. of operation. 1 to 2 pumps of an SAE multi-purpose grease is typically sufficient.**

The sprocket and carriage assembly will go through an up/down cycle when the conveyor is started; therefore the free travel of the sprocket carriage must be maintained.

Be sure that the sprocket carriage is not fully bottomed out. If the carriage is in the full down position, then it may be necessary to shorten the chain by removing one or more links to tighten the chain. (Refer to "Conveyor Chain" information for proper chain tension.)

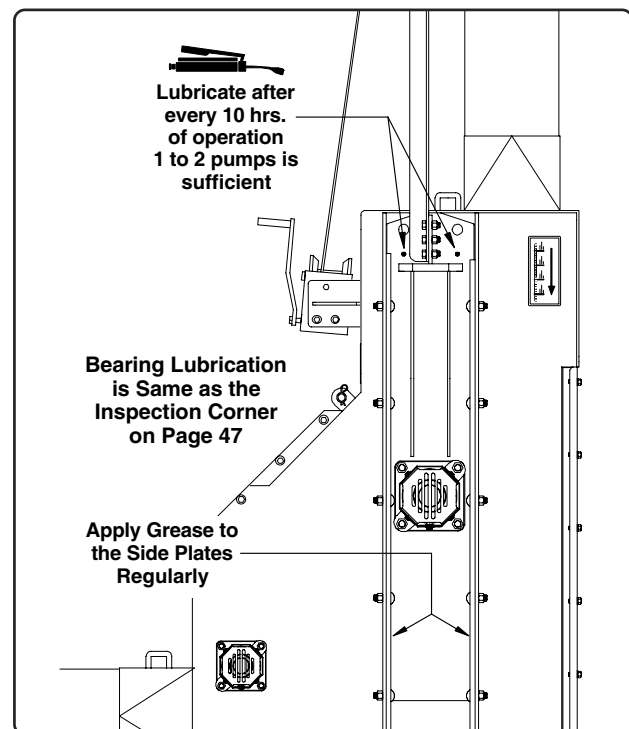


Fig. 8

DRIVE AND CORNER SPROCKETS

The conveyor chain sprockets should be occasionally checked against sliding on the shaft. The sprockets must be centered in the middle of the housing.

Ensure the sprockets are centered in the housing and the setscrews are tight securing the sprocket into place.

GEAR REDUCER

IMPORTANT! Because the gear reducer is shipped **without oil**, it is necessary to add the proper amount of oil before conveyor operation.

Use a high grade petroleum base, rust and oxidation inhibiting (R & O) gear oil, an ISO 220 grade is recommended for ambient temperatures of 50°F to 125°F (10°C to 52°C). Follow the instructions on the reducer name plate, warning tags, and in the instruction manual provided with the reducer.

Under normal industrial operating conditions, the lubricant should be changed every **2500 hours of operation or every six (6) months**, whichever occurs first. Drain the reducer and flush it with kerosene, clean the magnetic drain plug and refill reducer to its proper level with new lubricant.

CAUTION: Too much oil will cause overheating and too little oil will result in gear failure. Check oil level regularly

Under extreme operating conditions, such as rapid rise and fall of temperature, dust, dirt, chemical particles, chemical fumes, or oil pump temperatures above 200°F (93.3°C), the oil should be changed every **1 to 3 months** depending on severity of conditions.

For reducers operating in ambient temperatures that range between -22°F (-30°C) and 20°F (-6.6°C), the use of a synthetic hydrocarbon lubricant, 100 grade or AGMA 3 grade (for example, Mobil SHC627) is recommended.

Some of the reducer gearboxes are oriented in position "A" as shown in Fig. 9 (also refer to the manual provided with the gearboxes).

Use the oil level and fill plugs for the gearboxes oriented in position "A" as shown in Fig. 9.

For the gearboxes that are oriented at an angle, you should use a dipstick type device to check the oil level (See Fig. 9).

Use the vent/fill plug opening to insert the dipstick and mark the level onto the dipstick for future reference. Use this same method for checking oil level for all future level checks.

The gearboxes are equipped with a magnetic drain plug. When changing oil, ensure the drain plug is clean of all metal filings before reinstalling.

Note: The following oil fill levels apply to loop systems which are installed vertically. For angled loop systems consult the manual provided with the gearbox for proper oil level.

Capacities:

6" Models

Reducer SCXT215 f/ 5, 7 1/2 & 10 HP systems (4, 5.5 & 7.5 kw) approx. 1 qts. (.95 L)

Reducer SCXT315 f/ 15 HP (11 kw) system approx. 1 3/4 qts. (1.66 L)

Reducer SCXT415 f/ 20, 25 & 30 HP systems (15, 18.5 & 22 kw) approx. 1 7/8 qts. (1.77 L)

8" Models

Reducer SCXT415 f/ 15 & 20 HP systems (11 & 15 kw) approx. 1 7/8 qts. (1.77 L)

Reducer SCXT515 f/ 30 HP (22 kw) system approx. 3 1/2 qts. (3.3 L)

Reducer SCXT615 f/ 40 HP (30 kw) system approx. 4 1/4 qts. (4.00 L)

10" Models

Reducer SCXT415 f/ 20 HP (15 kw) system approx. 1 7/8 qts. (1.77 L)

Reducer SCXT515 f/ 30 HP (22 kw) system approx. 3 1/2 qts. (3.3 L)

Reducer SCXT615 f/ 40 & 50 HP systems (30 & 37 kw) approx. 4 1/4 qts. (4.00 L)

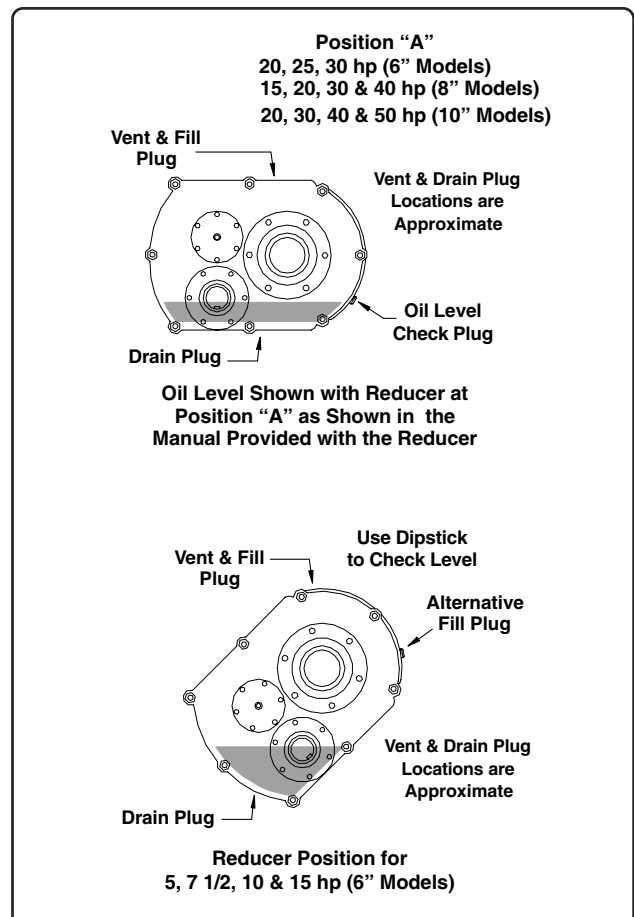


Fig. 9

SPLIT SPROCKET WEAR

The standard corners, drive corners and inspection corners are equipped with a split sprocket. These sprockets will naturally begin to wear through everyday normal use.

Sprockets should be checked occasionally for wear.

Consider replacing the sprocket at 1/32" (1 mm) of wear (on each side) with absolute maximum wear at 1/16" (2 mm).


If a wear pattern is noticeable on one side more than the other, the sprocket can be flipped over, this should be performed at 1/32" (1 mm) of wear.

Excessive and accelerated wear can occur after a nominal 1/32" (1 mm) of wear has been determined, so it is important to check frequently and replace sprockets as needed.

Apply Loctite™ to capscrew threads only prior to installation of sprocket (refer to Loctite™ for safe handling procedures and curing times).

Refer to the chart below for torque values when replacing or servicing the sprockets.

Torque Specifications for Split Sprockets							
Bolt Size		5/16"	3/8"	7/16"	1/2"	5/8"	3/4"
Dry Thread	ft. lbs.	29	49	76	113	230	400
	N·m	(39.3)	(66.4)	(103.1)	(153.2)	(311.8)	(542.3)
Lubricated Thread	ft. lbs.	23	39	61	90	184	320
	N·m	(31.2)	(52.8)	(82.7)	(122.0)	(249.5)	(434.0)

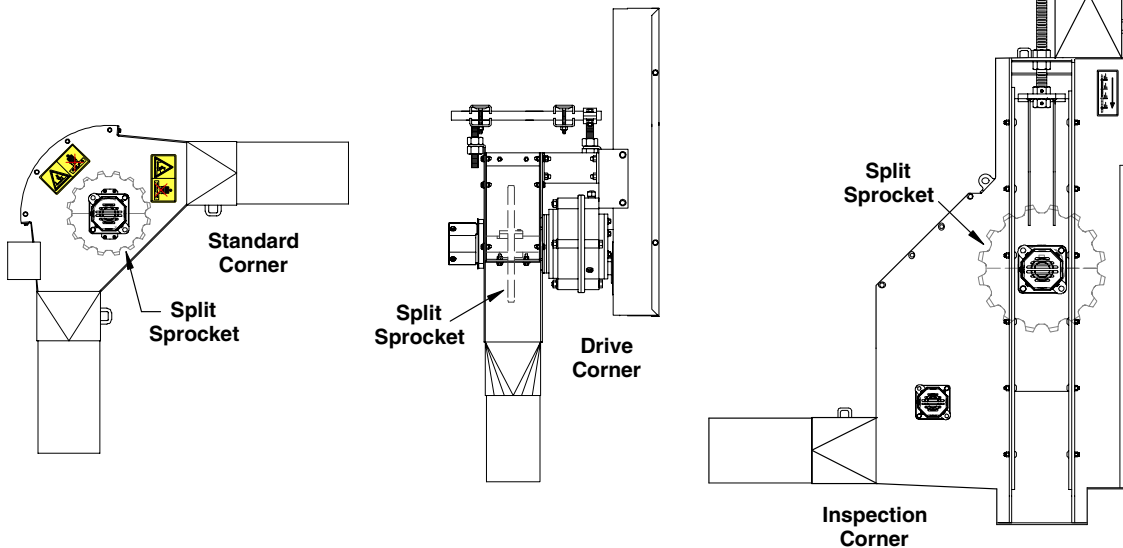

RACK & PINION

Rack & Pinion f/ 13" Floors

The rack & pinion control does require a little maintenance. The handle is supported with bronze bushings. A lubricant spray can be used on these bushings every **6 months or annually** depending on climate conditions and severity of operation.

These bushings should also be lubricated when the loop system will be idle for an extended period of time.

A **chain lubricant** should be used to keep the chain rust free and in good operating condition. This procedure should be performed **every 6 months or annually**.

There are openings on the sides of the Rack & Pinion housing that allow access to the chain and sprockets. The sprockets should be lubricated at the same time the chain is being serviced.

Rack & Pinion f/ 15" Floors

Lubricate the chain shaft and the tube guide the chain shaft slides on every **6 months or annually** depending on climate conditions and severity of operation.

A **chain lubricant** or **good quality grease** can be used to keep the chain rust free and in good operating condition. A spray lubricant can also be used to keep the sprocket in good condition.

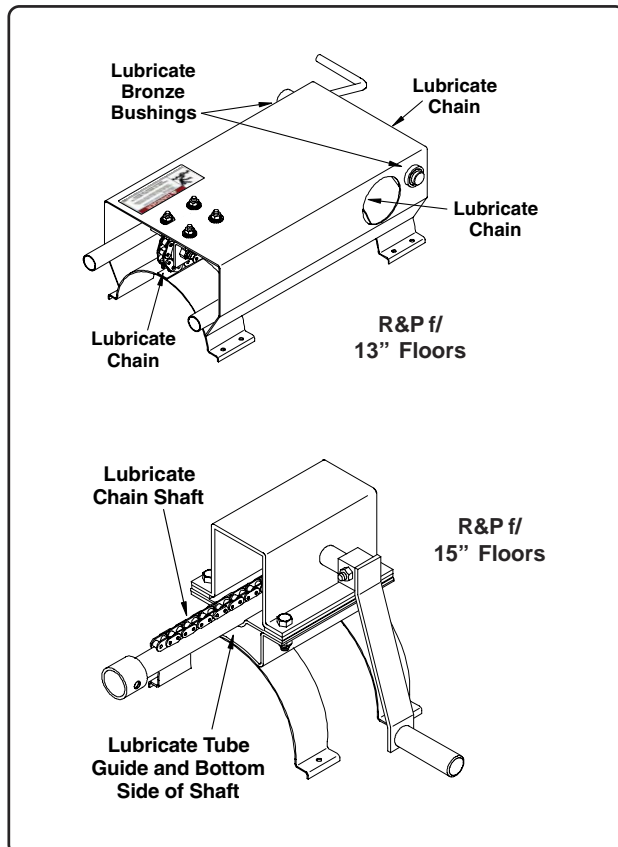


Fig. 10

TROUBLE SHOOTING

1. Extreme noise from housing.

- A. Conveyor chain is too loose. Chain is slipping at drive sprocket. Check chain tension and adjust, as necessary.
- B. Improper assembly or misalignment of housing. Locate tube connection(s) that is the source of noise and disassemble. Check for end smoothness and grind, if necessary.
- C. A conveyor sprocket is not centered in a corner unit causing paddles to rub hard on conveyor sides. Sprocket must be moved on shaft to center position and locked.

2. Belt slippage on electric drive.

- A. Incorrect belt tension. Turn the adjustment bolts on the motor mount until proper tension is reached.
- B. Unit is plugged. Clear the grain and any obstructions from the machine as is possible.

3. Grain returning to the intake.

- A. All discharge spout gates may be closed. Make sure the proper gate is open.
- B. Partially blocked discharge; remove obstruction.
- C. Chain travel is too fast causing grain carry-over.

4. Unit not running to full capacity.

- A. Grain is high in moisture causing lower capacity. Excessive feeding of high moisture grain can cause plugging.
- B. Chain speed is too slow.
- C. Obstruction at intake.
- D. There is grain returning to the intake (See 3 above).

5. Paddle breaking or bending.

- A. Paddles may be coming loose from the chain. Keep paddles securely connected to chain.
- B. Housing misalignment.
- C. Frequent starts under loads. Allow machine to clean out before shutting down.
- D. Sprockets may be off center. Align in center of housing.
- E. Overfeeding; adjust the feeding of the unit to allow less grain to enter while maintaining full speed.

BAND-ON INLET HOPPERS

Inlet hoppers can be used within the loop system for various applications. They can be positioned in the conveyor system as extra inspection doors, or can be used in hard-to-reach places for clean-out purposes.

The hoppers can also be used as an alternative inlet hopper for allowing grain to enter into the loop system at locations other than the dump hopper.

The inlet hoppers are installed as detailed below.

1. After location for the hopper has been determined, remove the cover and safety screen from the hopper. Place the hopper on top of the conveyor tube and mark the conveyor tube from the inside of the hopper, leaving a minimum of 1/2" (13 mm) of tubing around all four sides of the hopper (See illustration below).
2. Verify the marks do not extend past the sides of the hopper (grain will leak out of the hopper if the opening is too large).
3. Cut and remove the section of conveyor tube previously marked, making sure to remove all pieces of cut material from inside the tube. Ensure cut edges of tubing are filed smooth so as not to cause interference with the paddles.

Note: Do Not cut openings in the conveyor tube when the chain and paddles are inside the tube. Damage to the chain and/or paddles can occur.

4. Secure the hopper to the conveyor tube using the back band and mounting hardware provided.

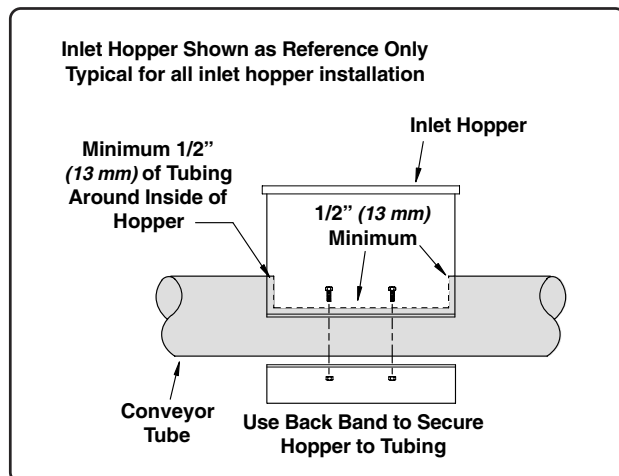


Fig. 11

BAND-ON INLET HOPPERS (con't.)

Figure 12 below shows typical inlet hoppers available for the loop system.

All inlet hoppers are equipped with a safety screen. Make sure the screen is always in place and properly secured during system operation.

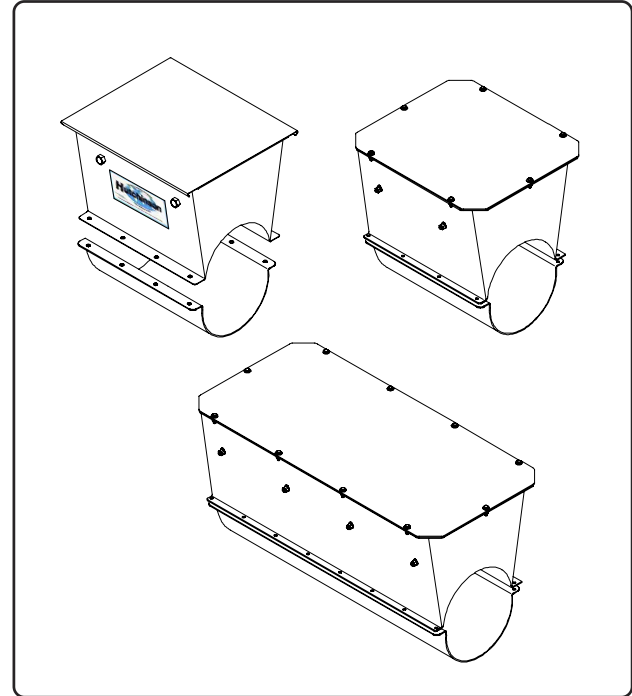


Fig. 12

CHAIN MAINTENANCE ACCESS

HOPPER

Chain maintenance access sections are available for use on the horizontal tubes only.

The access sections are typically installed between the drive-over pit and first corner section, but can be installed anywhere in the loop system as long as they are installed on the horizontal tubes.

1. After location for the access section(s) has been determined, connect to the conveyor tubes using the connecting bands provided. Tighten connecting bands as shown below.

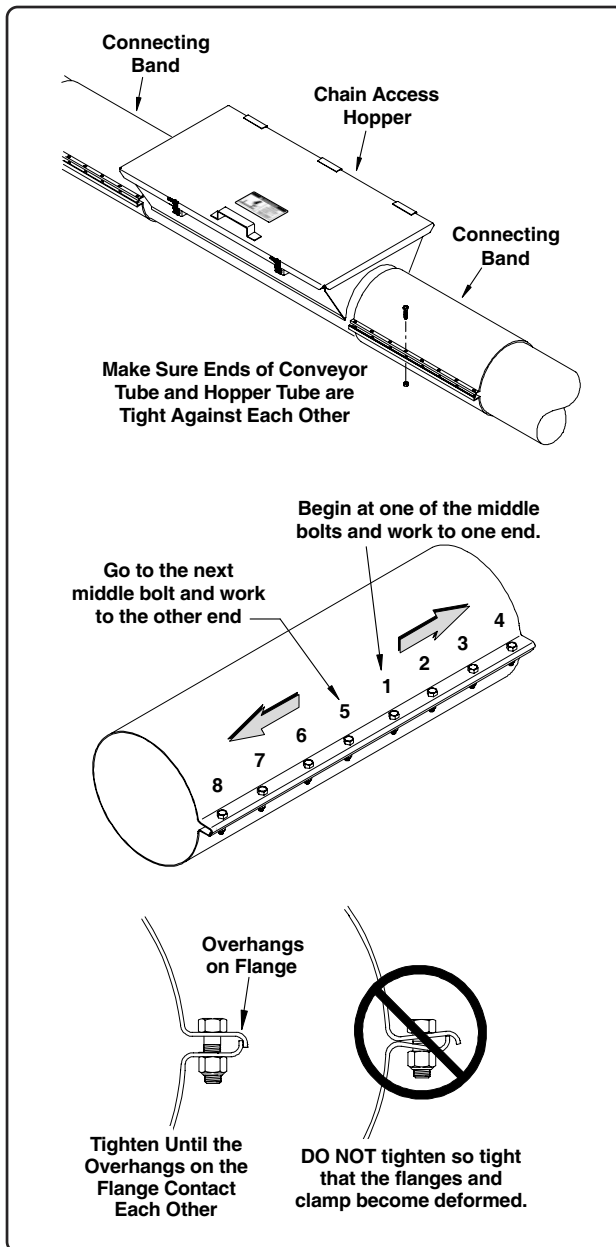


Fig. 13

Various inspection ports are also available for use with the loop system.

The inspection ports are typically installed after each grain bin (or structure) and between the dump hopper and first corner section, but can be installed anywhere in the loop system as long as they are installed on the horizontal tubes.

The purpose of the inspection ports is to allow a safe alternative for visual grain flow within the system as well as checking for paddle and/or chain damage.

1. After location for the inspection port(s) has been determined, the conveyor tubing will need to be cut. Open the door on top of the inspection port and mark the inside of the port opening onto the conveyor tube. Cut and remove the section of conveyor tube previously marked, making sure to remove all pieces of cut material from inside the tube. Ensure cut edges of tubing are filed smooth so as not to cause interference with the paddles.

For inspection port with safety screen, place the hopper on top of the conveyor tube and mark the conveyor tube from the inside of the hopper, leaving a minimum of 1/2" (13 mm) of tubing around all four sides of the hopper (See Fig. 11 on Page 51).

2. After tubing has been cut, secure the inspection port with the hardware provided (secure with back bands if so equipped).

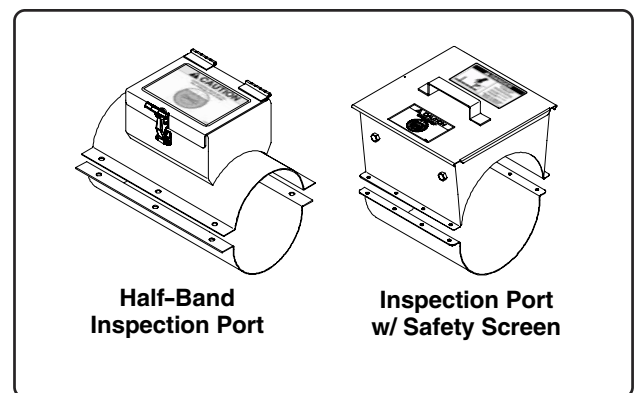



Fig. 14

OPTIONAL ACCESSORIES


TRUSS SUPPORT ASSEMBLIES

Truss support kits are available for the loop system. The truss supports can be used in lieu of support towers with spans up to 100' (30.48 m). The illustrations below show the approximate dimensions for typical layouts of the truss supports used on loop systems **up to 65' (19.81 m) long** and for loop systems **66' to 100' (20.12 to 30.48 m) in length**.


Refer to the instructions that are shipped with the truss kits for assembly procedures and other important information.

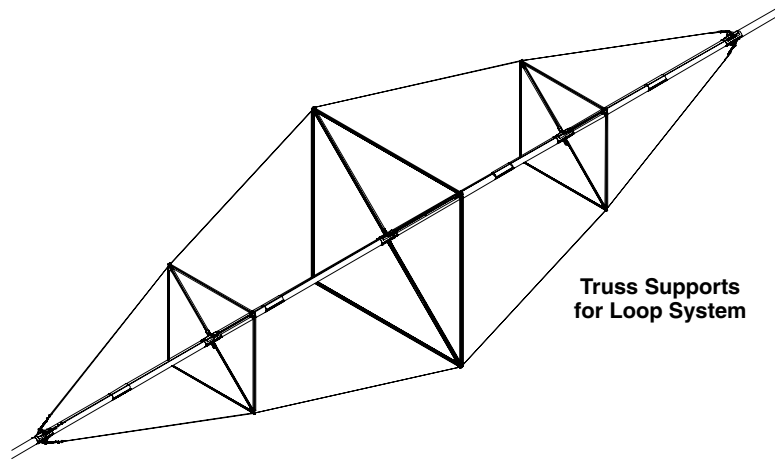

For Layouts Up to 65'-0" (19.81 m)
The illustration shows a 65' (19.81 m) layout, dimensions will differ from what is shown depending on length of span

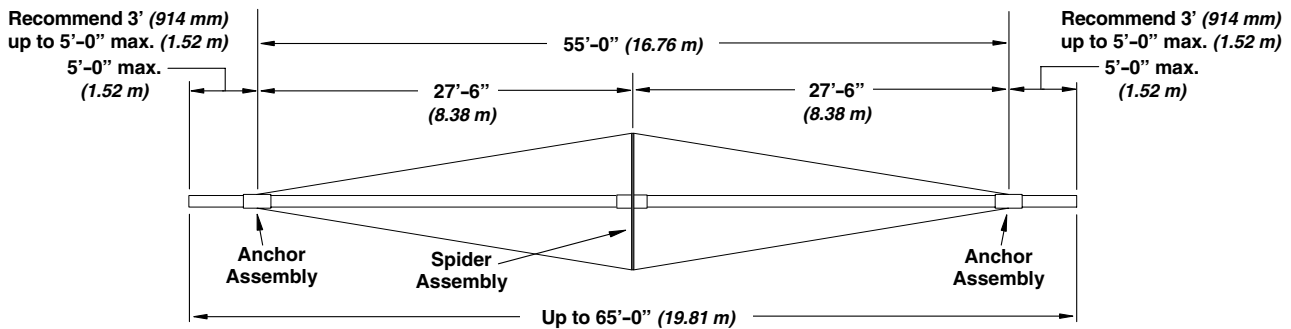

For Layouts of 66'-0" to 100'-0" (20.12 to 30.48 m)
The illustration shows a 100' (30.48 m) layout, dimensions will differ from what is shown depending on length of span



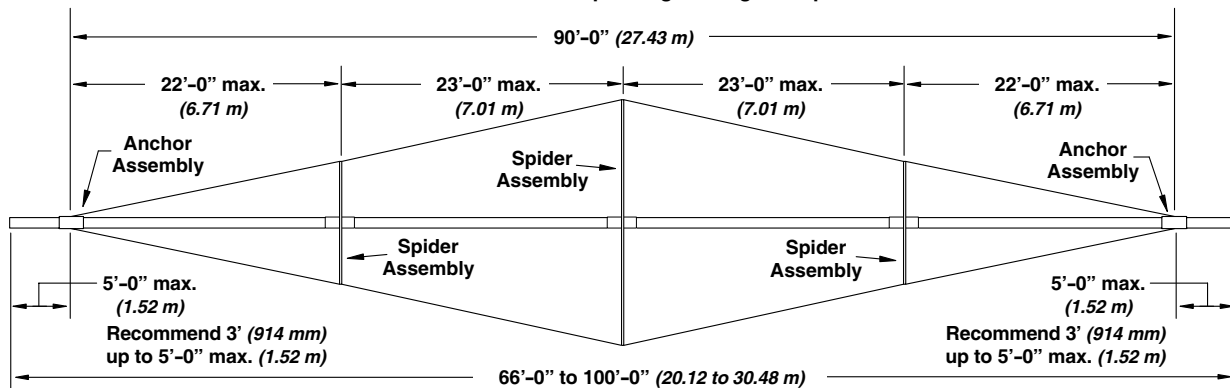


6", 8" & 10" Grain Pump Loop System

<i>Decals and Safety Signs</i>	<i>P-2 to P-3</i>
<i>Manual Take-Up Inspection Corner, 6" Models</i>	<i>P-4 to P-5</i>
<i>Chain & Paddles, 6", 8" & 10" Models</i>	<i>P-5</i>
<i>Manual Take-Up Inspection Corner, 8" Models</i>	<i>P-6 to P-7</i>
<i>Manual Take-Up Inspection Corner, 10" Models</i>	<i>P-8 to P-9</i>
<i>Auto Take-Up Inspection Corner, 6" Models</i>	<i>P-10 to P-11</i>
<i>Auto Take-Up Inspection Corner, 8" Models</i>	<i>P-12 to P-13</i>
<i>Auto Take-Up Inspection Corner, 10" Models</i>	<i>P-14 to P-15</i>
<i>90° Corner (standard), 6" Models; 90° Discharge w/ Gate, 6" Models</i>	<i>P-16</i>
<i>90° Corner (standard), 8" Models; 90° Corner (standard), 10" Models</i>	<i>P-17</i>
<i>90° Discharge w/ 29" Gate and w/ 54" Gate f/ 8" Models</i>	<i>P-18</i>
<i>90° Discharge w/ 29" Gate and w/ 54" Gate f/ 10" Models</i>	<i>P-19</i>
<i>Drive Corner Assembly, 6" Models</i>	<i>P-20 to P-21</i>
<i>Drive Corner Assembly, 8" Models</i>	<i>P-22 to P-23</i>
<i>Drive Corner Assembly, 10" Models</i>	<i>P-24 to P-25</i>
<i>Ground Wheel Control Kit w/ Chain and w/ Cable</i>	<i>P-26</i>
<i>Dump Hopper, 2 Gate, 3 Gate & 5 Gate f/ 6"</i>	<i>P-27</i>
<i>Dump Hopper, 2 Gate, 3 Gate, 5 Gate, 6 Gate, 7 Gate f/ 8"</i>	<i>P-28 to P-29</i>
<i>Dump Hopper, 2 Gate, 3 Gate, 5 Gate & 7 Gate f/ 10"</i>	<i>P-30 to P-31</i>
<i>Dump Hopper w/ Electric Rack Pinion, 5 Gate f/ 8"</i>	<i>P-32 to P-33</i>
<i>Dump Hopper w/ Electric Rack & Pinion, 7 Gate f/ 10"</i>	<i>P-34 to P-35</i>
<i>Chain Maintenance Access Hopper, 3' Long, 6", 8" & 10"</i>	<i>P-36</i>
<i>Chain Maintenance Access Hopper, 5' Long, 6", 8" & 10"</i>	<i>P-37</i>
<i>Center Binwell f/ 6"</i>	<i>P-38</i>
<i>Intermediate Binwell f/ 6"</i>	<i>P-39</i>
<i>Center Binwell f/ 8"</i>	<i>P-40</i>
<i>Intermediate Binwell f/ 8"</i>	<i>P-41</i>
<i>Center Binwell f/ 10"</i>	<i>P-42</i>
<i>Intermediate Binwell f/ 10"</i>	<i>P-43</i>
<i>Inspection Ports, Inlet Hoppers</i>	<i>P-44</i>
<i>Heavy Duty Inlet Hopper, 18" & 36" Long f/ 10"</i>	<i>P-45</i>
<i>90° Discharge Electric Conversion Kit</i>	<i>P-46</i>
<i>Flat Well Storage w/ Electric Slide Gate f/ 8"</i>	<i>P-47</i>
<i>Flat Well Storage w/ Electric Slide Gate f/ 10"</i>	<i>P-48 to P-49</i>
<i>Rack & Pinion f/ 15" Floors, 6", 8" and 10"</i>	<i>P-50</i>
<i>Rack & Pinion f/ 13" Floors, 10"</i>	<i>P-51</i>
<i>Torque Chart</i>	<i>P-52</i>

PARTS LIST


SAFETY SIGNS and DECALS

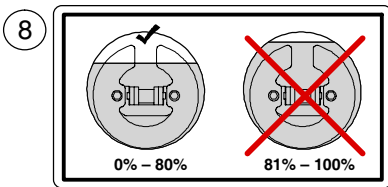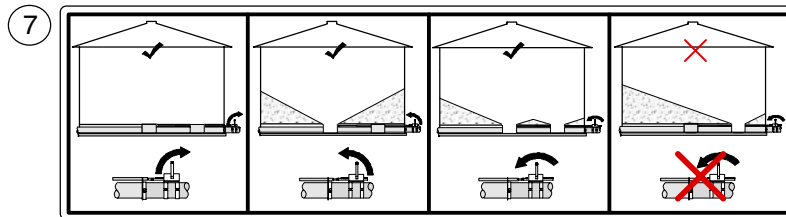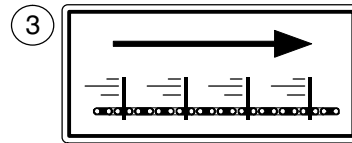

Ref. No.	Part No.	Description
1	1001985	Danger, Rotating Auger
2	1012872	Danger, Moving Chain Hazard
3	1012785	Decal, Chain Travel
4	1002305	Danger, Keep Out of Bin...
5	1002301	Caution, General Statement
6	1002310	Danger, Do Not Operate with Cover Open



Ref. No.	Part No.	Description
7	1006947	Rack & Pinion Controls
8	1033033	Caution, Grain Pump Loop Fill
9	34349	Decal, Grain Pump
10	1047373	Danger, Stay Clear
11	1001127	Decal, Hutchinson (rectangle)
12	1041833	Decal, Made in America

SAFETY DECAL LOCATIONS on SYSTEM COMPONENTS

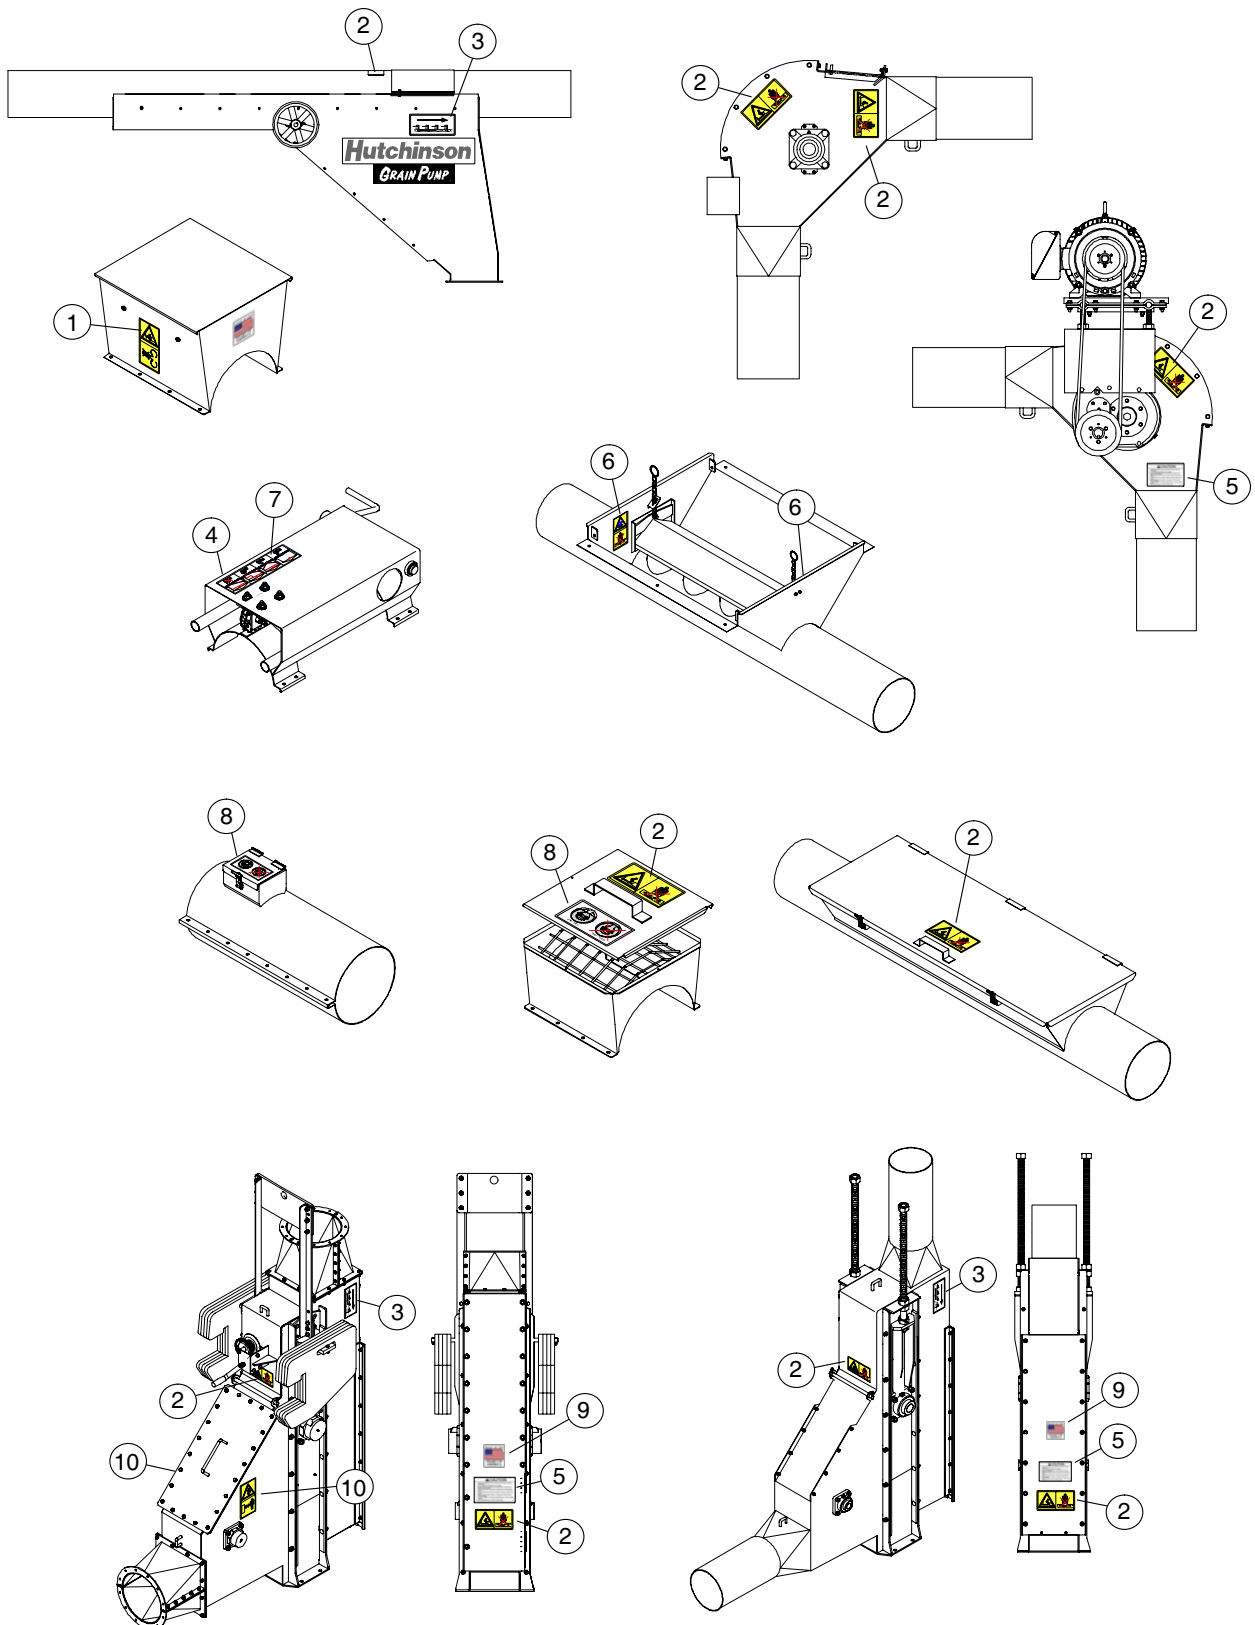

PARTS LIST


6" MANUAL TAKE-UP CORNER (INSPECTION CORNER)

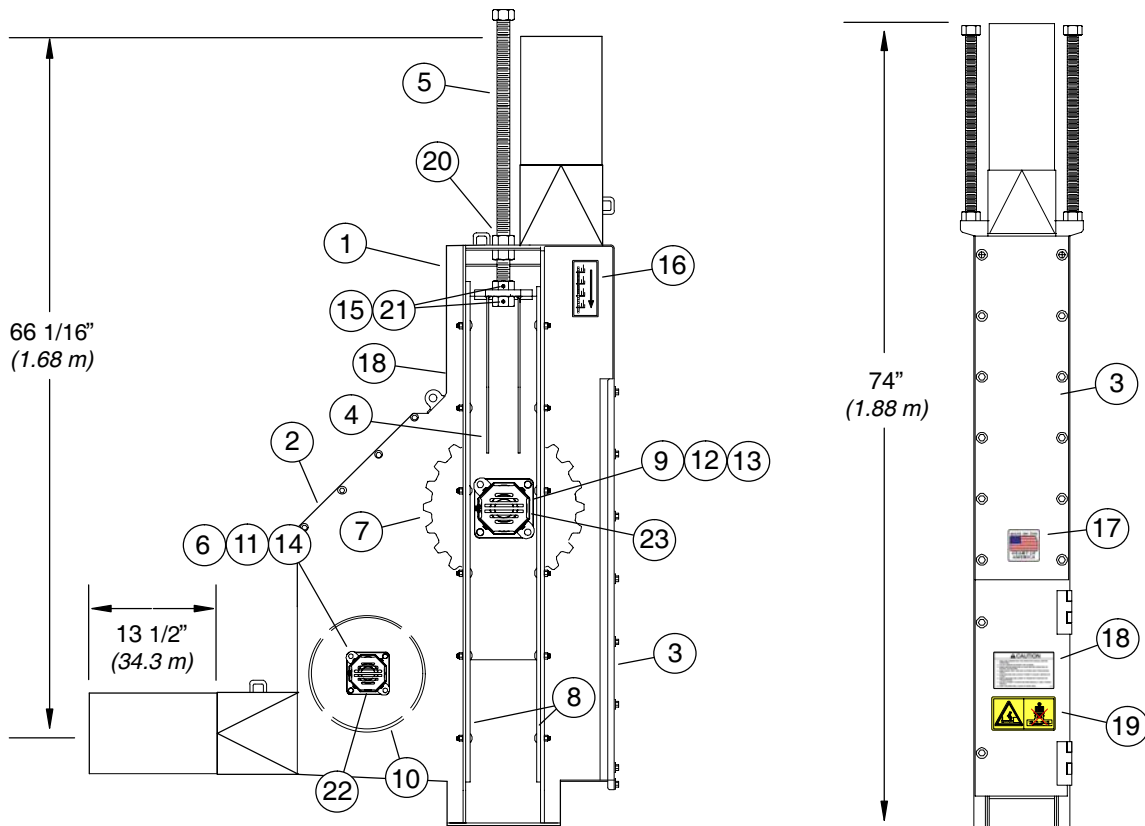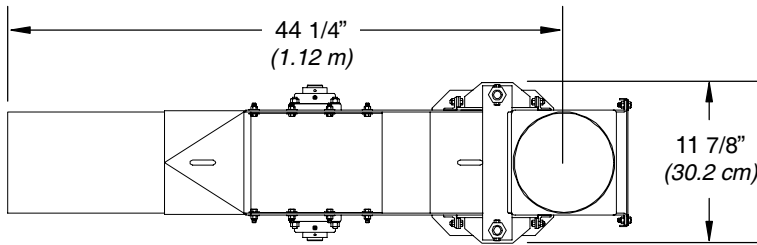

6" MANUAL TAKE-UP CORNER (INSPECTION CORNER)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1014076	Manual Take-Up Corner Weldment	13	4073A1	Key, 3/8" sq. x 3" long
2	1014092	Cover, Inside Panel	14	4046A1	Key, 1/4" sq. x 3" long
3	1014095	Inspection Door (rear)	15	4713-1	Bolt, 5/16-18 x 1 3/4"
4	1014105	Slide Weldment	16	1012785	Decal, Chain Travel
5	1012632	Rod, Threaded Adjustable	17	1002301	Decal, Caution, General Operator
6	8341D	Bearing, 4-Bolt Flange, 1" bore	18	1012872	Decal, Danger, Do Not Operate...
7	1005566-1	Sprocket, Split, 12 tooth, 1 1/2" bore	19	1041833	Decal, Made in America
8	1014106	Guide Strap f/ Slide Weldment	20	D1158	Nut, 1" - 8, Non-Lock
9	1010A	Bearing, 4-Bolt Flange, 1 1/2" bore	21	1004782	Nut, 5/16-18 Oval Lock
10	1014146	Wheel, Traction	22	1047432	Shaft Cover f/ 1" 4-Bolt Flange
11	1014150	Shaft, Idler Sprocket	23	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange
12	553240	Shaft, Inspection Corner Sprocket			

CHAIN & PADDLES

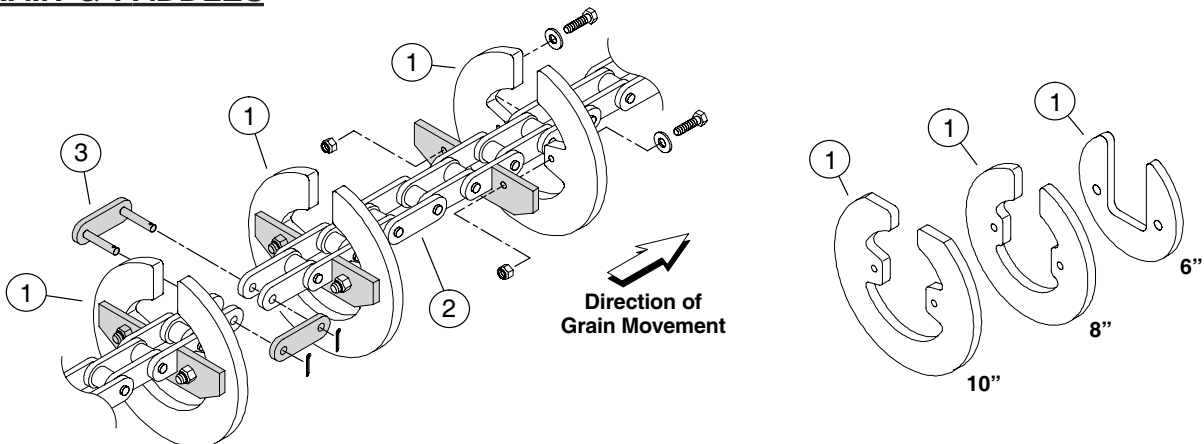

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1005590	Paddle f/ 6" Models	3	420154	Connecting Link f/ 81X Chain (f/ 6" Models)
(1)	1038222	Paddle f/ 8" Models	--	420200	Offset Link f/ 81X chain (not shown)
(1)	1012495	Paddle f/ 10" Models	(3)	1017077	Connecting Link f/ 81XHH Chain (f/ 8" & 10" Models)
2	1038006	Chain, 81X - 48 pitch, f/ 6"	--	1034495	Offset Link f/ 81XHH Chain (not shown)
(2)	1038007	Chain, 81XHH - 48 pitch, f/ 8"			
(2)	1038008	Chain, 81XHH - 48 pitch, f/ 10"			

All chain lengths are shipped in rolls of 125 7/32" (3.18 m) long

The 8" & 10" chain lengths can be ordered with paddles already attached:




8" Part No. 1042400, 10" Part No. 1042403

NOTE: Paddles f/ 8" & 10" connect to chain using two (2) 5/16" x 1-1/2" bolts (Part No. 4736), two (2) 5/16" lock nuts (Part No. 33135) and two (2) 5/16" flat washers (Part No. 33023).

Paddles f/ 6" connect to chain using two (2) 5/16" x 1-1/4" bolts (Part No. 4727-1), two (2) 5/16" lock nuts (Part No. 33135) and two (2) 5/16" flat washers (Part No. 33023).

PARTS LIST

8" MANUAL TAKE-UP CORNER (INSPECTION CORNER)

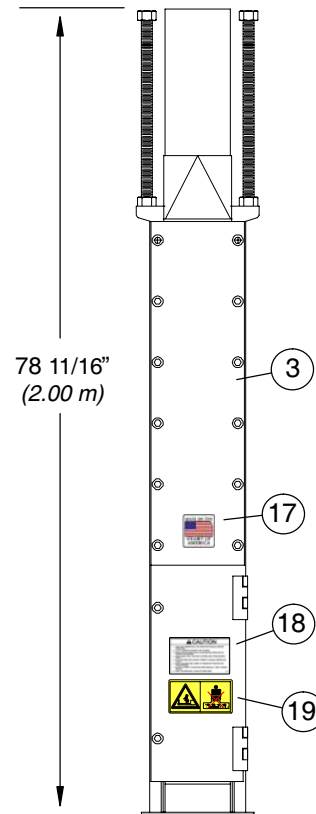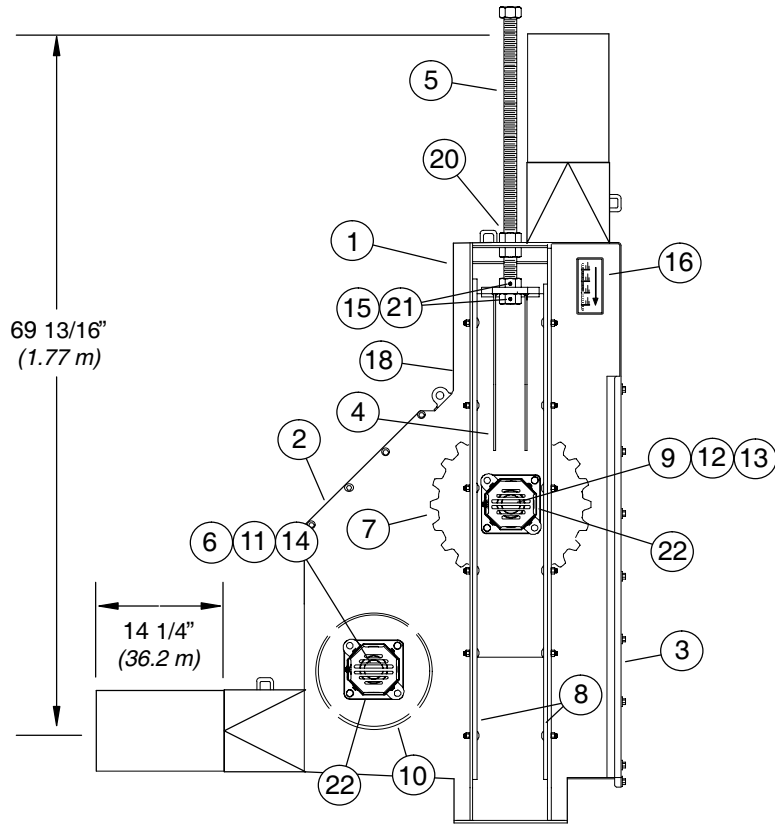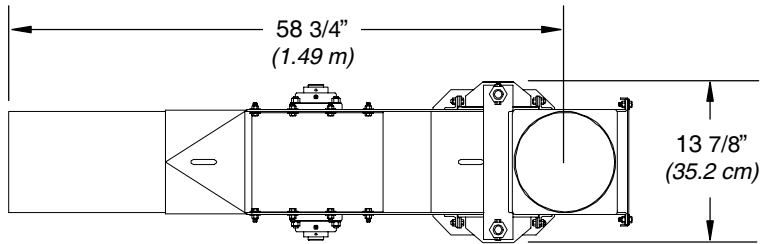



PARTS LIST

8" MANUAL TAKE-UP CORNER (INSPECTION CORNER)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1013963	Manual Take-Up Corner Weldment	12	553092	Shaft, Inspection Corner Sprocket
2	1013995	Cover, Inside Panel	13	4021L1	Key, 1/2" sq. x 2 3/4" long
3	1013999	Inspection Door (rear)	14	4021L1	Key, 1/2" sq. x 2 3/4" long
4	1014011	Slide Weldment	15	4713-1	Bolt, 5/16-18 x 1 3/4"
5	1012632	Rod, Threaded Adjustable	16	1012785	Decal, Chain Travel
6	1010A	Bearing, 4-Bolt Flange, 1 1/2" bore	17	1002301	Decal, Caution, General Operator
7	1029514-1	Sprocket, Split, 14 tooth, 2" bore	18	1012872	Decal, Danger, Do Not Operate...
8	1014012	Guide Strap f/ Slide Weldment	19	1041833	Decal, Made in America
9	1010A	Bearing, 4-Bolt Flange, 1 1/2" bore	20	D1158	Nut, 1" - 8, Non-Lock
10	1038224	Wheel, Traction	21	1004782	Nut, 5/16-18 Oval Lock
11	553316	Shaft, Idler Sprocket	22	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange

PARTS LIST

10" MANUAL TAKE-UP CORNER (INSPECTION CORNER)

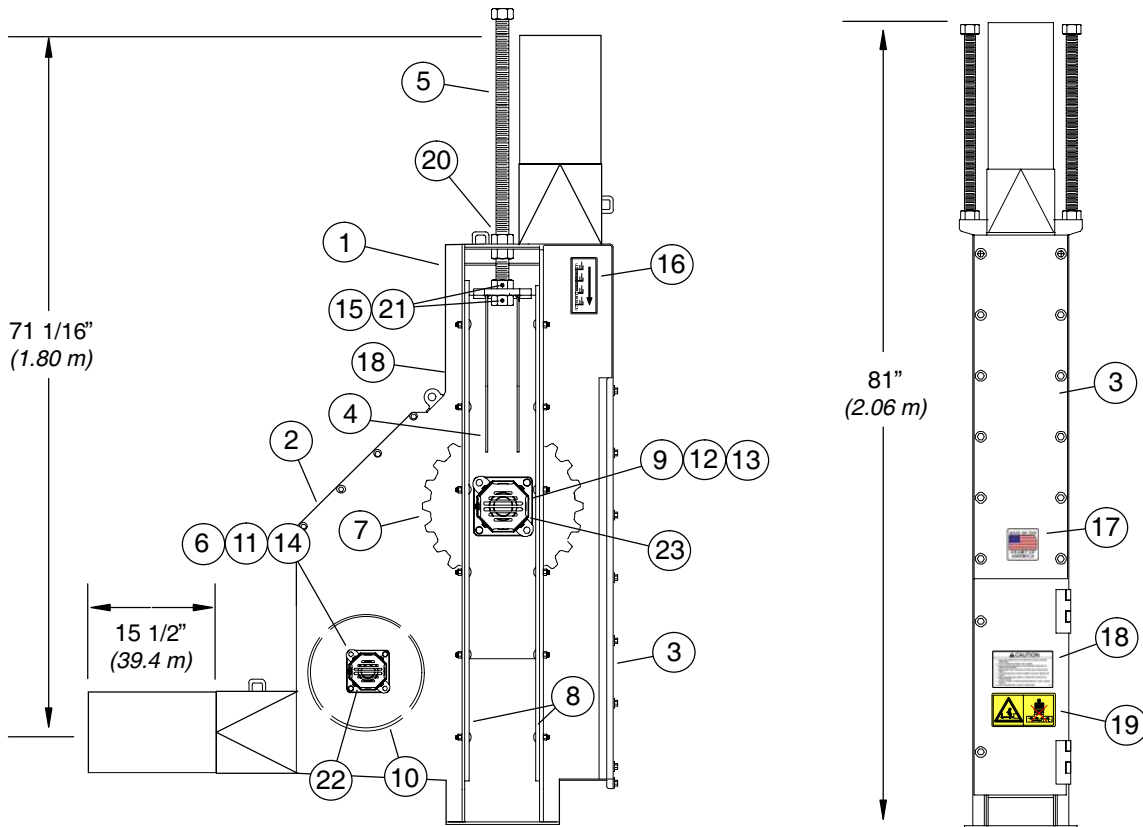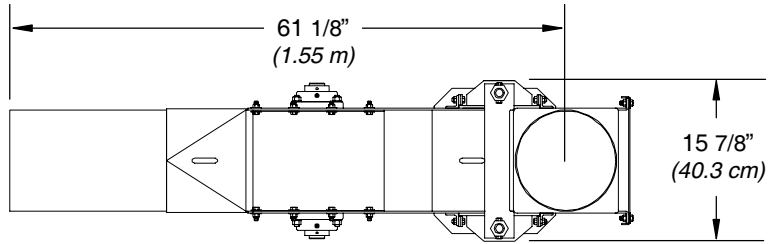




PARTS LIST

10" MANUAL TAKE-UP CORNER (INSPECTION CORNER)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1012618	Manual Take-Up Corner Weldment	13	53060	Key, 5/8" sq. x 3 3/4" long
2	1012875	Cover, Inside Panel	14	4021L1	Key, 1/2" sq. x 2 3/4" long
3	1012602	Inspection Door (rear)	15	4713-1	Bolt, 5/16-18 x 1 3/4"
4	1012979	Slide Weldment	16	1012785	Decal, Chain Travel
5	1012632	Rod, Threaded Adjustable	17	1002301	Decal, Caution, General Operator
6	1010A	Bearing, 4-Bolt Flange, 1 1/2" bore	18	1012872	Decal, Danger, Do Not Operate...
7	420065-1	Sprocket, Split, 16T, 2 7/16" bore	19	1041833	Decal, Made in America
8	1012596	Guide Strap f/ Slide Weldment	20	D1158	Nut, 1" - 8, Non-Lock
9	2214C	Bearing, 4-Bolt Flange, 2" bore	21	1004782	Nut, 5/16-18 Oval Lock
10	631191	Wheel, Traction	22	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange
11	1012628	Shaft, Idler Sprocket	23	1047423	Shaft Cover f/ 2" 4-Bolt Flange
12	1022382	Shaft, Inspection Corner Sprocket			

PARTS LIST

AUTO TAKE-UP CORNER ASSEMBLY f/ 6" MODELS

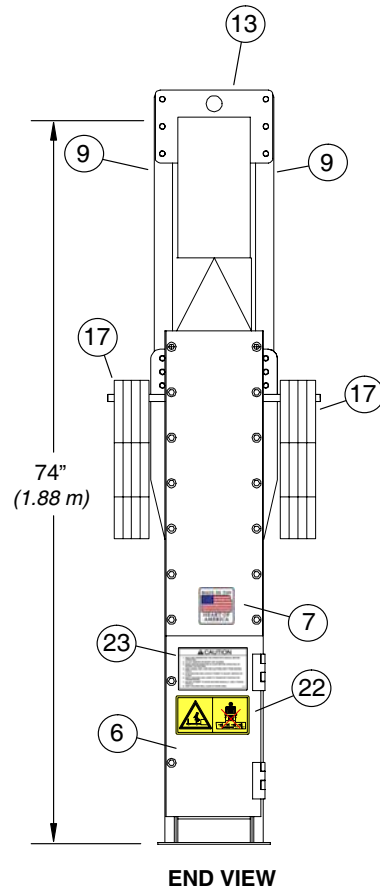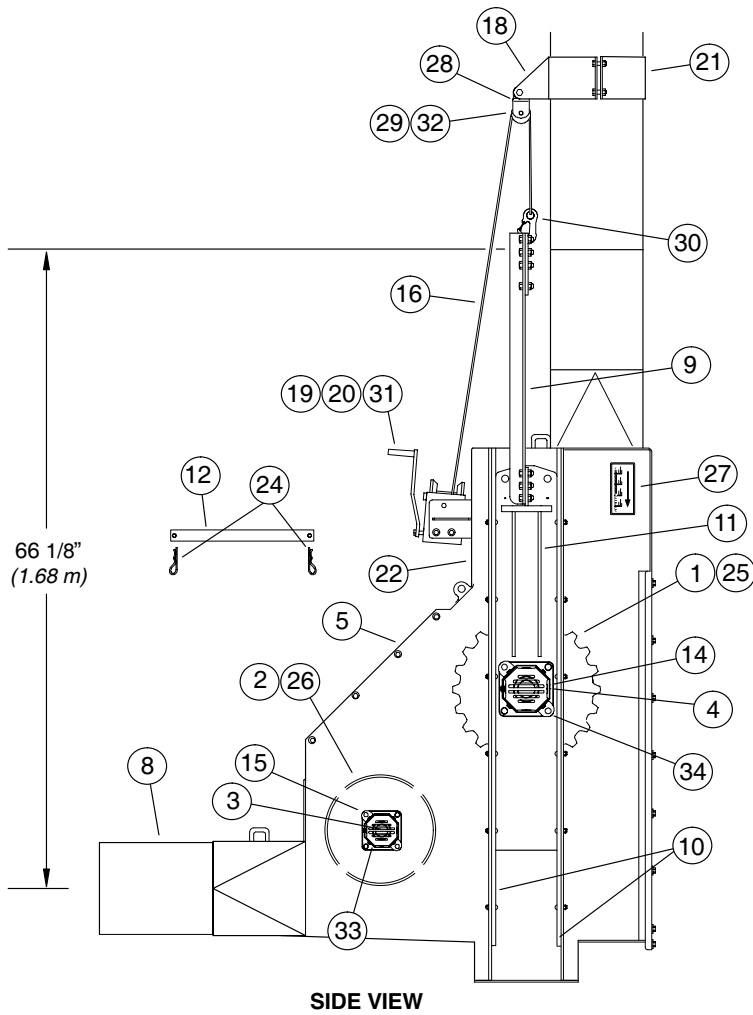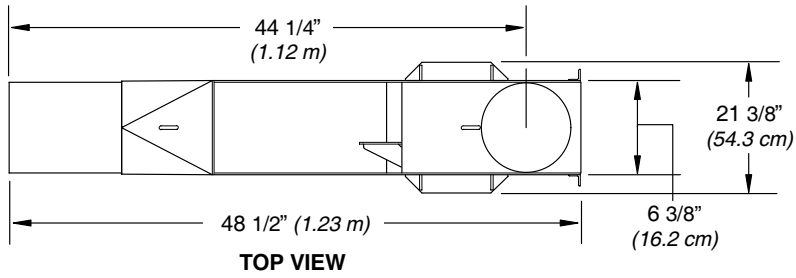




AUTO TAKE-UP CORNER ASSEMBLY

f/ 6" MODELS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1005566-1	Sprocket, Split, 12T, 1 1/2" Bore	18	1024131	Pulley Bracket Weldment
2	1014146	Traction Wheel	19	3335A1	Winch Assembly, K1550
3	1014150	Shaft, Idler Sprocket	20	41595	Winch Handle, K1550
4	553240	Shaft, Inspection Corner	21	5046A1	Half Band, 6" x 4" wide
5	1014092	Top Cover, Inspection Corner	22	1012872	Safety Sign, Danger
6	1014095	Inspection Door (rear)	23	1002301	Safety Sign, Caution
7	1041833	Decal, Made In America	24	635164	Hair Pin, .094" dia. x 2" long
8	1026170	Inspection Corner w/ATU	25	4073A1	Key, 3/8" sq. x 3" long
9	1025946	Side Lift Angle, for 6" ATU	26	4046A1	Key, 1/4" sq. x 3" long
10	1026169	Slide Guide Strap	27	1012785	Decal, Chain Travel
11	1026172	Slide Weldment	28	1007890	Cable Pulley Side
12	1026173	Block Out Bar	29	1008195	Cable Pulley, 1/4" x 3" O.D.
13	1026174	Lifting Plate, for 6" ATU	30	106411	Hook with Safety Clip
14	1010A	Bearing, 4-hole flange, 1-1/2" Bore	31	41600	Keeper Kit for Winch
15	8341D	Bearing, 4-hole flange, 1" Bore	32	50079A1	Bushing, 1" O.D.x 5/8" long
16	1011852	Cable, .250" dia. x 19'-0" long	33	1047432	Shaft Cover f/ 1" 4-Bolt Flange
17	1022554	Weights, 50 lbs. each	34	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange

PARTS LIST

AUTO TAKE-UP CORNER ASSEMBLY **f/ 8" MODELS**

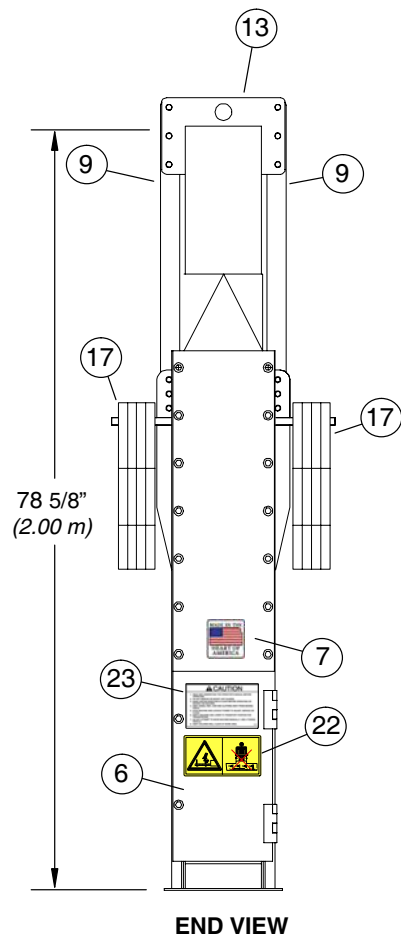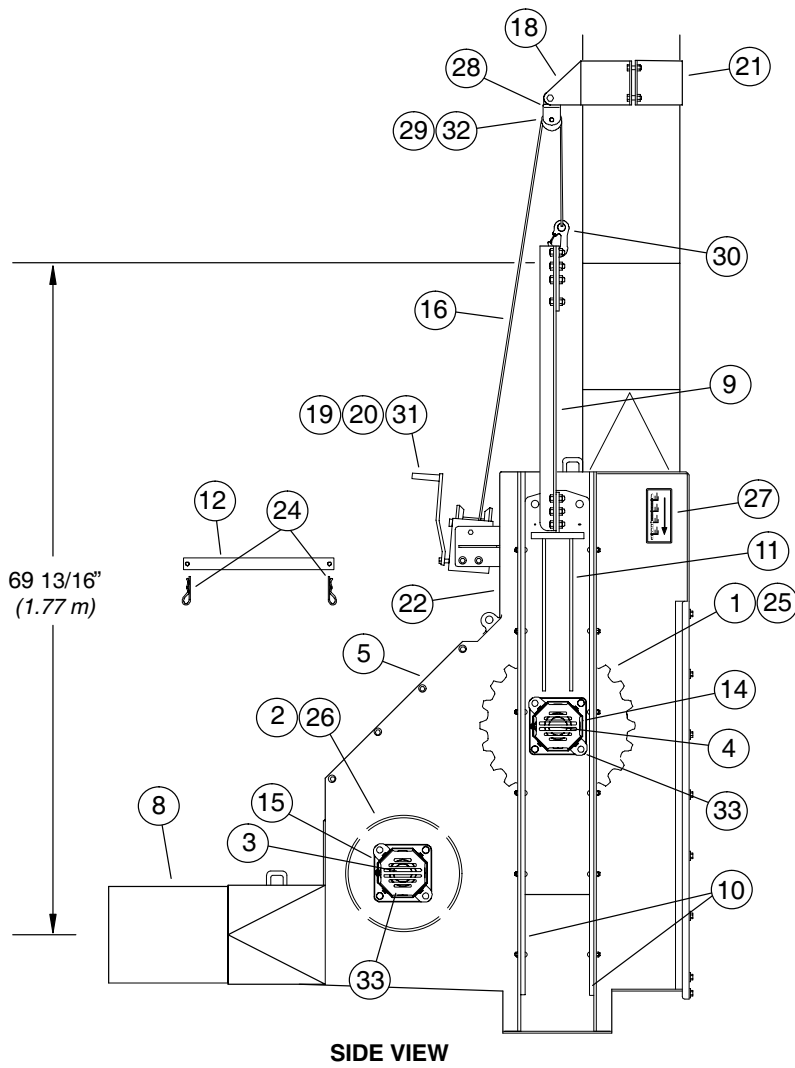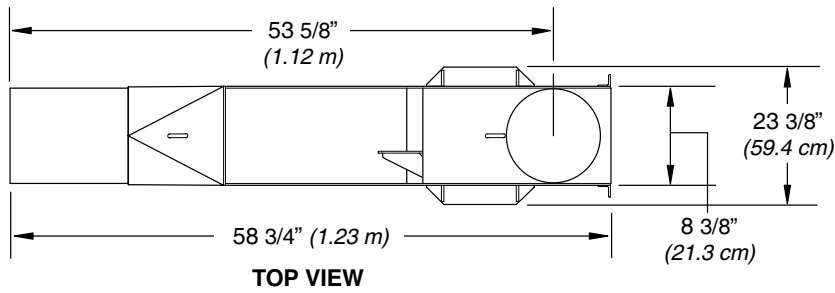




AUTO TAKE-UP CORNER ASSEMBLY

f/ 8" MODELS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1029514-1	Sprocket, Split, 14T, 2" Bore	18	1025230	Pulley Bracket Weldment
2	1038224	Traction Wheel	19	3335A1	Winch Assembly, K1550
3	553316	Shaft, Idler Sprocket	20	41595	Winch Handle, K1550
4	553092	Shaft, Inspection Corner	21	5042A1	Half Band, 8" x 4" wide
5	1013996	Top Cover, Inspection Corner	22	1012872	Safety Sign, Danger
6	1013999	Inspection Door (rear)	23	1002301	Safety Sign, Caution
7	1041833	Decal, Made In America	24	635164	Hair Pin, .094" dia. x 2" long
8	1026121	Inspection Corner w/ATU	25	4021L1	Key, 1/2" sq. x 2 3/4" long
9	1025946	Side Lift Angle, for 8" ATU	26	4021L1	Key, 1/2" sq. x 2 3/4" long
10	1026126	Slide Guide Strap	27	1012785	Decal, Chain Travel
11	1026127	Slide Weldment	28	1007890	Cable Pulley Side
12	1026136	Block Out Bar	29	1008195	Cable Pulley, 1/4" x 3" O.D.
13	1026137	Lifting Plate, for 8" ATU	30	106411	Hook with Safety Clip
14	1010A	Bearing, 4-hole flange, 1-1/2" Bore	31	41600	Keeper Kit for Winch
15	1010A	Bearing, 4-hole flange, 1-1/2" Bore	32	50079A1	Bushing, 1" O.D.x 5/8" long
16	1011852	Cable, .250" dia. x 19'-0" long	33	1047435	Shaft Cover f/ 1-1/2" 4-Bolt Flange
17	1022554	Weights, 50 lbs. each			

PARTS LIST

AUTO TAKE-UP CORNER ASSEMBLY f/ 10" MODELS

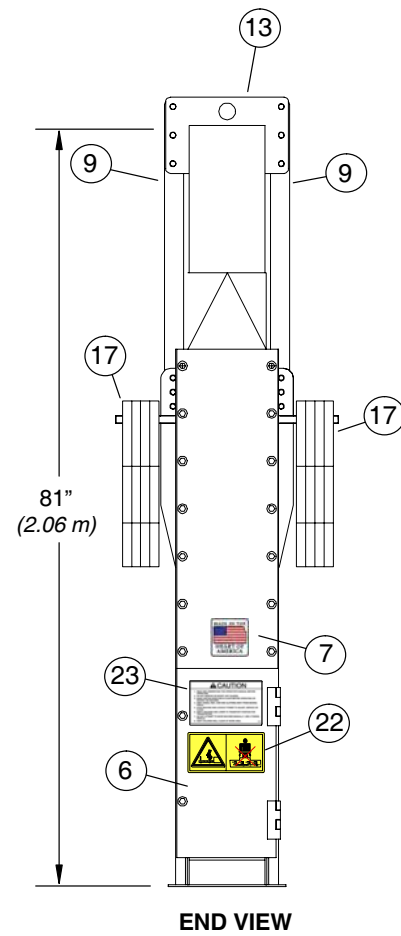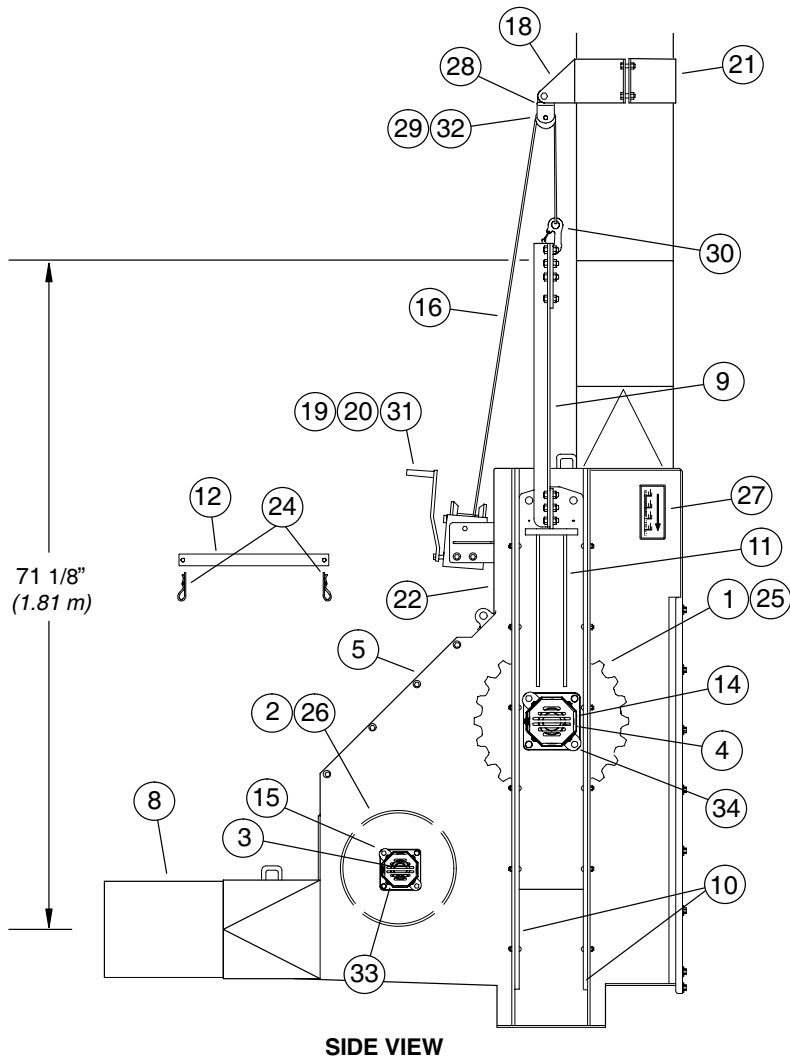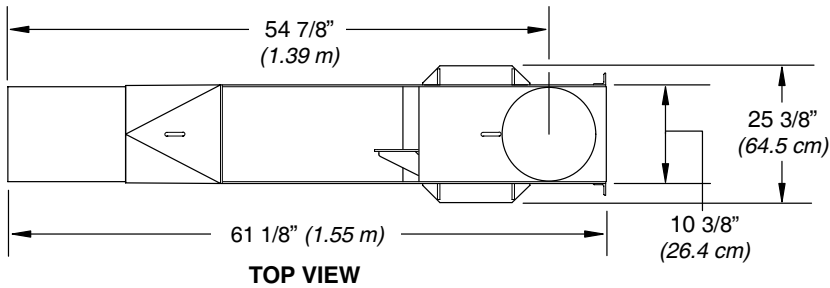

AUTO TAKE-UP CORNER ASSEMBLY **f/ 10" MODELS**

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	420065-1	Sprocket, Split, 16T, 2 7/16" Bore	18	1022979	Pulley Bracket Weldment
2	631191	Traction Wheel	19	3335A1	Winch Assembly, K1550
3	1012628	Shaft, Idler Sprocket	20	41595	Winch Handle, K1550
4	1022382	Shaft, Inspection Corner	21	106207-1	Half Band, 10" x 4" wide
5	1012875	Top Cover, Inspection Corner	22	1012872	Safety Sign, Danger
6	1012602	Inspection Door (rear)	23	1002301	Safety Sign, Caution
7	1041833	Decal, Made In America	24	635164	Hair Pin, .094" dia. x 2" long
8	1025953	Inspection Corner w/ATU	25	53060	Key, 5/8" sq. x 3 3/4" long
9	1025946	Side Lift Angle, for 10" ATU	26	4021L1	Key, 1/2" sq. x 2 3/4" long
10	1026057	Slide Guide Strap	27	1012785	Decal, Chain Travel
11	1025931	Slide Weldment	28	1007890	Cable Pulley Side
12	1025952	Block Out Bar	29	1008195	Cable Pulley, 1/4" x 3" O.D.
13	1025950	Lifting Plate, for 10" ATU	30	106411	Hook with Safety Clip
14	2214C	Bearing, 4-hole flange, 2" Bore	31	41600	Keeper Kit for Winch
15	1010A	Bearing, 4-hole flange, 1 1/2" Bore	32	50079A1	Bushing, 1" O.D.x 5/8" long
16	1011852	Cable, .250" dia. x 19'-0" long	33	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange
17	1022554	Weights, 50 lbs. each	34	1047423	Shaft Cover f/ 2" 4-Bolt Flange


PARTS LIST

90° CORNER ASSEMBLY

f/ 6" MODELS



Ref. No.	Part No.	Description
1	1014072	Corner Weldment, 90°
2	1014088	Inspection Door
3	1010A	Bearing, 1 1/2" Bore
4	1005566-1	Sprocket, Split, 12T, 1 1/2" bore
5	553240	Shaft f/ Corner Sprocket
6	4073A1	Key, 3/8" sq. x 3" long
7	1012872	Decal, Danger: Do Not Operate..
8	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange

The complete corner assembly can be obtained by ordering Part No. 1014073.

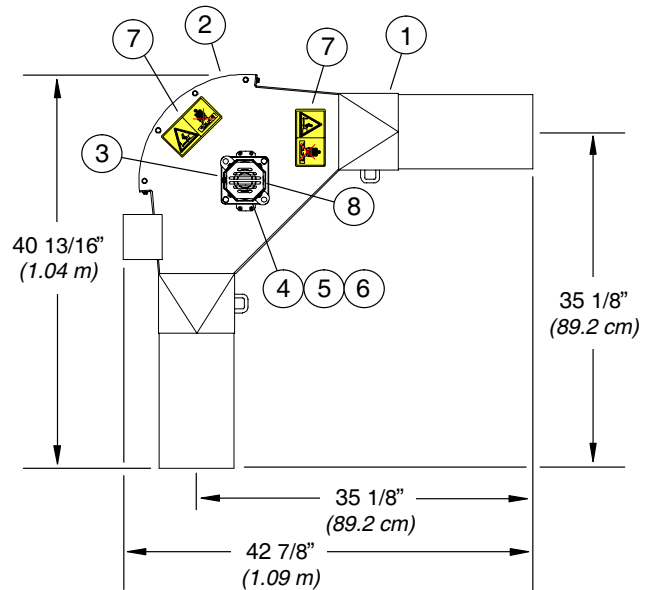

90° DISCHARGE w/ GATE ASSEMBLY

f/ 6" MODELS

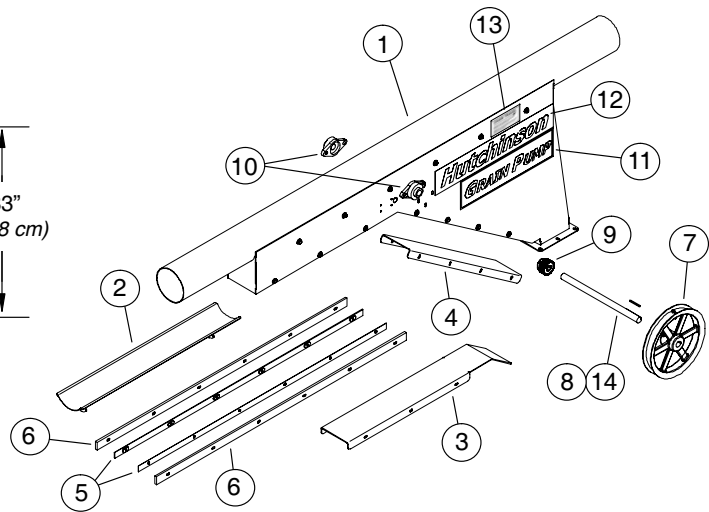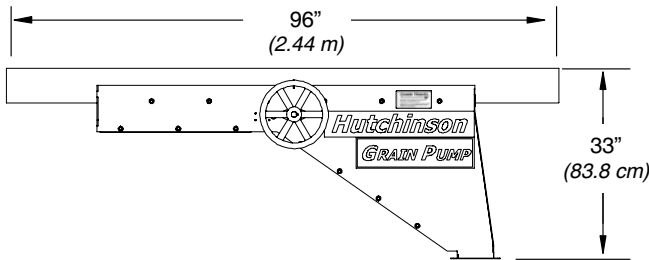

Ref. No.	Part No.	Description
1	1037643	Discharge Spout Weldment
2	1037645	Slide Gate
3	1038955	Door, Upper Access
4	1015248	Panel, Access
5	1038901	Shim f/ Gate Guide Rail
6	1037755	Rail, Gate Guide
7	1011771	Control Wheel

Ref. No.	Part No.	Description
8	1038987	Shaft f/ 90° Discharge
9	1023294	Spur Gear, 22T x 10DP
10	6818D	Bearing, 1", 2 Hole Flange
11	34349	Decal, Grain Pump Logo
12	1001125	Decal, Hutchinson
13	1012785	Decal, Chain Travel
14	4046A1	Key, 1/4" sq. x 3" long


The complete discharge assembly can be obtained by ordering Part No. 1037642

90° CORNER ASSEMBLY

f/ 8" MODELS

Ref. No.	Part No.	Description
1	1013959	Corner Weldment, 90°
2	1017635	Access Door
3	1010A	Bearing, 1 1/2" Bore
4	1013959	Cover Door
5	1029514-1	Sprocket, Split, 14T, 2" bore
6	553316	Shaft f/ Corner Sprocket
7	4021L1	Key, 1/2" sq. x 2 3/4" long
8	1012872	Decal, Danger: Do Not Operate..
9	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange

The complete corner assembly can be obtained by ordering Part No. 1038973.

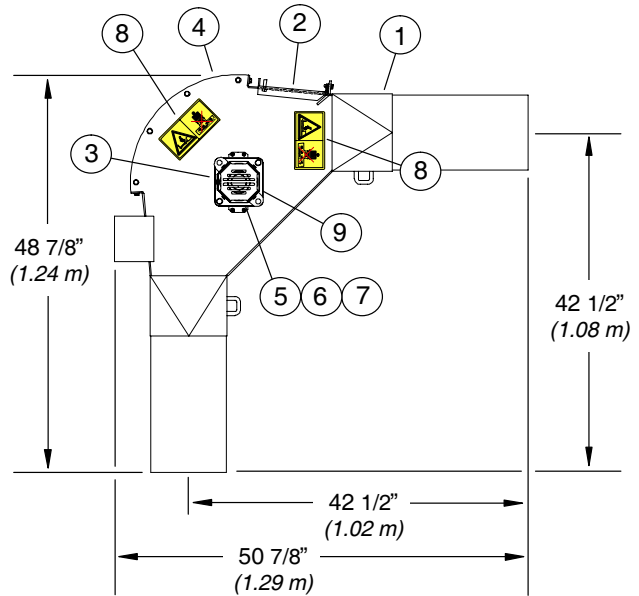


90° CORNER ASSEMBLY

f/ 10" MODELS



Ref. No.	Part No.	Description
1	1012621	Corner Weldment, 90°
2	1017556	Access Door
3	1029183	Bearing, 2" Bore
4	1013008	Cover Door
5	1012624-1	Sprocket, Split, 16T, 3" bore
6	1012626	Shaft f/ Corner Sprocket
7	553512	Key, 3/4" sq. x 3 1/2" long
8	1012872	Decal, Danger: Do Not Operate..
9	1047423	Shaft Cover f/ 2" 4-Bolt Flange

The complete corner assembly can be obtained by ordering Part No. 1012870.

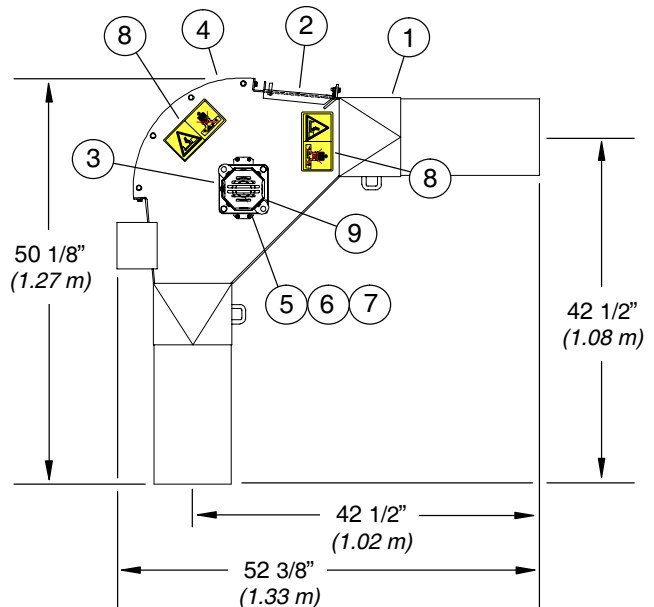

PARTS LIST

90° DISCHARGE w/ 29" GATE f/ 8" MODELS

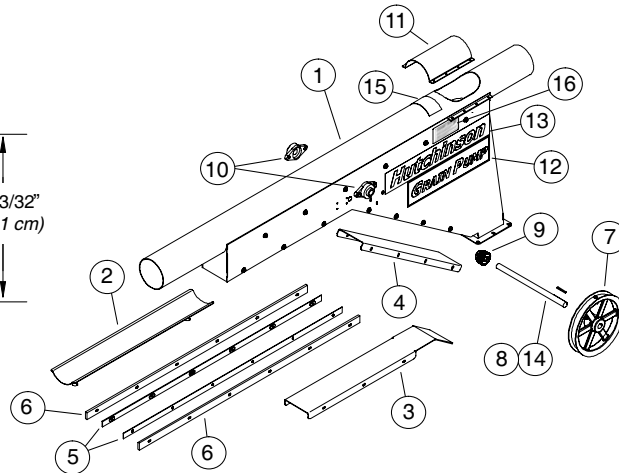
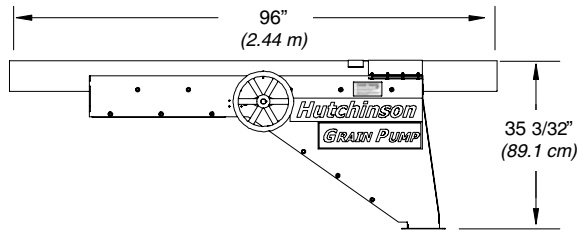


The complete corner assembly can be obtained by ordering Part No. 1037717

Ref. No.	Part No.	Description
1	1037718	Discharge Spout Weldment
2	1037720	Slide Gate
3	1038956	Door, Upper Access
4	1015249	Panel, Access
5	1038901	Shim f/ Gate Guide Rail
6	1037755	Rail, Gate Guide
7	1011771	Control Wheel
8	1038988	Shaft f/ 90° Discharge

Ref. No.	Part No.	Description
9	1023294	Spur Gear, 22T x 10DP
10	6818D	Bearing, 1", 2 Hole Flange
11	1024421	Cover, Inspection Hole
12	34349	Decal, Grain Pump Logo
13	1001125	Decal, Hutchinson
14	4046A1	Key, 1/4" sq. x 3" long
15	1012872	Decal, Danger: Do Not Operate...
16	1012785	Decal, Chain Travel

90° DISCHARGE w/ 54" GATE f/ 8" MODELS

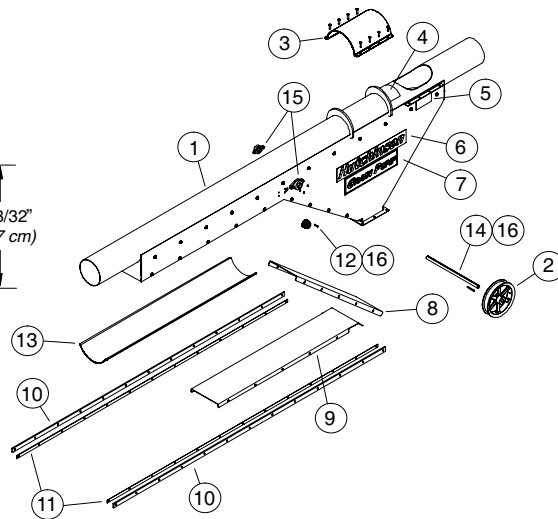
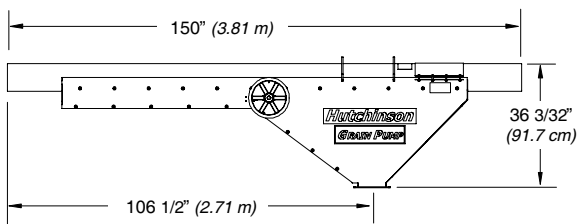


The complete corner assembly can be obtained by ordering Part No. 1037493

Ref. No.	Part No.	Description
1	1037494	Discharge Spout Weldment
2	1034255	Control Wheel
3	1024421	Cover, Inspection Hole
4	1012872	Decal, Danger: Do Not Operate..
5	1012785	Decal, Chain Travel
6	1001125	Decal, Hutchinson
7	34349	Decal, Grain Pump Logo
8	1037503	Panel, Access

Ref. No.	Part No.	Description
9	1038957	Door, Upper Access
10	1038946	Rail, Gate Guide
11	1038952	Shim f/ Gate Rail Guide
12	1023294	Spur Gear, 22T x 10DP
13	1037500	Slide gate
14	1038988	Shaft f/ 90° Discharge
15	6818D	Bearing, 1", 2 Hole Flange
16	4046A1	Key, 1/4" sq. x 3" long



90° DISCHARGE w/ 29" GATE f/ 10" MODELS

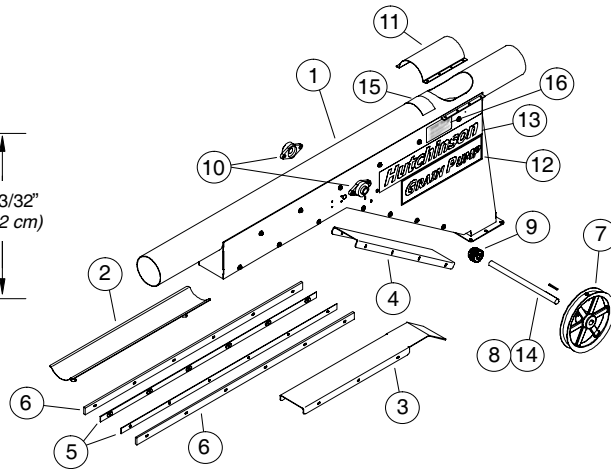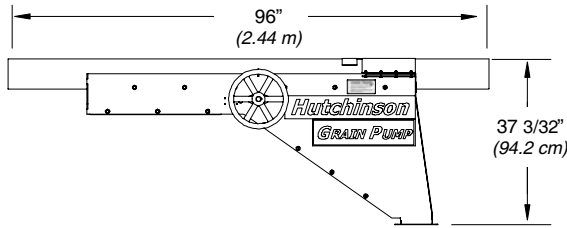

The complete corner assembly can be obtained by ordering Part No. 1037684

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1037685	Discharge Spout Weldment	9	1023294	Spur Gear, 22T x 10DP
2	1037687	Slide Gate	10	6818D	Bearing, 1", 2 Hole Flange
3	1038958	Door, Upper Access	11	50005A1	Cover, Inspection Hole
4	1015250	Panel, Access	12	34349	Decal, Grain Pump Logo
5	1038901	Shim f/ Gate Guide Rail	13	1001125	Decal, Hutchinson
6	1037755	Rail, Gate Guide	14	4046A1	Key, 1/4" sq. x 3" long
7	1011771	Control Wheel	15	1012872	Decal, Danger: Do Not Operate...
8	1038989	Shaft f/ 90° Discharge	16	1012785	Decal, Chain Travel

90° DISCHARGE w/ 54" GATE f/ 10" MODELS

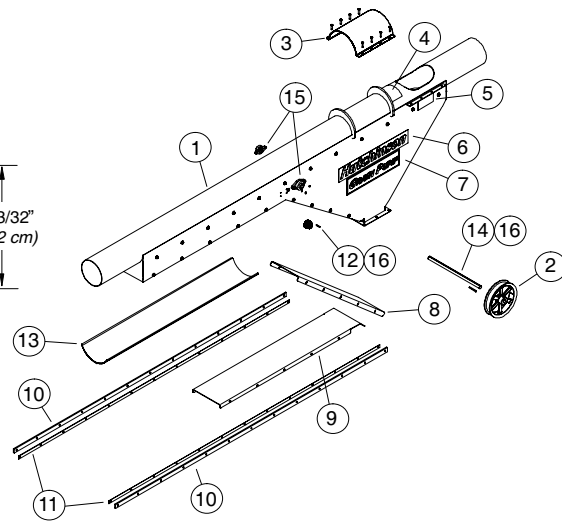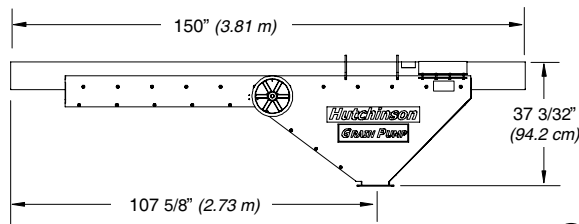

The complete corner assembly can be obtained by ordering Part No. 1037493


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1035648	Discharge Spout Weldment	9	1038959	Door, Upper Access
2	1034255	Control Wheel	10	1038946	Rail, Gate Guide
3	50005A1	Cover, Inspection Hole	11	1038952	Shim f/ Gate Rail Guide
4	1012872	Decal, Danger: Do Not Operate..	12	1023294	Spur Gear, 22T x 10DP
5	1012785	Decal, Chain Travel	13	1035646	Slide gate
6	1001125	Decal, Hutchinson	14	1038989	Shaft f/ 90° Discharge
7	34349	Decal, Grain Pump Logo	15	6818D	Bearing, 1", 2 Hole Flange
8	1036836	Panel, Access	16	4046A1	Key, 1/4" sq. x 3" long

PARTS LIST


DRIVE CORNER ASSEMBLY

f/ 6" MODELS

Drive Corner (Standard)

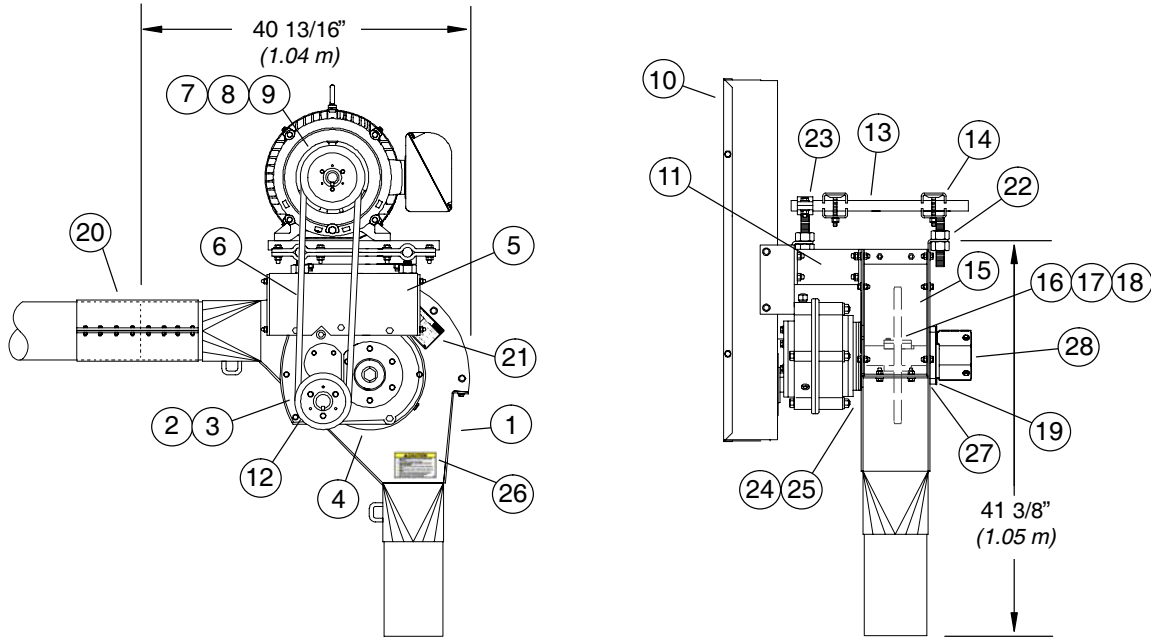

Drive Corner (Reversed)

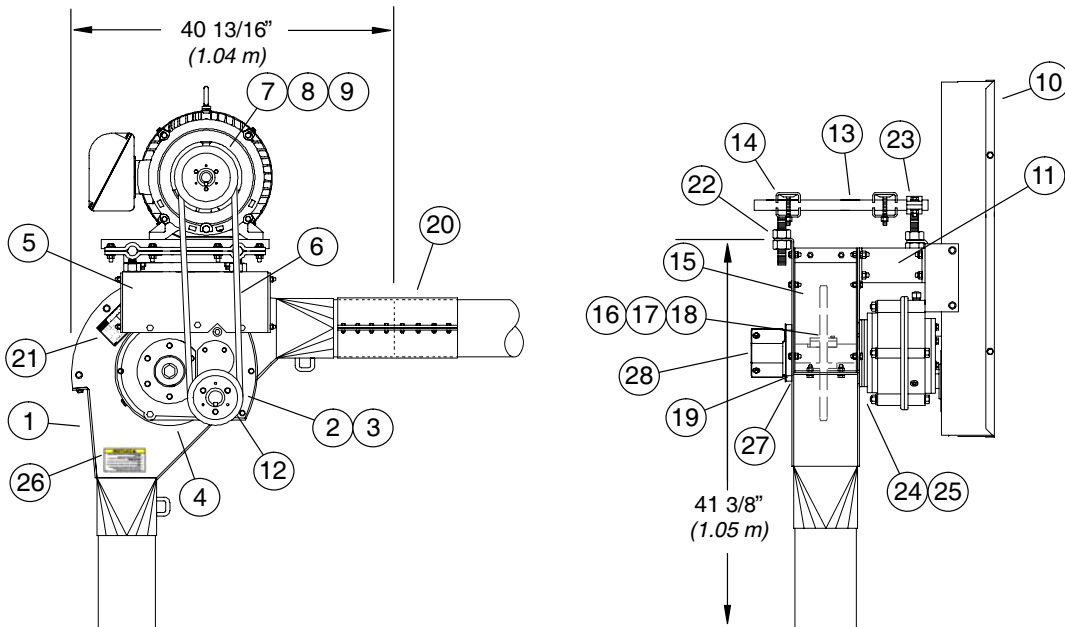

If two drive corners are used (15 hp only), the reversed drive corner would take the place of the upper 90° Standard Corner located above the lower Standard Corner that is nearest the dump hopper.

To obtain the reversed Drive Corner for the 15 hp system, order: Part No. 1028373-REV

DRIVE CORNER ASSEMBLY

f/ 6" MODELS

All items are used on all 6" Drive Corners unless otherwise noted

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1024797	Drive Corner Weldment f/ 5, 7 1/2 & 10 hp	(8)	3192A1	Bushing, QD SK 1 5/8" bore f/ 15 hp
(1)	1028374	Drive Corner Weldment f/ 15 hp (1028374-REV see Page P-20)	(8)	3089A1	Bushing, QD SD 1 5/8" bore f/ 20 hp
(1)	1014074	Drive Corner Weldment f/ 20, 25 & 30 hp	(8)	3280A1	Bushing, QD SD 17/8" bore f/ 25 & 30 hp
2	3259A1	Sheave, 6.4" 1B f/ 5 & 7 1/2 hp	9	4048A1	Key, 5/16" sq. x 2" long f/ 5, 7 1/2 & 10 hp
(2)	3234A1	Sheave, 6.6" 2B f/ 10 hp	(9)	1038D	Key, 3/8" sq. x 2" long f/ 15 & 20 hp
(2)	3090A1	Sheave, 8.6" 2B f/ 15 hp	(9)	4050A1	Key, 1/2" sq. x 2" long f/ 25 & 30 hp
(2)	3267A1	Sheave, 5.6" 3B f/ 20 hp	10	130258	Belt Guard
(2)	420079	Sheave, 5.6" 4B f/ 25 hp	11	1014118	Bracket, Support, f/ 5, 7 1/2 & 10 hp
(2)	1007962	Sheave, 8.0" 4B f/ 30 hp	(11)	1028883	Bracket, Support, f/ 15 hp
3	3077A1	Bushing, SDS 1 1/8" Bore f/ 5, 7 1/2 & 10 hp	(11)	1012885	Bracket, Support, f/ 20, 25 & 30 hp
(3)	3072A1	Bushing, SK 1 1/4" Bore f/ 15 hp	12	41884	Cooling Fan, f/ 20, 25 & 30 hp
(3)	3278A1	Bushing, SD 1 7/16" Bore f/ 20 & 25 hp	13	50859A1	Mounting Rod. Motor
(3)	3191A1	Bushing, SK 1 7/16" f/ 30 hp	14	50435A1	Strap, Top Mounting
4	3139A91	Reducer, SCXT 215 f/ 5, 7 1/2 & 10 hp	15	1014088	Inspection Door
(4)	3140A91	Reducer, SCXT 315 f/ 15 hp	16	1005565-1	Sprocket, Split, 12T 2" bore
(4)	3141A91	Reducer, SCXT 415 f/ 20 & 25 hp	17	1014301	Shaft, Drive Corner Sprocket f/ 5, 7 1/2 & 10 hp
(4)	1051155	Reducer, SCXT 409 f/ 30 hp	(17)	1028880	Shaft, Drive Corner Sprocket f/ 15 hp
5	1014111	Bracket, Reducer f/ 5, 7 1/2 & 10 hp	(17)	1014282	Shaft, Drive Corner Sprocket f/ 20, 25 & 30 hp
(5)	553383	Bracket, Reducer f/ 15 hp	18	4021L1	Key, 1/2" sq. x 2 3/4" long
(5)	1014182	Bracket, Reducer f/ 20, 25 & 30 hp	19	1010A	Bearing, 4 Hole 1 1/2" bore
6	40125	Belt, B-68 f/ 5, 7 1/2, 25 & 30 hp	20	6309A	Connecting band, 6" x 24"
(6)	1009128	Belt, B-70 f/ 10 hp	21	1012872	Decal, Danger: Do Not Operate...
(6)	40126	Belt, B-71 f/ 15 hp	22	D1152	Nut, 3/4"-10 Non-Lock
7	3259A1	Sheave, 6.4" 1B f/ 5 & 7 1/2 hp	23	2139C	Strap, Top
(7)	3266A1	Sheave, 6.8" 2B f/ 10 hp	24	553345	Plate, Spacer f/ 5, 7 1/2 & 10 hp
(7)	3075A1	Sheave, 9.4" 2B f/ 15 hp	(24)	553366	Plate, Spacer f/ 15 hp
(7)	3242A1	Sheave, 6.0" 3B f/ 20 hp	(24)	553355	Plate, Spacer f/ 20, 25 & 30 hp
(7)	3249A1	Sheave, 6.0" 4B f/ 25 hp	25	1022752	Seal, UHMW f/ 5, 7 1/2 & 10 hp
(7)	420077	Sheave, 5.4" 4B f/ 30 hp	(25)	1028881	Seal, UHMW f/ 15 hp
8	3077A1	Bushing, QD SDS, 1 1/8" bore f/ 5 hp	(25)	1022753	Seal, UHMW f/ 20, 25 & 30 hp
(8)	3087A1	Bushing, QD SDS 1 3/8" bore f/ 7 1/2 & 10 hp	26	1002301	Decal, Caution: General Operator
			27	1022754	Seal, UHMW
			28	1047435	Shaft Cover f/ 1 1/2" 4-Bolt Flange

For 50 hz Drive Corners the following belts, sheaves and bushings need to be used:

20 hp (15 kw)

- Item 2, Sheave 3267A1, 5.6 3B
- Item 3, Bushing 3278A1, QD SD 1 7/16" bore
- Item 6, Belt 40124, B-66
- Item 7, Sheave 3244A1, 7.4 3B
- Item 8, Bushing 3192A1, QD SK 1 5/8" bore

25 hp (18.5 kw)

- Item 2, Sheave 420079, 5.6 4B
- Item 3, Bushing 3278A1, QD SD 1 7/16" bore
- Item 6, Belt 1009128, B-70
- Item 7, Sheave 3250A1, 7.4 4B
- Item 8, Bushing 3193A1, QD SK 1 7/8" bore

30 hp (22 kw)


- Item 2, Sheave 3311A1, 6.4 4B
- Item 3, Bushing 3278A1, QD SD 1 7/16" bore
- Item 6, Belt 40124, B-66
- Belt 40119, B-54 (rev drives)
- Item 7, Sheave 420077, 5.4 4B
- Item 8, Bushing 1037736, QD SD 48 mm bore

PARTS LIST


DRIVE CORNER ASSEMBLY

f/ 8" MODELS

Drive Corner (Standard)

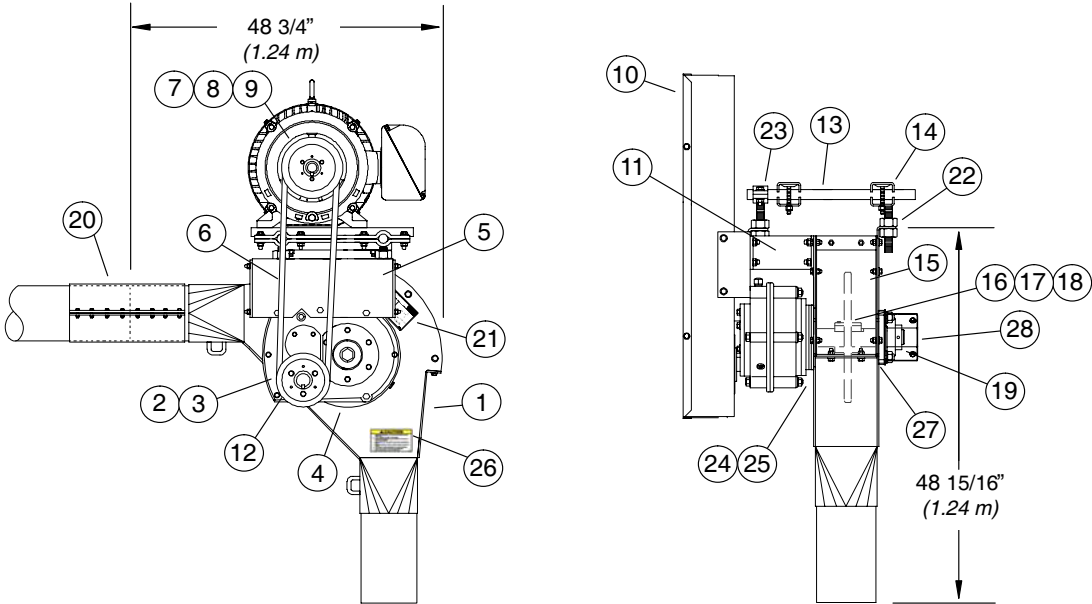

Drive Corner (Reversed)

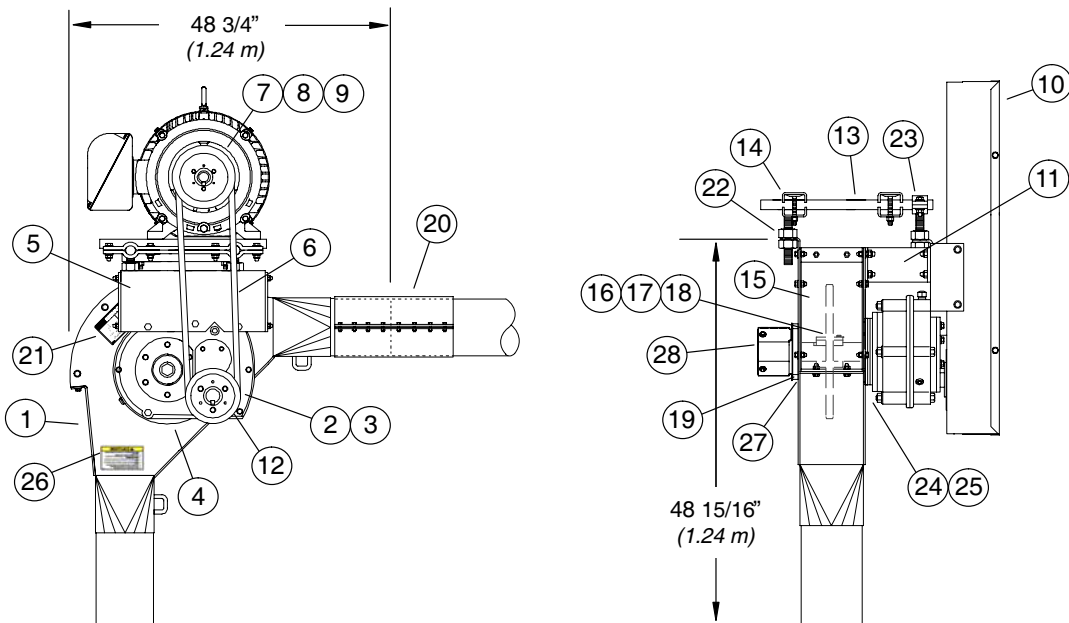

If two drive corners are used, the reversed drive corner would take the place of the upper 90° Standard Corner located above the lower Standard Corner that is nearest the dump hopper.

To obtain the reversed Drive Corner for the system, order: Part No. 1038967-REV f/ 15 hp;
Part No. 1038968-REV f/ 20 hp and Part No. 1038969-REV f/ 30 hp

DRIVE CORNER ASSEMBLY

f/ 8" MODELS

All items are used on all 8" Drive Corners unless otherwise noted

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1013961	Drive Corner Weldment f/ 15, 20 & 30 hp (See Page P-22 for Reverse Drive Corners)	11	1014118	Bracket, Support, f/ 5, 7 1/2 & 10 hp
(1)	1028221	Drive Corner Weldment f/ 40 hp	(11)	1028883	Bracket, Support, f/ 15 hp
2	3265A1	Sheave, 6.8" 2B f/ 15 hp	(11)	1012885	Bracket, Support, f/ 20, 25 & 30 hp
(2)	3269A1	Sheave, 6.8" 3B f/ 20 & 30 hp	12	41884	Cooling Fan, f/ 20, 25 & 30 hp
(2)	3080A1	Sheave, 9.4" 3B f/ 40 hp	13	2137C	Mounting Rod. Motor
3	3277A1	Bushing, SDS 1 7/16" bore f/ 15 hp	14	50435A1	Strap, Top Mounting
(3)	3278A1	Bushing, SD 1 7/16" bore f/ 20 hp	(14)	50434A1	Clip, Bottom Mounting
(3)	3312A1	Bushing, SD 1 15/16" bore f/ 30 hp	15	1013969	Inspection Door
(3)	3048L1	Bushing, SK 2 3/16" bore f/ 40 hp	16	1029514-1	Sprocket, Split, 14T 2" bore
4	3141A91	Reducer, SCXT 415 f/ 15 & 20 hp	17	1014123	Shaft, Drive Corner Sprocket f/ 15 hp
(4)	3142A91	Reducer, SCXT 515 f/ 30 hp	(17)	1014123	Shaft, Drive Corner Sprocket f/ 20 hp
(4)	3143A91	Reducer, SCXT 615 f/ 40 hp	(17)	1014408	Shaft, Drive Corner Sprocket f/ 30 hp
5	1013990	Bracket, Reducer f/ 15 & 20 hp	(17)	1027691	Shaft, Drive Corner Sprocket f/ 40 hp
(5)	1014193	Bracket, Reducer f/ 30 hp	18	4021L1	Key, 1/2" sq. x 2 3/4" long
(5)	1027692	Bracket, Reducer f/ 40 hp	19	2214C	Bearing, 4 Hole 2" bore
6	40126	Belt, B-71 f/ 15, 20 & 30 hp	20	8309A	Connecting band, 8" x 27"
(6)	40130	Belt, B-88 f/ 40 hp	21	1012872	Decal, Danger: Do Not Operate...
7	3265A1	Sheave, 6.4" 2B f/ 15 hp	22	D1152	Nut, 3/4"-10 Non-Lock
(7)	3268A1	Sheave, 6.4" 3B f/ 20 & 30 hp	23	2139C	Strap, Top
(7)	3270A1	Sheave, 8.6" 3B f/ 40 hp	24	553355	Plate, Spacer f/ 15 & 20 hp
8	3277A1	Bushing, SDS, 1 7/16" bore f/ 15 hp	(24)	553362	Plate, Spacer f/ 30 hp
(8)	3278A1	Bushing, SD 1 7/16" bore f/ 20 hp	(24)	1017743	Plate, Spacer f/ 40 hp
(8)	3312A1	Bushing, SD 1 15/16" bore f/ 30 hp	25	1022753	Seal, UHMW f/ 15, 20 & 30 hp
(8)	3048L1	Bushing, SK 2 3/16" bore f/ 40 hp	(25)	1022755	Seal, UHMW f/ 40 hp
9	1038D	Key, 3/8" sq. x 2" long f/ 15 & 20 hp	26	1002301	Decal, Caution: General Operator
(9)	---	Key furnished w/ Bushing f/ 30 & 40 hp	27	1022754	Seal, UHMW
10	1012886	Belt Guard f/ 15, 20 & 30 hp	28	1047423	Shaft Cover f/ 2" 4-Bolt Flange
(10)	1017737	Belt Guard f/ 40 hp			

For 50 Hz Drive Corners the following belts, sheaves and bushings need to be used:

15 hp (11 kw)

- Item 2, Sheave 3235A1, 7.4 2B**
- Item 3, Bushing 3191A1, QD SK 1 7/16" bore**
- Item 6, Belt 40127, B-75**
- Item 7, Sheave 3090A1, 8.6 2B**
- Item 8, Bushing 1031684, QD SK 42 mm bore**

20 hp (15 kw)

- Item 2, Sheave 3244A1, 7.4 3B**
- Item 3, Bushing 3191A1, QD SK 1 7/16" bore**
- Item 6, Belt 40127, B-75**
- Item 7, Sheave 3250A1, 7.4 3B**
- Item 8, Bushing 1031684, QD SK 42 mm bore**

30 hp (22 kw)

- Item 2, Sheave 3244A1, 7.4 3B**
- Item 3, Bushing 3194A1, QD SK 1 15/16" bore**
- Item 6, Belt 40217, B-75**
- Item 7, Sheave 3270A1, 8.6 3B**
- Item 8, Bushing 1029784, QD SK 48 mm bore**

40 hp (30 kw)


- Item 2, Sheave 3250A1, 7.4 4B**
- Item 3, Bushing 3048L1, QD SK 2 3/16" bore**
- Item 6, Belt 1023084, B-84**
- Item 7, Sheave 3273A1, 8.6 4B**
- Item 8, Bushing 1026803, QD SK 55 mm bore**

PARTS LIST


DRIVE CORNER ASSEMBLY

f/ 10" MODELS

Drive Corner (Standard)

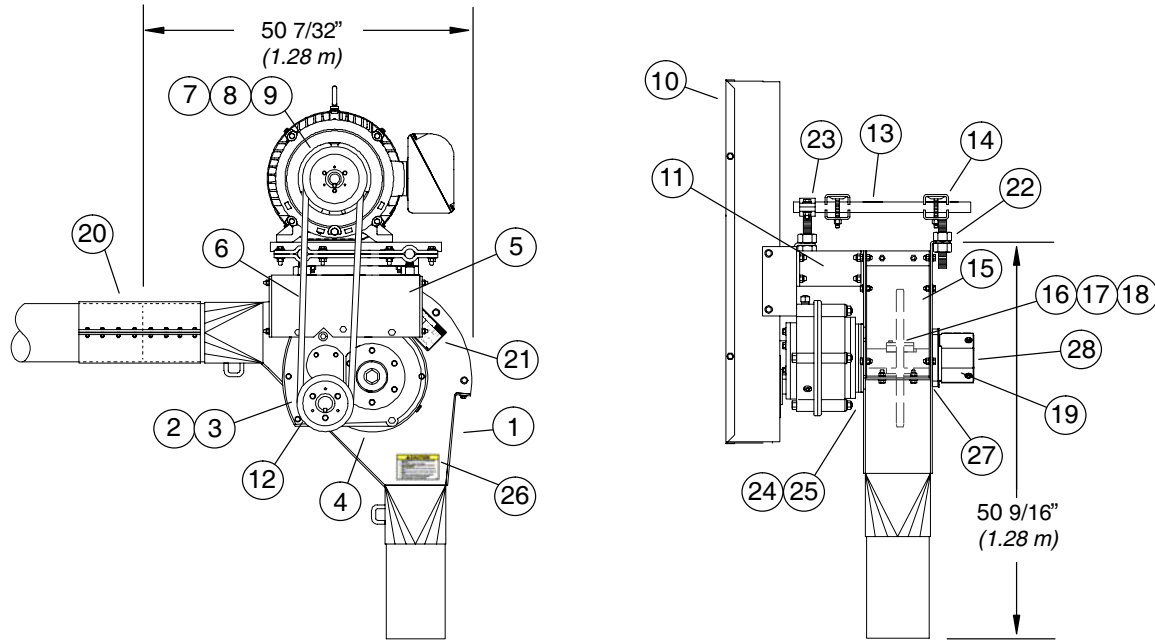

Drive Corner (Reversed)

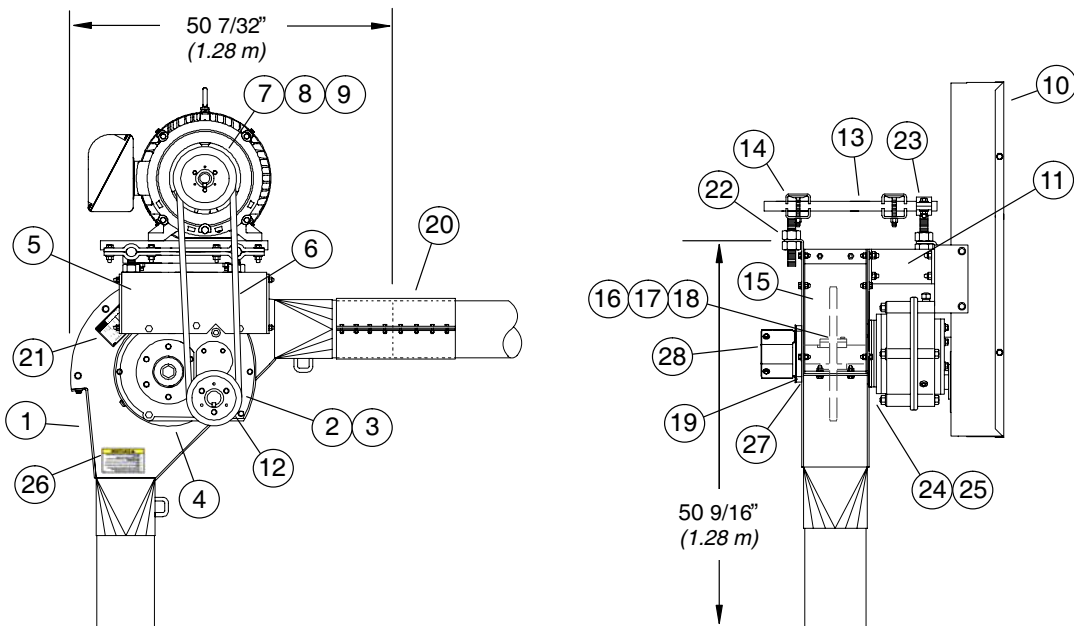

If two drive corners are used, the reversed drive corner would take the place of the upper 90° Standard Corner located above the lower Standard Corner that is nearest the dump hopper.

To obtain the reversed Drive Corner for the system, order: Part No. 1012892-REV f/ 20 hp;
 Part No. 1012894-REV f/ 30 hp; Part No. 1017716-REV f/ 40 hp and Part No. 1028550-REV f/ 50 hp

DRIVE CORNER ASSEMBLY

f/ 10" MODELS

All items are used on all 10" Drive Corners unless otherwise noted

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1012689	Drive Corner Weldment f/ 20 & 30 hp (See Page P-24 for Reversed Drive Corners)	10	1012886	Belt Guard f/ 20 & 30 hp
(1)	1017715	Drive Corner Weldment f/ 40 & 50 hp (See Page P-24 for Reversed Drive Corners)	(10)	1017737	Belt Guard f/ 40 & 50 hp
2	3244A1	Sheave, 7.4" 3B f/ 20 hp	11	1012885	Bracket, Support, f/ 20 hp
(2)	3270A1	Sheave, 8.6" 3B f/ 30 hp	(11)	1012895	Bracket, Support, f/ 30 hp
(2)	3271A1	Sheave, 11" 3B f/ 40 & 50 hp	(11)	1017728	Bracket, Support, f/ 40 & 50 hp
3	3191A1	Bushing, SK 1 7/16" bore f/ 20 hp	12	41884	Cooling Fan, f/ 20, 25 & 30 hp
(3)	3194A1	Bushing, SK 1 15/16" bore f/ 30 hp	13	2137C	Mounting Rod. Motor
(3)	3048L1	Bushing, SK 2 3/16" bore f/ 40 & 50 hp	14	50435A1	Strap, Top Mounting
4	3141A91	Reducer, SCXT 415 f/ 20 hp	(14)	50434A1	Clip, Bottom Mounting
(4)	3142A91	Reducer, SCXT 515 f/ 30 hp	15	1013008	Inspection Door
(4)	3143A91	Reducer, SCXT 615 f/ 40 & 50 hp	16	1012624-1	Sprocket, Split, 16T 3" bore
5	1012633	Bracket, Reducer f/ 20 hp	17	1012629	Shaft, Drive Corner Sprocket f/ 20 hp
(5)	1012634	Bracket, Reducer f/ 30 hp	(17)	1012630	Shaft, Drive Corner Sprocket f/ 30 hp
(5)	1017732	Bracket, Reducer f/ 40 & 50 hp	(17)	1027691	Shaft, Drive Corner Sprocket f/ 30 hp
6	1001929	Belt, B-73 f/ 20 hp	(17)	1017727	Shaft, Drive Corner Sprocket f/ 40 & 50 hp
(6)	40125	Belt, B-68 f/ 30 hp reversed	18	553512	Key, 3/4" sq. x 3 1/2" long
(6)	40128	Belt, B-78 f/ 30 hp & 50 hp reversed	19	1029183	Bearing, 4 Hole 2" bore
(6)	40131	Belt, B-90 f/ 40 hp	20	1012D	Connecting Band, 10" x 30"
(6)	1016262	Belt, B-93 f/ 50 hp	21	1012872	Decal, Danger: Do Not Operate...
7	3242A1	Sheave, 6.0" 3B f/ 20 hp	22	D1152	Nut, 3/4"-10 Non-Lock
(7)	3269A1	Sheave, 6.8" 3B f/ 30 hp	23	2139C	Strap, Top
(7)	3270A1	Sheave, 8.6" 3B f/ 40 hp	24	553355	Plate, Spacer f/ 20 hp
(7)	3080A1	Sheave, 9.4" 3B f/ 50 hp	(24)	553362	Plate, Spacer f/ 30 hp
8	3089A1	Bushing, SD, 1 5/8" bore f/ 20 hp	(24)	1017743	Plate, Spacer f/ 40 & 50 hp
(8)	3280A1	Bushing, SD 1 7/8" bore f/ 30 hp	25	1022753	Seal, UHMW f/ 20 & 30 hp
(8)	3281A1	Bushing, SK 2 1/8" bore f/ 40 & 50 hp	(25)	1022755	Seal, UHMW f/ 40 & 50 hp
9	1038D	Key, 3/8" sq. x 2" lg f/ 20 hp	26	1002301	Decal, Caution: General Operator
(9)	4050A1	Key, 1/2" sq. x 2" lg f/ 30, 40 & 50 hp	27	1022753	Seal, UHMW
			28	1047423	Shaft Cover f/ 2" 4-Bolt Flange

For 50 hz Drive Corners the following belts, sheaves and bushings need to be used:

20 hp (15 kw)

- Item 2, Sheave 3269A1, 7.4 3B
- Item 3, Bushing 3194A1, QD SD 1 15/16" bore
- Item 6, Belt 1009129, B-73
- Item 7, Sheave 3269A1, 6.8 3B
- Item 8, Bushing 3089A1, QD SD 1 5/8" bore

30 hp (22 kw)

- Item 2, Sheave 3249A1, 7.4 3B
- Item 3, Bushing 3194A1, QD SK 1 15/16" bore
- Item 6, Belt 40128, B-78
- Item 7, Sheave 1006114, 8.0 3B
- Item 8, Bushing 1029784, QD SK 14 mm bore

40 hp (30 kw)


- Item 2, Sheave 3270A1, 8.6 3B
- Item 3, Bushing 3048L1, QD SK 2 3/16" bore
- Item 6, Belt 40130, B-88
- Item 7, Sheave 3270A1, 8.6 3B
- Item 8, Bushing 3281A1, QD SK 2 1/8" bore

50 hp (37 kw)

- Item 2, Sheave 3080A1, 9.4 3B
- Item 3, Bushing 3048L1, QD SK 2 3/16" bore
- Item 6, Belt 40131, B-90
- Item 7, Sheave 3080A1, 9.4 4B
- Item 8, Bushing 3281A1, QD SK 2 1/8" bore

PARTS LIST


GROUND CONTROL WHEEL KIT (w/ CHAIN)

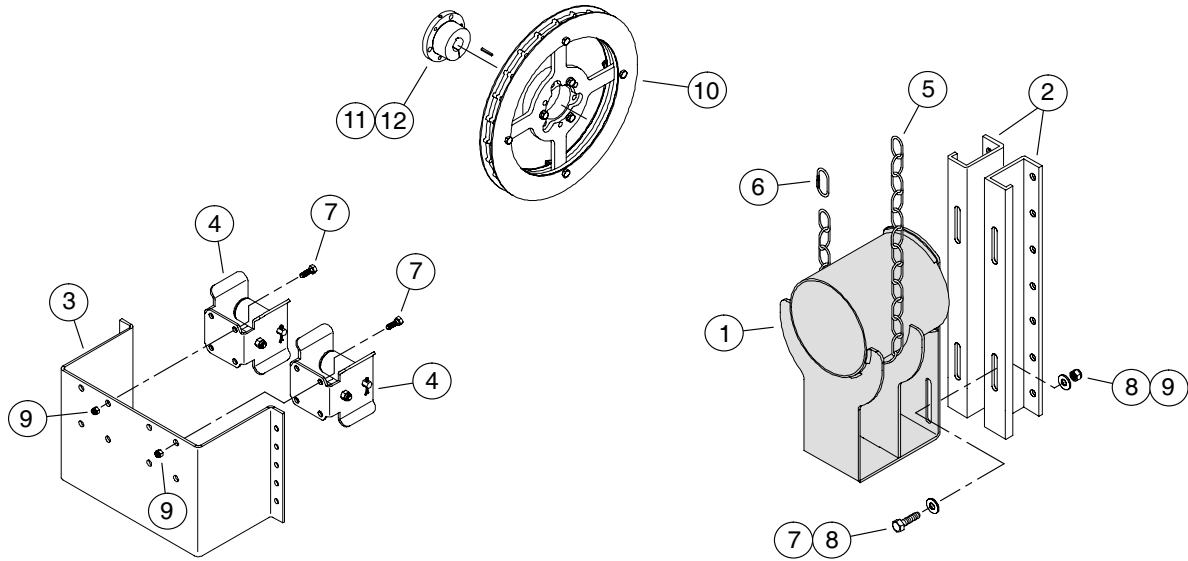

Ref. No.	Part No.	Description
1	1042186	Mount, Lower Chain
2	1011743	Plate, Bin Wall Mount
3	1042178	Bracket, Upper Wall
4	1042174	Roller Assembly
5	1042193	Chain, 3/16" x 120' long
6	1042190	Coupler, Threaded Chain

Ref. No.	Part No.	Description
7	33060	Bolt, 3/8-16 x 1" G5 PLT
8	33024	Washer, 3/8" Flat PLT
9	33136	Nut, 3/8-16 Nylon Lock PLT
10	1042153	Chain Wheel Ay. (Sprocket)
11	1036838	Bushing, 1" SF QD
12	4046A1	Key, 1/4" sq. x 3" long

GROUND CONTROL WHEEL (w/ CABLE)

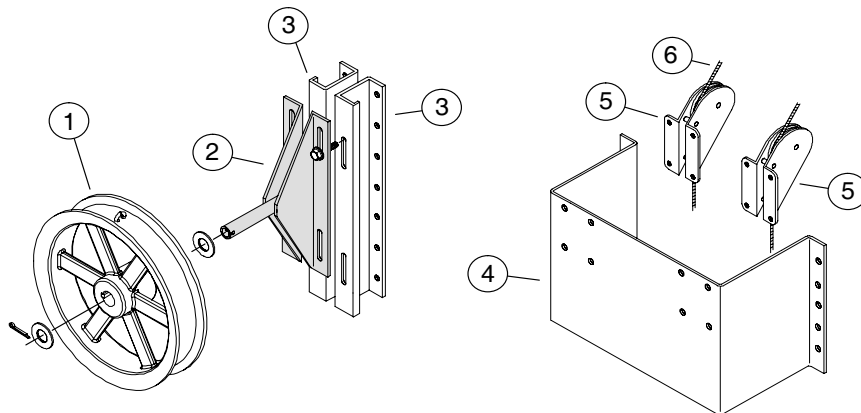








Ref. No.	Part No.	Description
1	1034255	Control Wheel, 2 9/16" wide
2	1011745	Bracket, Wheel Support
3	1011743	Plate, Binwall Mount

Ref. No.	Part No.	Description
4	1011742	Bracket, Upper Wall
5	1006876	Pulley, 2 1/2"
6	1025845	Cable, 1/4" dia. x 150' long

PARTS LIST

DUMP HOPPERS 2 GRATE, 3 GRATE, 5 GRATE, 6 GRATE & 7 GRATE f/ 8" LOOP SYSTEMS

Measurements Typical for 2 Grate,
3 Grate, 5 Grate, 6 Grate & 7 Grate
8" Dump Hoppers

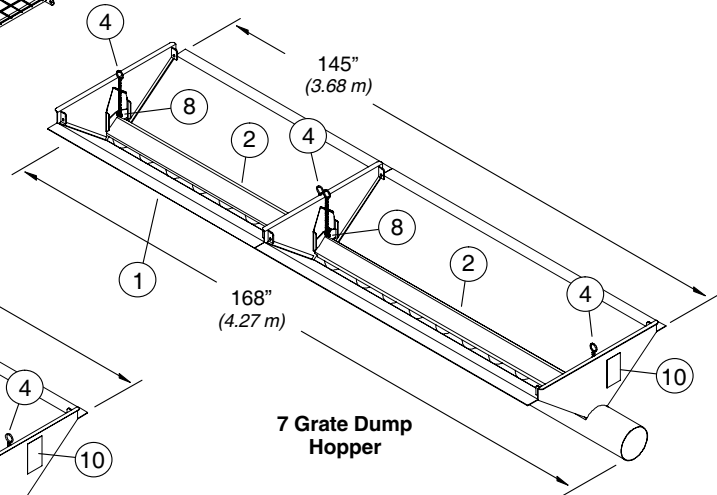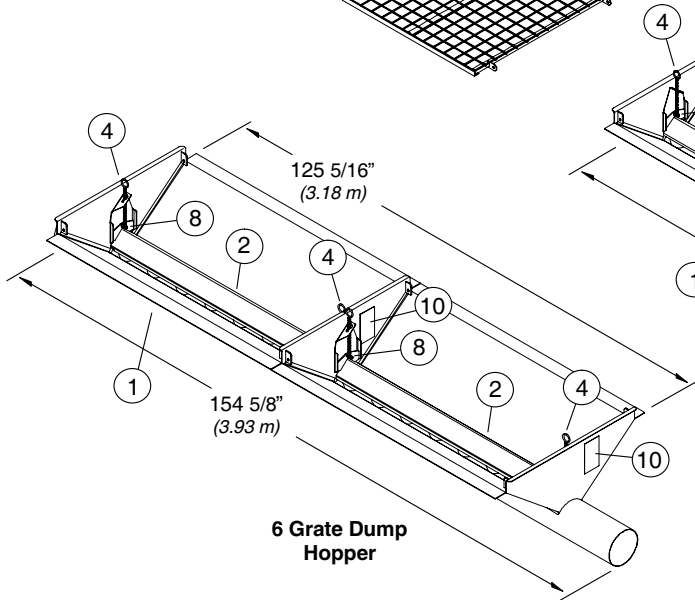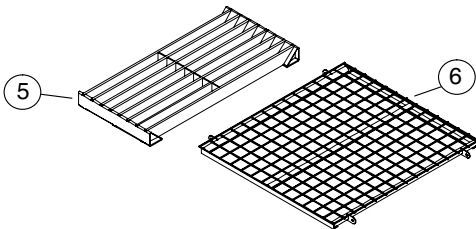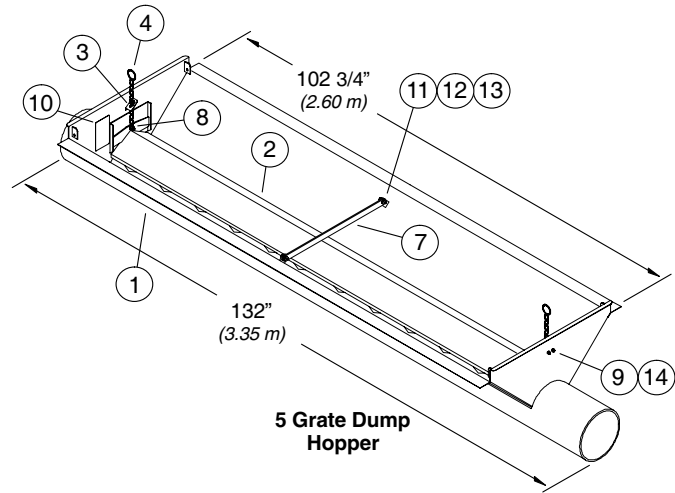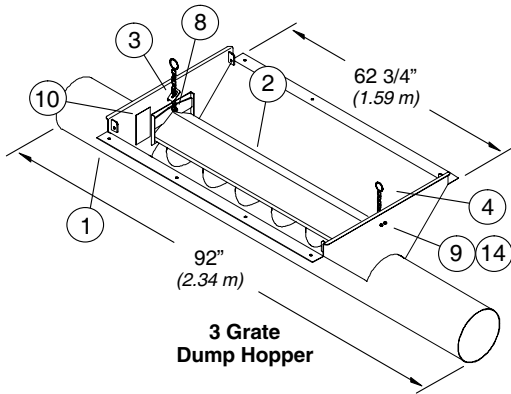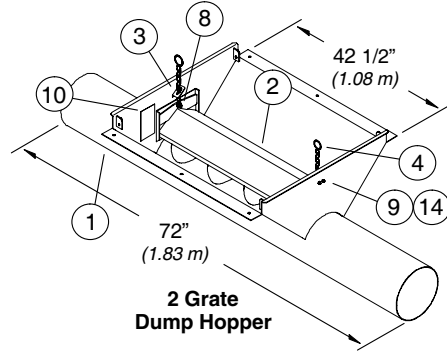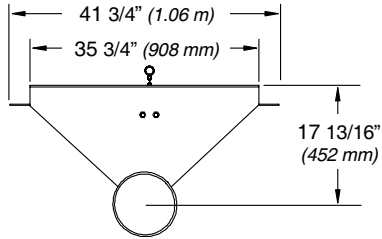

PARTS LIST

DUMP HOPPERS 2 GRATE,

3 GRATE, 5 GRATE, 6 GRATE & 7 GRATE

f/8" LOOP SYSTEMS (con't.)

All items listed below are used for the 2-grate, 3-grate, 5-grate, 6 Grate & 7 Grate hoppers unless noted otherwise.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1013234	Dump Hopper Weldment (2 grate)	6	1012507	Screen f/ 2 Grate Hopper
(1)	1013089	Dump Hopper Weldment (3 grate)	(6)	1012485	Screen f/ 3 Grate Hopper
(1)	1012830	Dump Hopper Weldment (5 grate)	(6)	1012833	Screen f/ 5 Grate Hopper
(1)	1012712	Dump Hopper Weldment (6 grate)	(6)	1012485	Screen f/ 6 Grate Hopper
(1)	1017717	Dump Hopper Weldment (7 grate)	7	1012959	Support Bar f/ 5 Grate Hopper
2	1012474	Gate, Flow Control (2 grate)	8	33136	Nut, 3/8-16 Nylon Lock PLT
(2)	1012475	Gate, Flow Control (3 grate)	9	4701-1	Bolt, 5/16-18 x 3/4" PLT
(2)	1012831	Gate, Flow Control (5 grate)	10	1002310	Decal, Danger: Do Not Operate...
(2)	1012475	Gate, Flow Control (6 grate)	11	33046	Bolt, 5/16-18 x 1" PLT
(2)	1012475	Gate, Flow Control (7 grate)	12	33151	Nut, 5/16-18 Non-Lock PLT
(2)	1017718	Gate, Flow Control (7 grate)	13	33144	Washer, 5/16" Lock PLT
3	1012669	Bracket, Chain	14	33135	Nut, 5/16-18 Nylon Lock PLT
4	1012466	Chain, Flow Adjustment			
5	1038431	Grate f/ Drive Over Hopper			







The complete hopper assembly's can be obtained by ordering Part No's.

1014267 - 2 Grate, 1012506 - 2 Grate w/ Screen; 1013093 - 3 Grate, 1013090 - 3 Grate w/ Screen;
1014149 - 5 Grate, 1012829 - 5 Grate w/ Screen; 1026663 - 6 Grate, 1048171 - 6 Grate w/ Screen;
1017850 - 7 Grate

PARTS LIST

DUMP HOPPERS 2 GRATE,
3 GRATE, 5 GRATE & 7 GRATE
f/ 10" LOOP SYSTEMS

Measurements Typical for 2 Grate,
 3 Grate, 5 Grate & 7 Grate
 10" Dump Hoppers

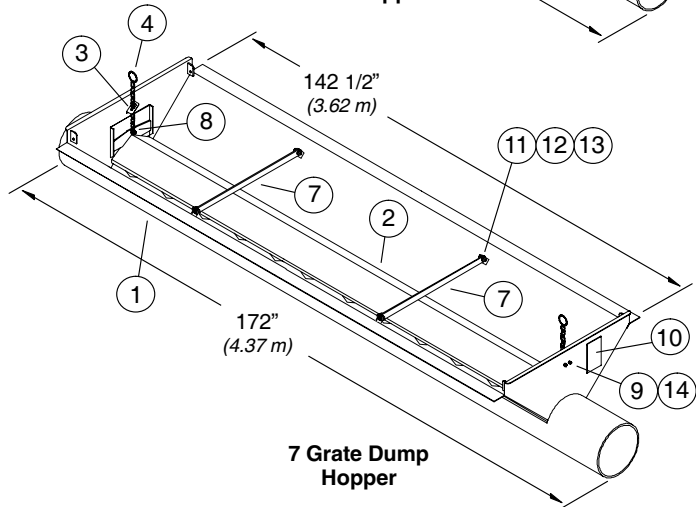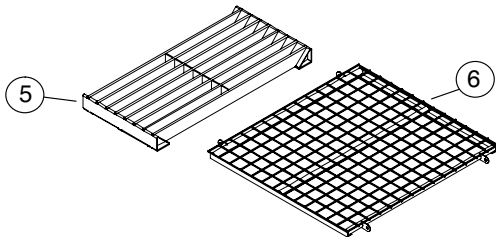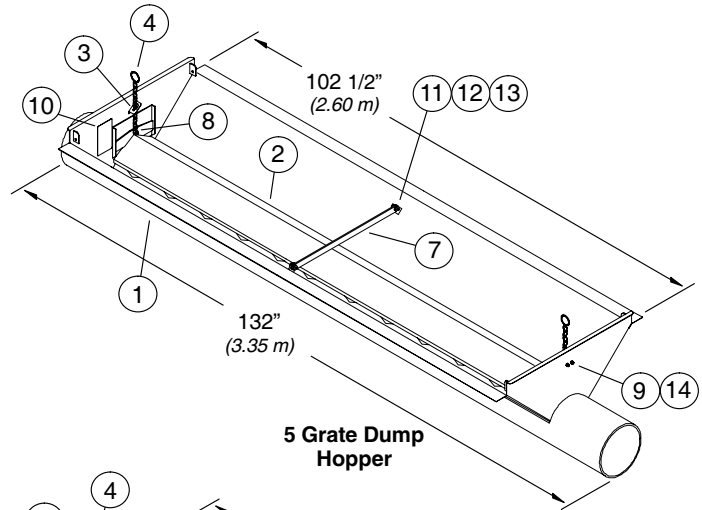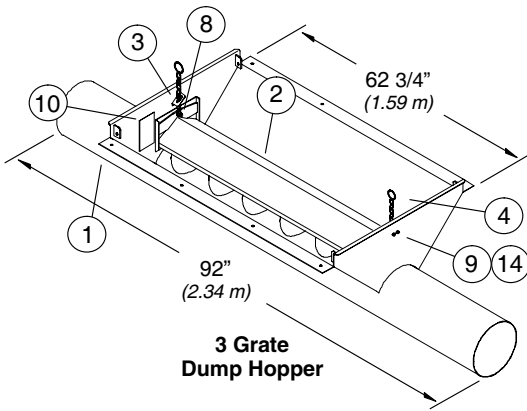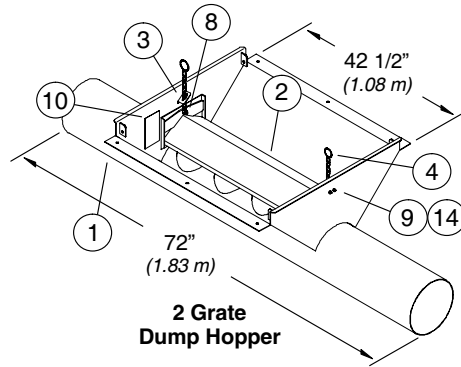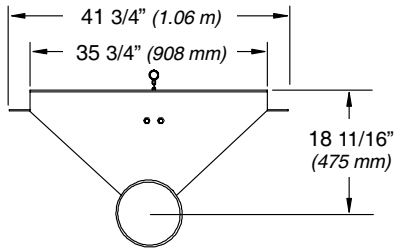

PARTS LIST

**DUMP HOPPERS 2 GRATE,
3 GRATE, 5 GRATE & 7 GRATE
f/ 10" LOOP SYSTEMS (con't.)**

All items listed below are used for the 2-grate, 3-grate, 5-grate & 7 Grate hoppers unless noted otherwise.


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1012664	Dump Hopper Weldment (2 grate)	6	1012507	Screen f/ 2 Grate Hopper
(1)	1012951	Dump Hopper Weldment (3 grate)	(6)	1012485	Screen f/ 3 Grate Hopper
(1)	1012952	Dump Hopper Weldment (5 grate)	(6)	1012833	Screen f/ 5 Grate Hopper
(1)	1014868	Dump Hopper Weldment (7 grate)	7	1012959	Support Bar
2	1012670	Gate, Flow Control (2 grate)	8	33136	Nut, 3/8-16 Nylon Lock PLT
(2)	1012953	Gate, Flow Control (3 grate)	9	4701-1	Bolt, 5/16-18 x 3/4" PLT
(2)	1012954	Gate, Flow Control (5 grate)	10	1002310	Decal, Danger: Do Not Operate...
(2)	1014867	Gate, Flow Control (7 grate)	11	33046	Bolt, 5/16-18 x 1" PLT
3	1012669	Bracket, Chain	12	33151	Nut, 5/16-18 Non-Lock PLT
4	1012466	Chain, Flow Adjustment	13	33144	Washer, 5/16" Lock PLT
5	1038431	Grate f/ Drive Over Hopper	14	33135	Nut, 5/16-18 Nylon Lock PLT

The complete hopper assembly's can be obtained by ordering Part No's.

1012969 - 2 Grate, 1012948 - 2 Grate w/ Screen; 1012970 - 3 Grate, 1012949 - 3 Grate w/ Screen;
1012971 - 5 Grate, 1012950 - 5 Grate w/ Screen; 1014869 - 7 Grate

PARTS LIST

DUMP HOPPER (5 GRATE)
w/ ELECTRIC RACK & PINION GATES
f/ 8" LOOP SYSTEM

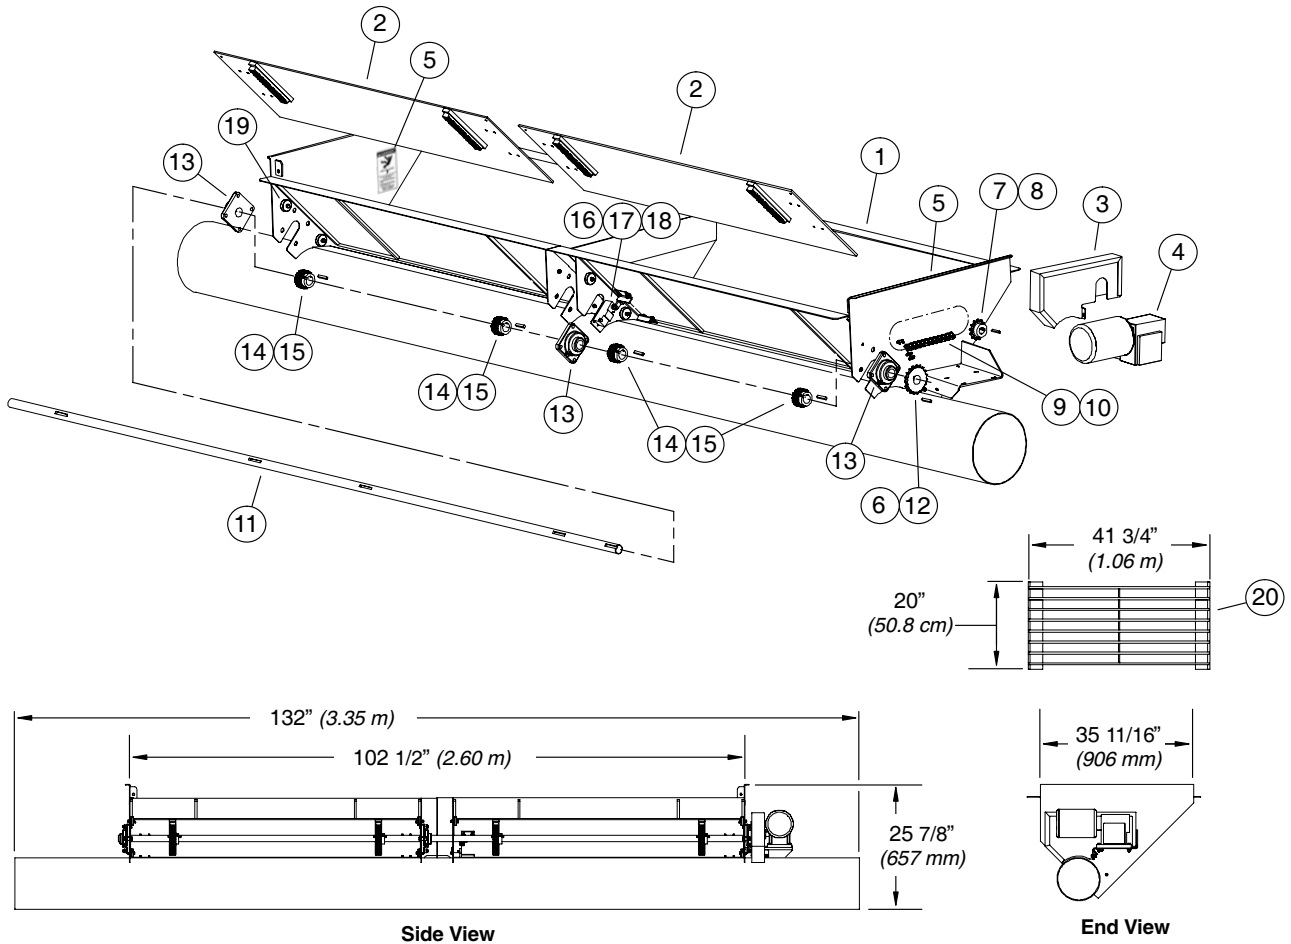

- Item No. 3 (Chain Guard) is attached using:
 33046 – 5/16" x 1" Bolts, 33023 – 5/16" Flat Washers,
 33135 – 5/16" Nylon Locknuts
- Item No. 4 (Motor) is attached using:
 33064 – 3/8" x 1 3/4" Bolts, 33024 – 3/8" Flat Washers,
 33136 – 3/8" Nylon Locknuts
- Items No. 13 (Bearings) are attached using:
 33247 – 1/2" x 1 3/4" Bolts, 33025 – 1/2" Flat Washers,
 33138 – 1/2" Nylon Locknuts

- Item No. 16 (Limit Switch) is attached using:
 1017092 – 3/16" x 1 1/2" Stove Bolts,
 33021 – 3/16" Flat Washers, 33142 – 3/16" Lock Washers,
 33149 – 3/16" Non-Lock Nuts
- Item No. 17 (Limit Switch Stop Bracket) is attached using:
 33022 – 1/4" Flat Washers, 4003 – 1/4" Nylon Locknuts
- Item No. 19 (Skate Wheel) is attached using:
 4736 – 5/16 x 1 1/2" Bolt, 33135 – 5/16" Nylon Locknut

PARTS LIST

DUMP HOPPER (5 GRATE)
w/ ELECTRIC RACK & PINION GATES
f/ 8" LOOP SYSTEM (con't.)


The complete hopper assembly can be obtained by ordering Part No's.
1040643 w/ motor 1017558; 1040643-50 w/ motor 1037913
and 1040643EP w/ motor 1017559 (Explosion Proof)
The complete hopper assembly includes items 1 thru 19 listed below.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1040642	Hopper Weldment, 5 Grate Dump	9	40975	Chain, RC-60 50 pitch
2	1040646	Gate f/ 5 Grate Dump Hopper	10	- - -	•Connecting Link f/ RC-60 Chain
3	1034145	Guard, Chain	11	1040644	Pinion Shaft f/ 5 Grate Dump Hopper
4	1017558	Motor, 1/2 H.P. (.37 kw), 60 Hz 115-208/230 V, 1 PH	12	41069	Sprocket, 60B 19 tooth
(4)	1037913	Motor, 1/2 H.P. (.37 kw), 50 Hz 110/220 V, 1 PH	13	1010A	Bearing, 4-Hole Flange, 1 1/2"
(4)	1017559	Motor, 1/2 H.P. (.37 kw), 60 Hz 115-208/230 V, 1 PH Ex. Proof	14	1016854	Spur Gear, S822 x 1 1/2" KW&SS
5	1002310	Decal, Danger: Cover Missing	15	1038D	Key, 3/8" sq. x 2" long
6	4049A1	Key, 3/8" sq. x 1 1/2" long	16	1017007	Limit Switch
7	1034145	Sprocket, 60B 13 tooth	17	1017199	Lever Arm f/ Limit Switch
8	5169B1	Key, 1/4" sq. x 1 1/4" long	18	1034155	Bracket, Limit Switch Stop
			19	1016845	Skate Wheel
			20	1038431	Grate f/ Dump Hopper

• Indented Parts Names Indicate these Parts are Included in the Previous Assembly.

PARTS LIST

DUMP HOPPER (7 GRATE)
w/ ELECTRIC RACK & PINION GATES
f/ 10" LOOP SYSTEM

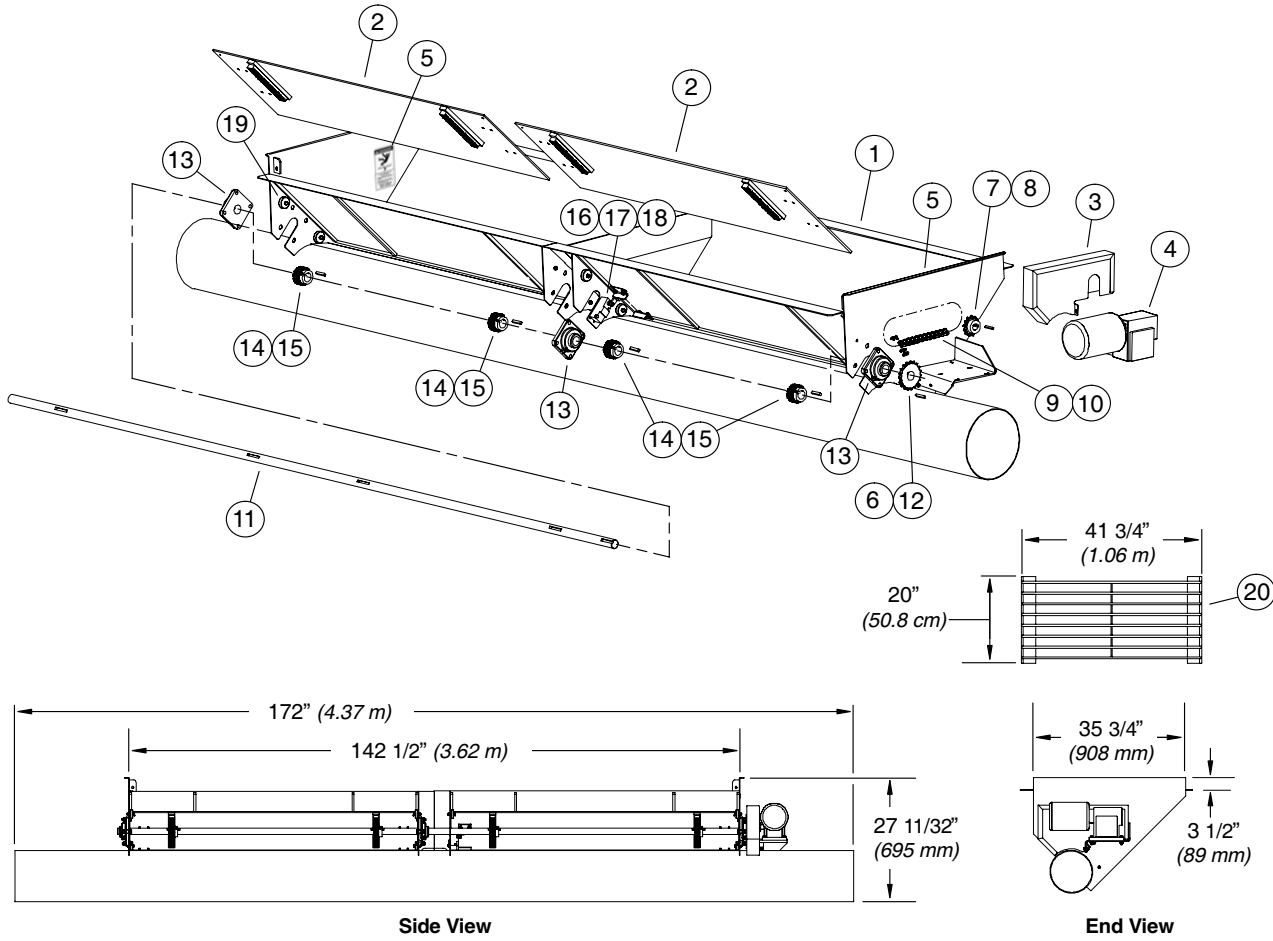

- Item No. 3 (Chain Guard) is attached using:**
 33046 – 5/16" x 1" Bolts, 33023 – 5/16" Flat Washers,
 33135 – 5/16" Nylon Locknuts
- Item No. 4 (Motor) is attached using:**
 33064 – 3/8" x 1 3/4" Bolts, 33024 – 3/8" Flat Washers,
 33136 – 3/8" Nylon Locknuts
- Items No. 13 (Bearings) are attached using:**
 33247 – 1/2" x 1 3/4" Bolts, 33025 – 1/2" Flat Washers,
 33138 – 1/2" Nylon Locknuts

- Item No. 16 (Limit Switch) is attached using:**
 1017092 – 3/16" x 1 1/2" Stove Bolts,
 33021 – 3/16" Flat Washers, 33142 – 3/16" Lock Washers,
 33149 – 3/16" Non-Lock Nuts
- Item No. 17 (Limit Switch Stop Bracket) is attached using:**
 33022 – 1/4" Flat Washers, 4003 – 1/4" Nylon Locknuts
- Item No. 19 (Skate Wheel) is attached using:**
 4736 – 5/16 x 1 1/2" Bolt, 33135 – 5/16" Nylon Locknut

DUMP HOPPER (7 GRATE)
w/ ELECTRIC RACK & PINION GATES
f/ 10" LOOP SYSTEM (con't.)

The complete hopper assembly can be obtained
 by ordering Part No. 1034136

The complete hopper assembly includes items 1 thru 19 listed below.

Ref. Part No. No.	Description	Ref. Part No. No.	Description
1 1034122	Hopper Weldment, 7 Grate Dump	11 1034139	Pinion Shaft f/ 7 Grate Dump Hopper
2 1034138	Gate f/ 7 Grate Dump Hopper	12 41069	Sprocket, 60B 19 tooth
3 1034157	Guard, Chain	13 1010A	Bearing, 4-Hole Flange, 1 1/2"
4 1017457	Motor, 1/2 H.P. (.37 kw), 60 Hz 208-230/460 V, 1 PH	14 1016854	Spur Gear, S822 x 1 1/2" KW&SS
5 1002310	Decal, Danger: Cover Missing	15 1038D	Key, 3/8" sq. x 2" long
6 4049A1	Key, 3/8" sq. x 1 1/2" long	16 1017007	Limit Switch
7 1034145	Sprocket, 60B 13 tooth	17 1017199	Lever Arm f/ Limit Switch
8 5169B1	Key, 1/4" sq. x 1 1/4" long	18 1034155	Bracket, Limit Switch Stop
9 40975	Chain, RC-60 50 pitch	19 1016845	Skate Wheel
10 - - -	•Connecting Link f/ RC-60 Chain	20 1038431	Grate f/ Dump Hopper

• Indented Parts Names Indicate these Parts
 are Included in the Previous Assembly.

PARTS LIST

CHAIN MAINTENANCE ACCESS HOPPER
3' LONG HORIZONTAL
f/ 6", 8" & 10" LOOP SYSTEM

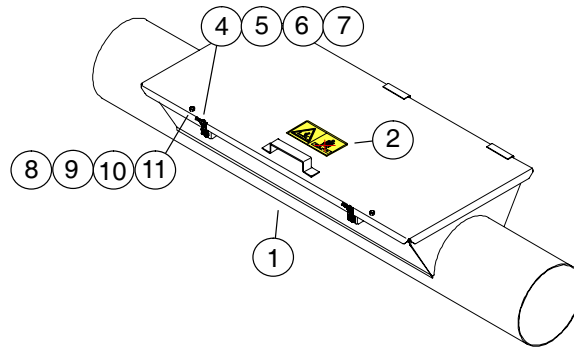
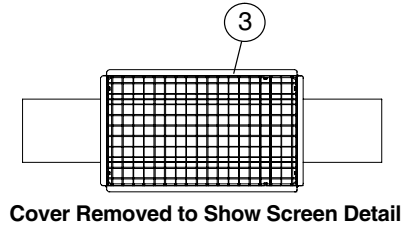
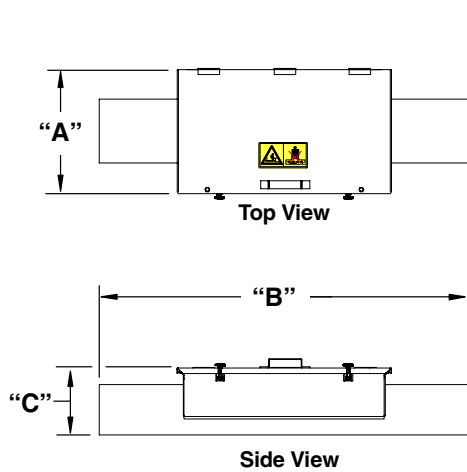


Chart f/ 3' Horizontal Chain Access Assembly

Loop System	"A"	"B"	"C"
6" Loop	17 11/16" (449 mm)	68" (1.73 m)	12 1/8" (308 mm)
8" Loop	19 11/16" (500 mm)	68" (1.73 m)	13 1/8" (333 mm)
10" Loop	21 5/16" (541 mm)	68" (1.73 m)	14 1/8" (359 mm)

Item No. 3 (Screen Weldment) is attached using:
33229 – 3/8-16 x 1 1/4" Bolts,
D1150 – 3/8" Lock Washers
D1149 – 3/8" Non-Lock Nuts

Complete 3' Long Chain Access Assembly - Part No. 1044242 f/ 6" Loop;
 1044217 f/ 8" Loop and 1039828-12 f/ 10" Loop

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1044243	Chain Access Weldment f/ 6"	5	1018271	Bolt, #6 x 3/8" PPH, PLT
(1)	1044218	Chain Access Weldment f/ 8"	6	1018272	Washer, #6 Lock PLT
(1)	1039829-12	Chain Access Weldment f/ 10"	7	1018273	Nut, #6 Non-Lock PLT
2	1012872	Decal, Danger: Do Not Operate..	8	33229	Bolt, 3/8-16 x 1 1/4" PLT
3	1044240	Screen f/ 3' x 6" Chain Access	9	33024	Washer, 3/8" Flat PLT
(3)	1044198	Screen f/ 3' x 8" Chain Access	10	D1150	Washer, 3/8" Lock PLT
(3)	1039835	Screen f/ 3' x 10" Chain Access	11	D1149	Nut, 3/8-16 Non-Lock PLT
4	1018308	Rubber Latch f/ Chain Access			

CHAIN MAINTENANCE ACCESS HOPPER
5' LONG HORIZONTAL
f/ 6", 8" & 10" LOOP SYSTEM

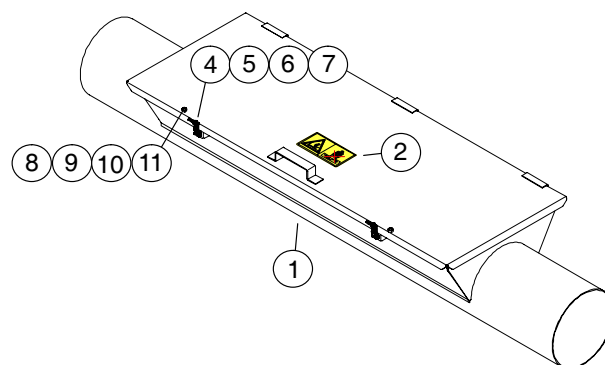
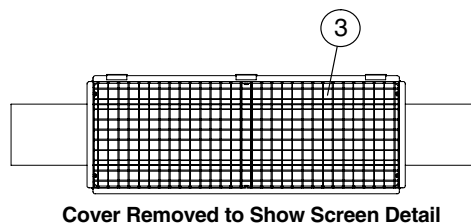
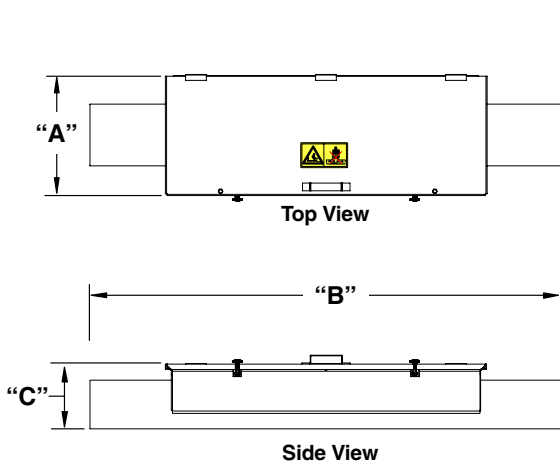


Chart f/ 5' Horizontal Chain Access Assembly

Loop System	"A"	"B"	"C"
6" Loop	17 11/16" (449 mm)	92" (2.34 m)	12 1/8" (308 mm)
8" Loop	19 11/16" (500 mm)	92" (2.34 m)	13 1/8" (333 mm)
10" Loop	21 11/16" (551 mm)	92" (2.34 m)	14 1/8" (359 mm)





Item No. 3 (Screen Weldment) is attached using:
33229 – 3/8-16 x 1 1/4" Bolts,
D1150 – 3/8" Lock Washers
D1149 – 3/8" Non-Lock Nuts

Complete 5' Long Chain Access Assembly - Part No. 1044245 f/ 6" Loop;
1041454 f/ 8" Loop and 1037548-12 f/ 10" Loop

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1044246	Chain Access Weldment f/ 6"	5	1018271	Bolt, #6 x 3/8" PPH, PLT
(1)	1041455	Chain Access Weldment f/ 8"	6	1018272	Washer, #6 Lock PLT
(1)	1037549-12	Chain Access Weldment f/ 10"	7	1018273	Nut, #6 Non-Lock PLT
2	1012872	Decal, Danger: Do Not Operate..	8	33229	Bolt, 3/8-16 x 1 1/4" PLT
3	1044231	Screen f/ 5' x 6" Chain Access	9	33024	Washer, 3/8" Flat PLT
(3)	1041460	Screen f/ 5' x 8" Chain Access	10	D1150	Washer, 3/8" Lock PLT
(3)	1037557	Screen f/ 5' x 10" Chain Access	11	D1149	Nut, 3/8-16 Non-Lock PLT
4	1018308	Rubber Latch f/ Chain Access			

PARTS LIST

CENTER BINWELL f/ 6" LOOP SYSTEM

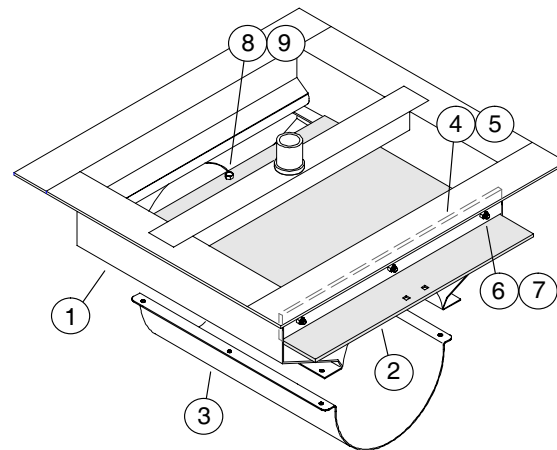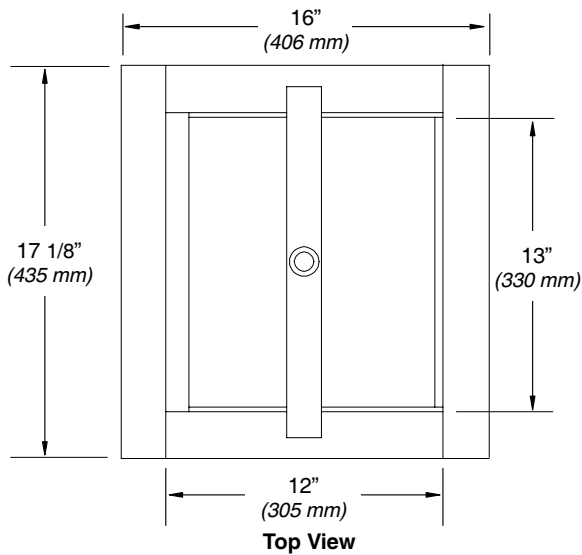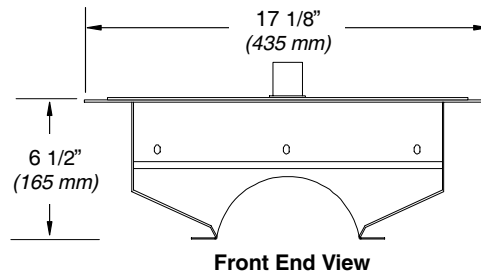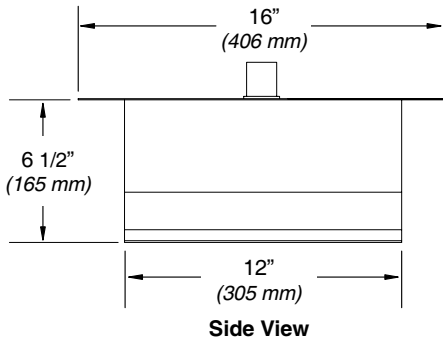


Item No. 4 (half-band) attaches using:
4736 – 5/16" x 1 1/2" Bolts,
33151 – 5/16" Non-Lock Nuts

The complete Center Binwell Assembly can be obtained by ordering Part No. 1011834. The complete assembly contains all items listed below.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1011836	Center Binwell Weldment	6	33046	Bolt, 5/16-18 x 1" PLT
2	1011683	Slide Gate f/ Center Binwell	7	33135	Nut, 5/16-18 Nylon Lock PLT
3	50544A1	Back Band f/ 6" Tube	8	4701-1	Bolt, 5/16-18 x 3/4" PLT
4	1011672	Rubber Wiper f/ Gate	9	33135	Nut, 5/16-18 Nylon Lock PLT
5	1011673	Wiper Strap f/ Rubber Wiper			

INTERMEDIATE BINWELL f/ 6" LOOP SYSTEM




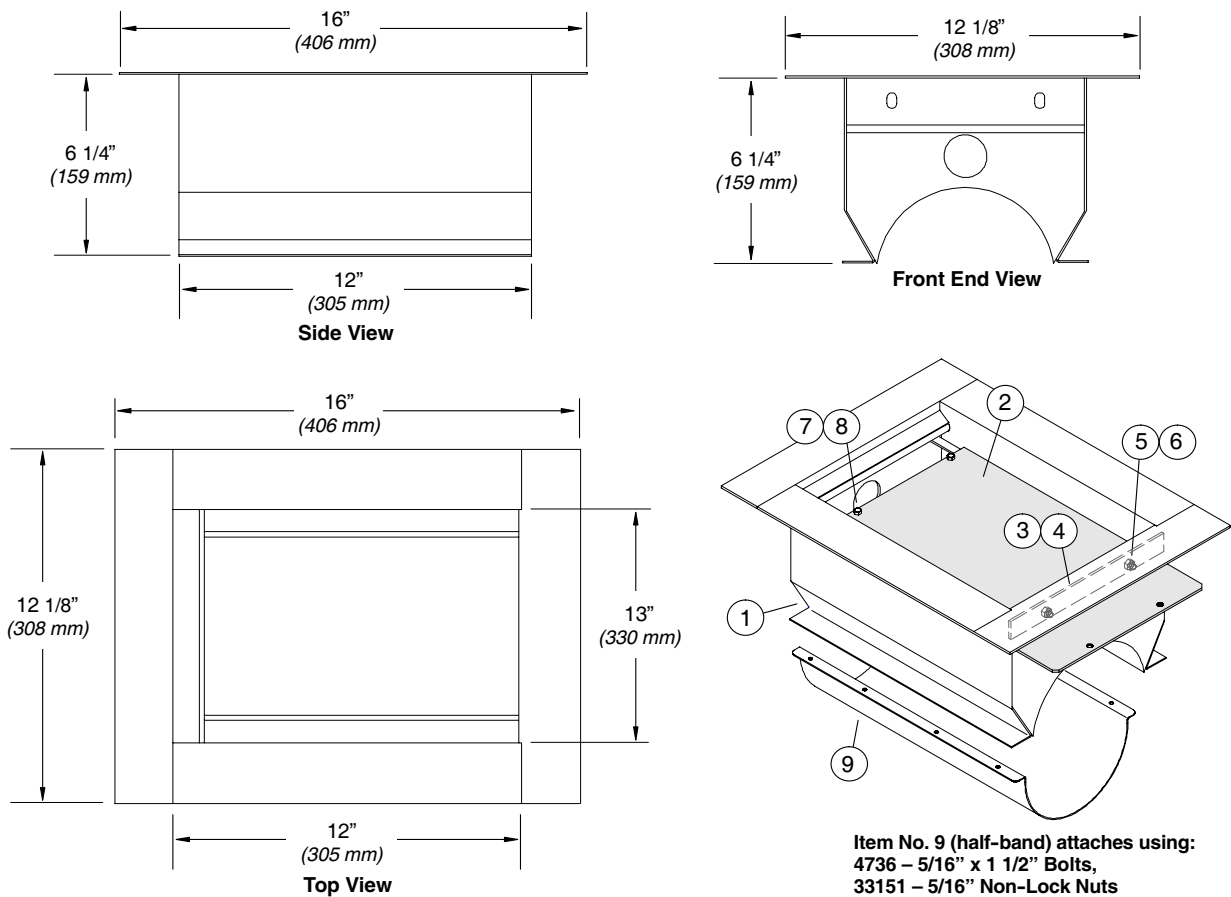


The complete Intermediate Binwell Assembly can be obtained by ordering Part No. 1011833. The complete assembly contains all items listed below.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1011835	Intermediate Binwell Weldment	6	33135	Nut, 5/16-18 Nylon Lock PLT
2	1011684	Slide Gate f/ Intermediate Binwell	7	4701-1	Bolt, 5/16-18 x 3/4" PLT
3	1011672	Rubber Wiper f/ Gate	8	33135	Nut, 5/16-18 Nylon Lock PLT
4	1011673	Wiper Strap f/ Rubber Wiper	9	50544A1	Back Band f/ 6" Tube
5	33046	Bolt, 5/16-18 x 1" PLT			

PARTS LIST

CENTER BINWELL f/ 8" LOOP SYSTEM

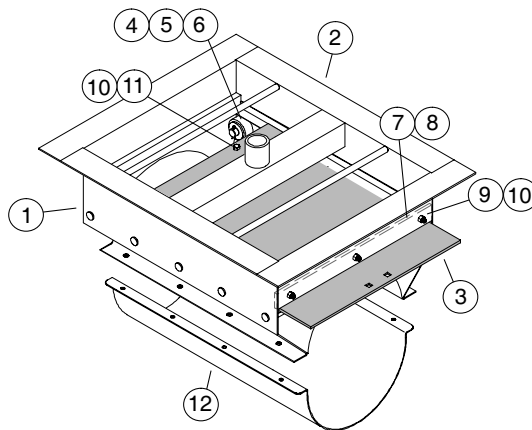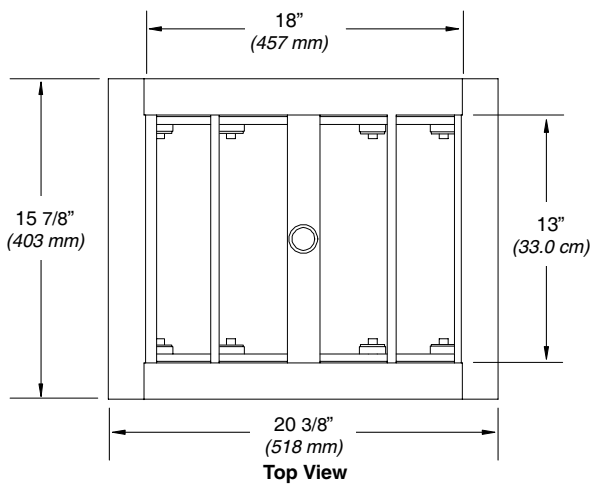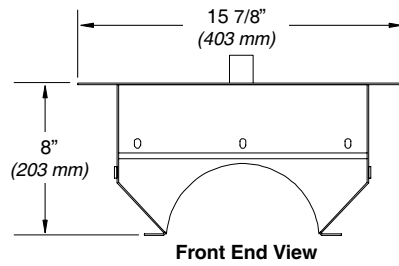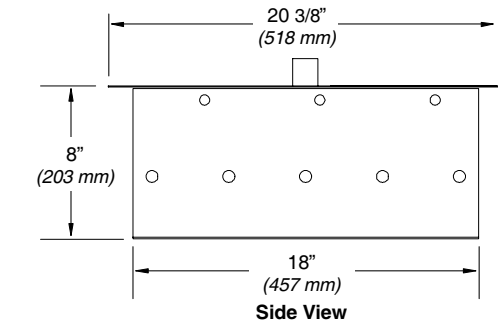


Item No. 12 (half-band) attaches using:
4736 – 5/16" x 1 1/2" Bolts,
33151 – 5/16" Non-Lock Nuts


The complete Center Binwell Assembly can be obtained by ordering Part No. 1031780. The complete assembly contains all items listed below.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1031781	Center Binwell Weldment	7	1011672	Rubber Wiper f/ Gate
2	1027039	Top Flange f/ Center Binwell	8	1011673	Wiper Strap f/ Rubber Wiper
3	1015534	Slide Gate f/ Center Binwell	9	33046	Bolt, 5/16-18 x 1" PLT
4	51867	Wheel, 1.475" O.D., Nylon	10	33135	Nut, 5/16-18 Nylon Lock PLT
5	33025	Washer, 1/2" Flat PLT	11	4701-1	Bolt, 5/16-18 x 3/4" PLT
6	33161	Pin, Cotter, 1/8" x 1" long	12	8806D	Back Band f/ 8" Tube


INTERMEDIATE BINWELL f/ 8" LOOP SYSTEM

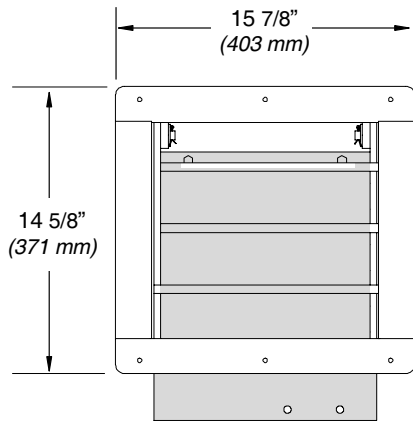


Top View

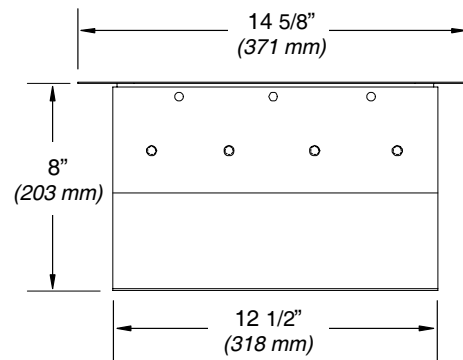

Side View

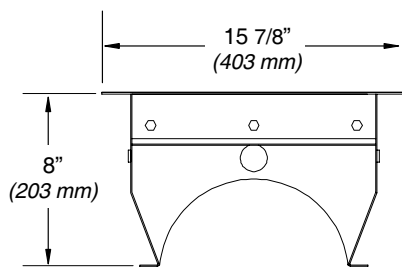

End View

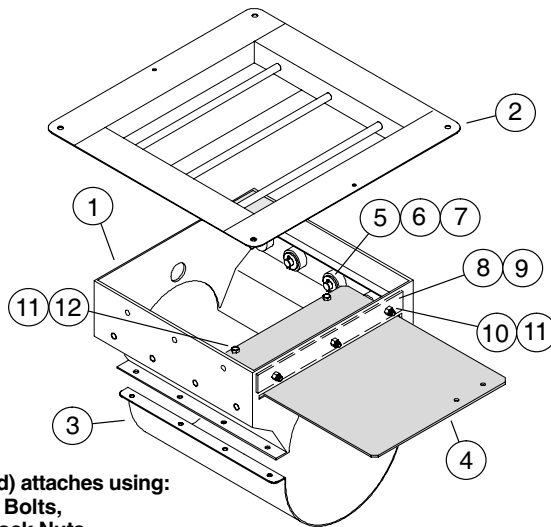





**Item No. 3 (back band) attaches using:
4736 – 5/16" x 1 1/2" Bolts,
33151 – 5/16" Non-Lock Nuts**

The complete Intermediate Binwell Assembly can be obtained by ordering Part No. 1026896. The complete assembly contains items all listed below.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1026892	Intermediate Binwell Weldment	7	33161	Pin, 1/8" x 1" Cotter
2	1026880	Top Flange f/ Intermediate Binwell	8	1011672	Rubber Wiper f/ Gate
3	50545A1	Back Band f/ 8" Tube	9	1011873	Wiper Strap f/ Rubber Wiper
4	1026897	Slide Gate f/ Intermediate Binwell	10	33046	Bolt, 5/16-18 x 1" PLT
5	51867	Wheel, 1.475" O.D., Nylon	11	33135	Nut, 5/16-18 Nylon Lock PLT
6	33025	Washer, 1/2" Flat PLT	12	4701-1	Bolt, 5/16-18 x 3/4" PLT

PARTS LIST

CENTER BINWELL f/ 10" LOOP SYSTEM

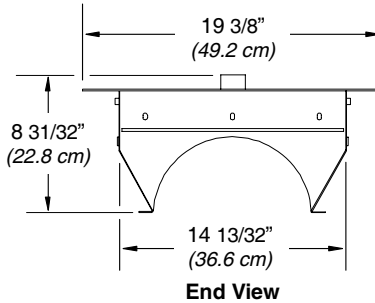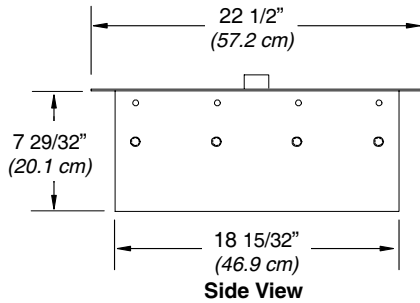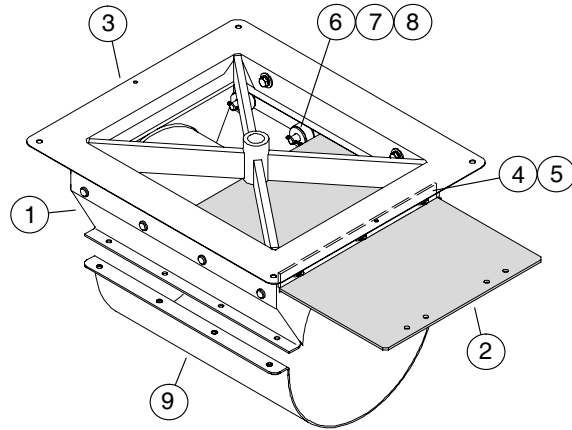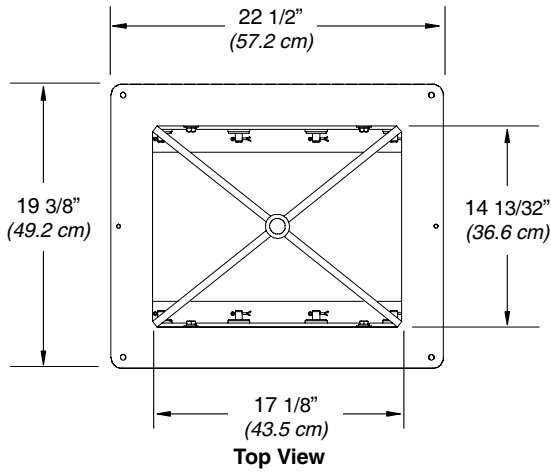

Item No. 3 (top flange) attaches using:
 33060 – 3/8" x 1" Bolts,
 D1150 – 3/8" Lock Washers
 33024 – 3/8" Flat Washer





Item No's. 4 & 5 (wiper & strap) are attached using:
 33046 – 5/16" x 1" Bolt,
 33135 – 5/16" Nylon Locknut
 33023 – 5/16" Flat Washer

Item No. 9 (half-band) attaches using:
 4736 – 5/16" x 1 1/2" Bolts,
 33151 – 5/16" Non-Lock Nuts

The complete Center Binwell Assembly can be obtained by ordering Part No. 1042340. The complete assembly contains all items listed below.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1042308	Center Binwell Weldment	6	51867	Wheel, 1.475" O.D., Nylon
2	1042348	Slide Gate f/ Center Binwell	7	33025	Washer, 1/2" Flat PLT
3	1042310	Top Flange f/ Center Binwell	8	33161	Pin, Cotter, 1/8" x 1" long
4	1029208	Plastic Wiper f/ Gate	9	2806D	Back Band f/ 10" Tube
5	1041826	Wiper Strap f/ Plastic Wiper			

INTERMEDIATE BINWELL f/ 10" LOOP SYSTEM

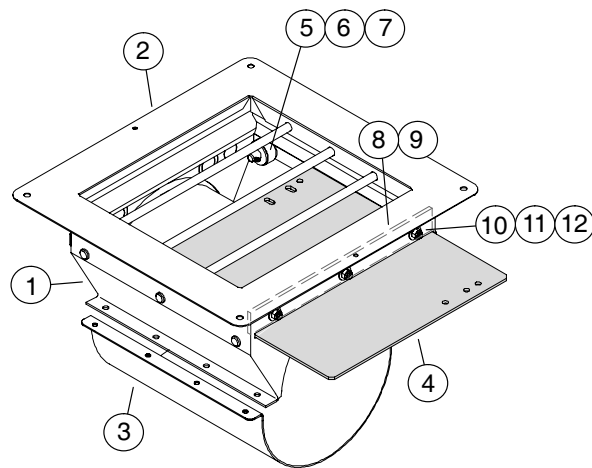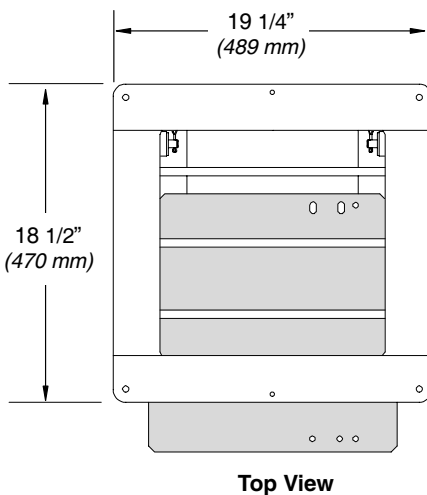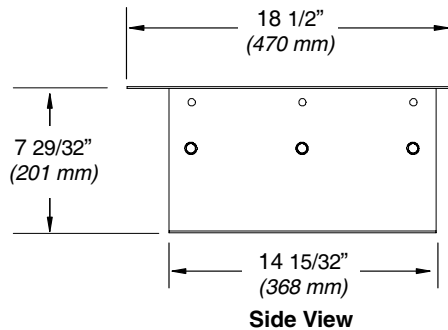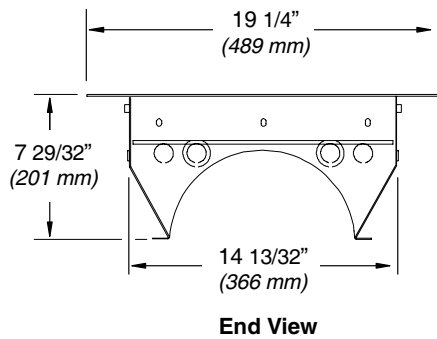


Item No. 3 (back band) attaches using:
4736 – 5/16" x 1 1/2" Bolts,
33151 – 5/16" Non-Lock Nuts

The complete Intermediate Binwell Assembly can be obtained by ordering Part No. 1041081. The complete assembly contains all items listed below.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1041080	Intermediate Binwell Weldment	7	33161	Pin, Cotter, 1/8" x 1" long
2	1027039	Top Flange f/ Intermediate Binwell	8	1029208	Plastic Wiper f/ Slide Gate
3	50005A1	Back Band f/ 10" Tube	9	1041826	Wiper Strap f/ Plastic Wiper
4	1034539	Slide Gate f/ Center Binwell	10	33046	Bolt, 5/16-18 x 1" PLT
5	51867	Wheel, 1.475" O.D., Nylon	11	33135	Nut, 5/16-18 Nylon Lock PLT
6	33025	Washer, 1/2" Flat PLT	12	33023	Washer, 5/16" Flat

PARTS LIST


INSPECTION PORTS

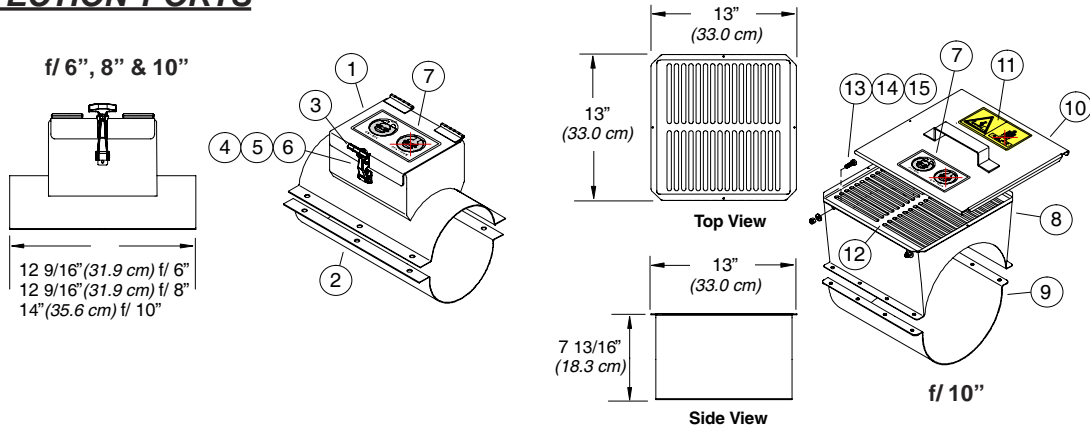

Ref. No.	Part No.	Description
1	1034172	Inspection Port, f/ 6"
(1)	1034170	Inspection Port, f/ 8"
(1)	1034168	Inspection Port, f/ 10"
2	50544A1	Half Band, f/ 6"
(2)	50545A1	Half Band, f/ 8"
(2)	50005A1	Half Band, f/ 10"
3	1018308	Rubber Latch
4	1018271	Screw, #6 x 3/8"
5	1018272	Lock Washer, #6
6	1018273	Nut, #6 Lock

Ref. No.	Part No.	Description
7	1033033	Decal, Caution: Overloading...
8	1037750	Inspection Port (f/ 10")
9	1037743	Back Band f/ 10", 12" long
10	1037754	Cover f/ 10" Inspection Port
11	1012872	Decal, Danger: Do Not Operate...
12	1047429	Slotted Guard
13	33046	Bolt, 5/16-18 x 1"
14	33023	Washer, 5/16" Flat
15	33135	Nut, 5.16-18 Nylon Lock

INLET HOPPERS


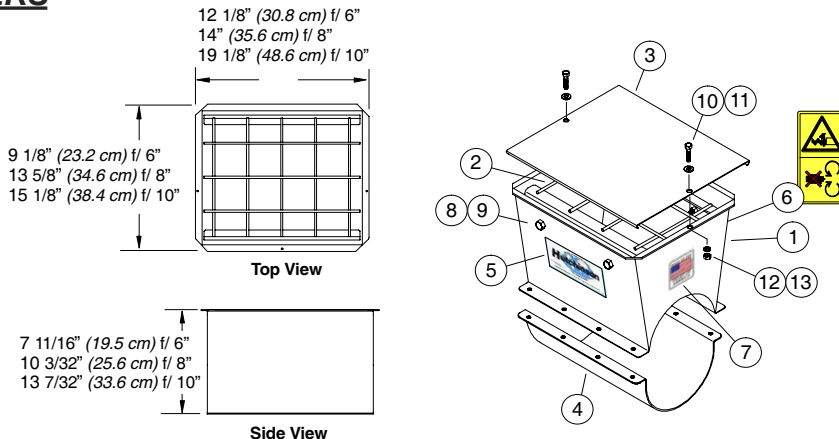


Ref. No.	Part No.	Description
1	60043A11	Inlet Hopper, f/ 6"
(1)	60044A1	Inlet Hopper, f/ 8"
(1)	60045A1	Inlet Hopper, f/ 10"
2	1042073	Safety Screen, f/ 6"
(2)	1042012	Safety Screen, f/ 8"
(2)	1041972	Safety Screen, f/ 10"
3	1625A	Cover, Hopper f/ 6"
(3)	1825A	Cover, Hopper f/ 8"
(3)	2025A	Cover, Hopper f/ 10"
4	50279A1	Back band f/ 6"
(4)	8806D	Back Band f/ 8"

Ref. No.	Part No.	Description
(4)	2806D	Back Band f/ 10"
5	1001128	Decal, Hutchinson w/ Globe
6	1001985	Decal, Danger: Rotating Auger
7	1041833	Decal, Made In USA
8	33046	Bolt, 5/16-18 x 1"
9	33135	Nut, 5/16-18 Nylon Lock
10	1029728	Bolt, #8 x 3/4"
11	1029737	Washer, #8 Flat
12	4501	Washer, #8 Lock
13	4001	Nut, #8 Non-Lock

HEAVY DUTY INLET HOPPER

18" long. f/ 10" MODELS

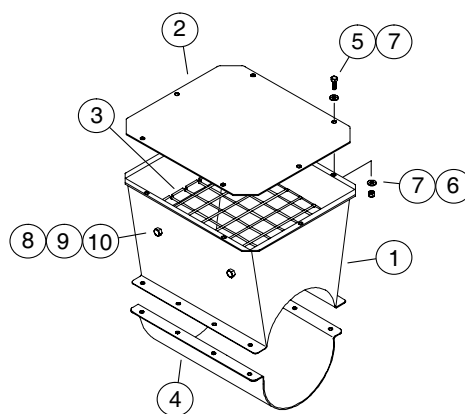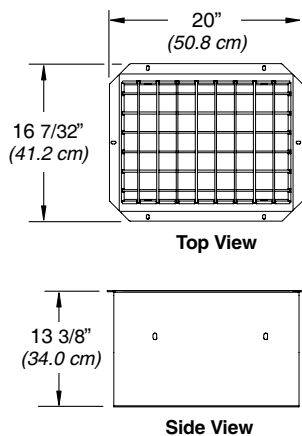



Ref. No.	Part No.	Description
1	1039839	Inlet Hopper, 18" long f/ 10"
2	1039842	Cover Panel f/ 18" Hopper
3	1039846	Safety Screen f/ 18" Hopper
4	2806D	Back Band, 10" x 18" long
5	4618-1	Bolt, 1/4-20 x 1"

Ref. No.	Part No.	Description
6	4003	Nut, 1/4-20 Nylon Lock
7	33022	Washer, 1/4" Flat
8	33060	Bolt, 3/8-16 x 1"
9	D1150	Washer, 3/8" Lock
10	D1149	Nut, 3/8" Non-Lock

The complete hopper can be obtained by ordering: **Part No. 1039838**

HEAVY DUTY INLET HOPPER

36" long. f/ 10" MODELS

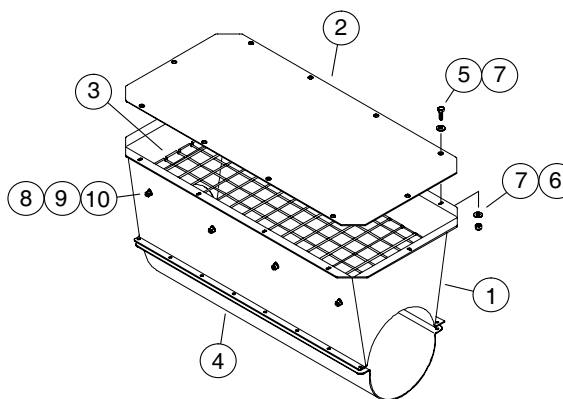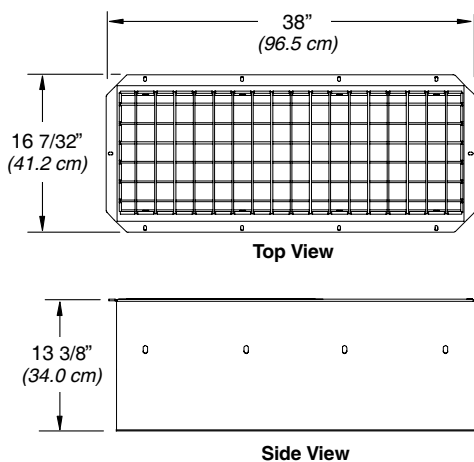


Ref. No.	Part No.	Description
1	1042159	Inlet Hopper, 36" long f/ 10"
2	1042160	Cover Panel f/ 36" Hopper
3	1042162	Safety Screen f/ 36" Hopper
4	2151C	Back Band, 10" x 36" long
5	4618-1	Bolt, 1/4-20 x 1"

Ref. No.	Part No.	Description
6	4003	Nut, 1/4-20 Nylon Lock
7	33022	Washer, 1/4" Flat
8	33060	Bolt, 3/8-16 x 1"
9	D1150	Washer, 3/8" Lock
10	D1149	Nut, 3/8" Non-Lock

The complete hopper can be obtained by ordering: **Part No. 1042158**

PARTS LIST

90° DISCHARGE ELECTRIC CONVERSION KIT

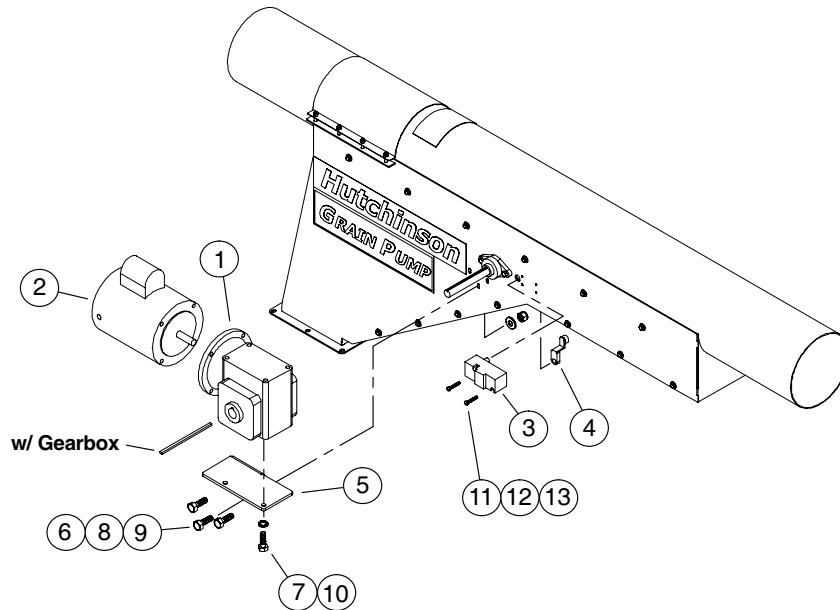


This Conversion Kit can be used on any of the Loop Models.

The Complete Conversion Kit can be obtained by ordering Part No. 1039040. Specify motor when ordering.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1023415	Gearbox w/ 1" bore, Leeson (HMQ621-60-H-56C-16)	3	1017007	Limit Switch, 9007 Series A (C68T10)
2	1026527	Motor, Electric 1/2 HP (.37 kw) (115-208/230V 60HZ 1PH)	4	1017199	Lever Arm f/ Limit Switch
(2)	1033296	Motor, Electric 1/2 HP (.37 kw) (220V 50HZ 1PH)	5	1038994	Motor Mount Plate (right)
(2)	1023414	Motor, Electric 1/2 HP (.37 kw) (575V 60HZ 3PH)	(5)	1038995	Motor Mount Plate (left)
(2)	1026526	Motor, Electric 1/2 HP (.37 kw) (208-230/460V 60HZ 3PH)	6	33046	Bolt, 5/16"-18 x 1" G5 PLT
(2)	1026529	Motor, Electric, Explosion Proof (1/2 HP, 115-208/230V 60HZ 1PH)	7	33060	Bolt, 3/8"-16 x 1" G5 PLT
(2)	1026528	Motor, Electric, Explosion Proof (1/2 HP, 208-230/460V 60HZ 3PH)	8	33023	Washer, 5/16" Flat PLT
			9	33135	Nut, 5/16"-18 Nylon Lock PLT
			10	D1150	Washer, 3/8" Lock PLT
			11	1017092	Bolt, 3/16" x 1 1/2" Stove
			12	33142	Washer, 3/16" Lock
			13	33149	Nut, 3/16" Non-Lock

8" FLAT STORAGE WELL w/ ELECTRIC SLIDE GATE

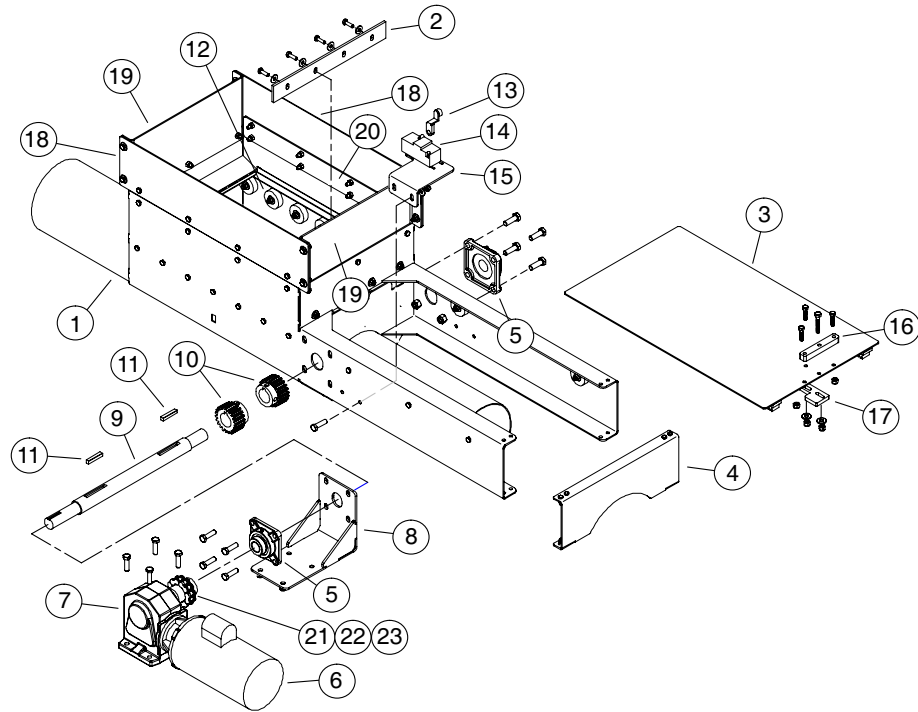

Item No. 2 (Wiper) is attached using:
33046 – 5/16" x 1" Bolts, 33023 – 5/16" Flat Washers,
33135 – 5/16" Nylon Locknuts

Item No. 4 (End Panel) is attached using:
33046 – 5/16" x 1" Bolts, 33135 – 5/16" Nylon Locknuts

Item No's. 5 & 8 (Bearings & Mount) are attached using:
33247 – 1/2" x 1 3/4" Bolts, 1002227 – 1/2" x 1 1/2" Bolts,
33138 – 1/2" Nylon Locknuts

Item No. 7 (Gearbox) is attached to Item 8 using:
33060 – 3/8" x 1" Bolts, D1150 – 3/8" Lock Washers,
33247 – 1/2" x 1 3/4" Bolts, 33138 – 1/2" Nylon Locknuts

Item No. 12 (Skate Wheels) are attached using:
4736 – 5/16" x 1 1/2" Bolts, 33023 – 5/16" Flat Washers,
33135 – 5/16" Nylon Locknuts, 1044641 – Spacers

Item No. 14 (Limit Switch) is attached using:
1017092 – 3/16" x 1 1/2" Stove Bolts, 33021 – Flat Washers
33142 – 3/16" Lock Washers, 33149 – 3/16" Non-Lock Nuts

Item No. 15 (Limit Switch Mount Plate) is attached using:
33046 – 5/16" x 1" Bolts, 33023 – 5/16" Flat Washers,
33135 – 5/16" Nylon Locknuts

Item No's. 17 & 18 (Gate Stops) are attached using:
33310 – 3/8" x 1 1/2" Bolts, D1174 – 3/8" x 2 1/4" Bolt
33024 – 3/8" Flat Washers, 33136 – 3/8" Nylon Locknuts


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1041363	Flat Storage Well Weldment	13	1017007	Limit Switch, 10 amp.
2	1017137	Wiper Belt f/ Flat Storage Well	14	1041365	Mount Plate f/ Limit Switch
3	1041367	Gate f/ Flat Storage Well	(14)	1041365-EP	Mount Plate f/ Limit Switch
4	1041364	End Panel	15	1017199	Arm Lever f/ Limit Switch
5	8370C	Bearing, 4-Hole Flange 1 1/4"	16	1041103	Gate Stop f/ Flat Storage Well
6	1026527	Motor, 1/2 H.P. (.37 kw), 1 PH	17	1041075	Gate Stop, Closed Position
(6)	1026529	Motor, 1/2 H.P. (.37 kw), 1 PH EP	18	1046040	Side Panel Extension
7	1045972	Gearbox w/ Key	19	1046039	End Panel Extension
8	1044650	Mount Plate f/ Gearbox	20	1046041	Splice Plate f/ Side Panel
9	1041366	Shaft, Pinion f/ Flat Storage Well	21	3146A91	Chain, RC-60 f/ Flex Coupler
10	1016854	Spur Gear, S822 x 1.50"	22	3199A1	Coupler Half f/ 60 Chain 12T
11	1038D	Key, 3/8" sq. x 2" long	23	8371C	Key, 1/4" x 1 1/2" long
12	1044710	Skate Wheel f/ Flat Storage Well			

The complete Flat Storage Well assembly can be obtained by ordering
Part No's. 1041362, 1041362EP

The complete well assembly includes all items listed above.

PARTS LIST

10" FLAT STORAGE WELL w/ ELECTRIC SLIDE GATE

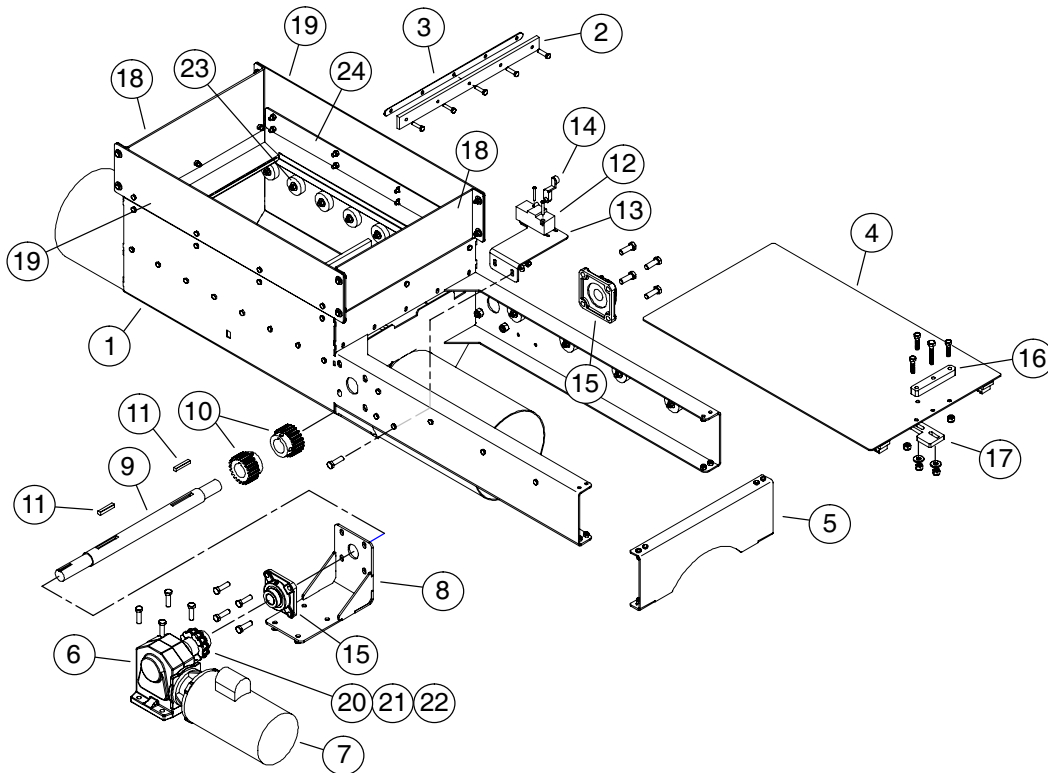

Items No. 2 & 3 (Wiper & Strap) are attached using:
4727-1 – 5/16" x 1 1/4" Bolts, 33023 – 5/16" Flat Washers,
33135 – 5/16" Nylon Locknuts

Item No. 5 (End Panel) is attached using:
33046 – 5/16" x 1" Bolts, 33135 – 5/16" Nylon Locknuts

Item No. 6 (Gearbox) is attached to Item 8 using:
33060 – 3/8" x 1" Bolts, D1150 – 3/8" Lock Washers,
33247 – 1/2" x 1 3/4" Bolts, 33138 – 1/2" Nylon Locknuts

Item No's. 8 & 15 (Bearings & Mount) are attached using:
33247 – 1/2" x 1 3/4" Bolts, 1002227 – 1/2" x 1 1/2" Bolts,
33138 – 1/2" Nylon Locknuts

Item No. 12 (Limit Switch) is attached using:
1017092 – 3/16" x 1 1/2" Stove Bolts, 33021 – Flat Washers
33142 – 3/16" Lock Washers, 33149 – 3/16" Non-Lock Nuts

Item No. 13 (Limit Switch Mount Plate) is attached using:
33046 – 5/16" x 1" Bolts, 33023 – 5/16" Flat Washers,
33135 – 5/16" Nylon Locknuts

Item No's. 16 & 17 (Gate Stops) are attached using:
33310 – 3/8" x 1 1/2" Bolts, D1174 – 3/8" x 2 1/4" Bolt
33024 – 3/8" Flat Washers, 33136 – 3/8" Nylon Locknuts

Item No. 23 (Skate Wheels) are attached using:
4736 – 5/16" x 1 1/2" Bolts, 33023 – 5/16" Flat Washers,
33135 – 5/16" Nylon Locknuts, 1044641 – Spacers

PARTS LIST

10" FLAT STORAGE WELL

w/ ELECTRIC SLIDE GATE (con't.)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1043533	Flat Storage Well Weldment	10	1016854	Spur Gear, S822 x 1.50"
2	1043581	Wiper Belt f/ Flat Storage Well	11	1038D	Key, 3/8" sq. x 2" long
3	1037598	Strap f/ Wiper Belt	12	1017007	Limit Switch, 10 amp
4	1040793	Gate f/ Flat Storage Well	(12)	1045355	Limit Switch, 10 amp., EP
5	1043539	End Panel	13	1041074	Mount Plate f/ Limit Switch
6	1045972	Gearbox w/ Key	(13)	1041074-EP	Mount Plate f/ EP Limit Switch
7	1026526	Motor, 1/2 H.P. (.37 kw), 208-230/460V, 60 Hz, 3 PH	14	1017199	Arm Lever f/ Limit Switch
(7)	1026527	Motor, 1/2 H.P. (.37 kw), 115-208/230V, 60 Hz, 1 PH	15	8370C	Bearing, 4-Hole Flange 1 1/4"
(7)	1026528	Motor, 1/2 H.P. (.37 kw), EP 208-230/460V, 60 Hz, 3 PH 190/380V, 50 Hz, 3 PH, EP	16	1041103	Gate Stop f/ Flat Storage Well
(7)	1026529	Motor, 1/2 H.P. (.37 kw), 115-208/230V, 60 Hz, 1 PH, EP	17	1041075	Gate Stop, Closed Position
(7)	1033296	Motor, 1/2 H.P. (.37 kw), 110-220V, 50 Hz, 1 PH	18	1045957	End Panel Extension
8	1044650	Mount Plate f/ Gearbox	19	1045958	Side Panel Extension
9	1043577	Shaft, Pinion f/ Flat Storage Well	20	3146A91	Chain, RC-60 f/ Flex Coupler
			21	3199A1	Coupler Half f/ 60 Chain 12T
			22	8371C	Key, 1/4" x 1 1/2" long
			23	1044710	Skate Wheel f/ Flat Storage Well
			24	1045959	Splice Plate f/ Side Panel


**The complete Flat Storage Well assembly can be obtained by ordering
Part No's. 1043532, 1043532EP, 1043532-50, 1043532-460, 1043532-460EP
The complete well assembly includes all items listed above.**

PARTS LIST

RACK & PINION

f/ 6", 8" & 10" LOOP SYSTEMS

w/ 15" FLOORS

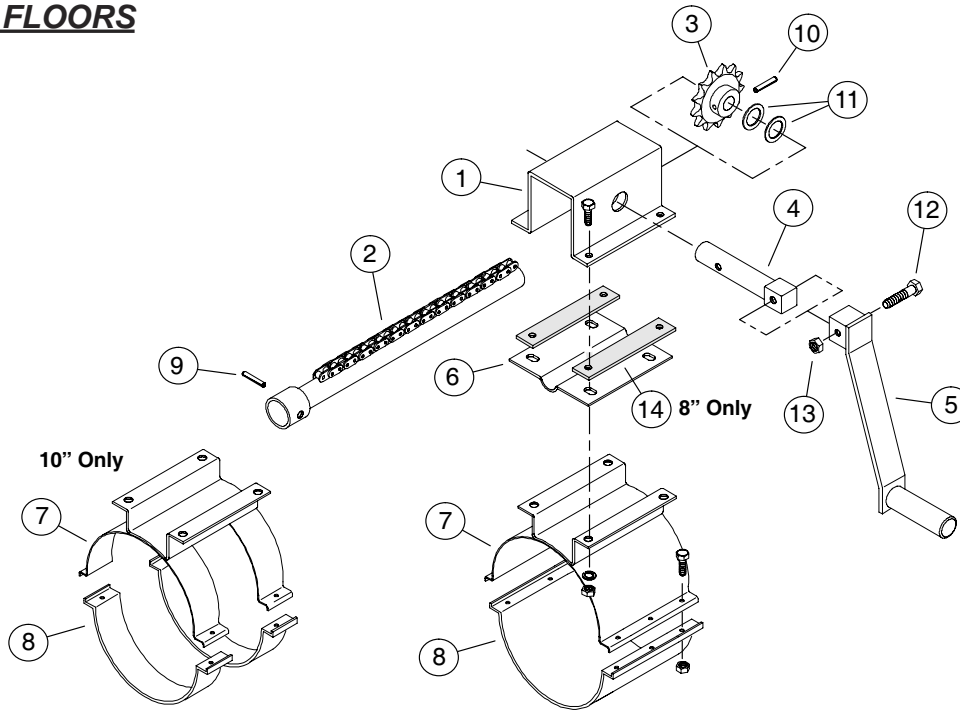

Item No's. 1 & 6 (housing & guide) are attached to Item No. 7 (housing mount) using:
 33309 – 3/8" x 3/4" Bolts,
 D1150 – 3/8" Lock Washers,
 D1149 – 3/8" Non-Lock Nuts

Item No's. 7 & 8 (housing mount & back band) are attached to unload tube using:
 4736 – 5/16" x 1 1/2" Bolts,
 33151 – 5/16" Non-Lock Nuts

For 8" Loop Systems Only:
 Item No's. 1, 6 & 14 (housing, guide & Spacer) are attached to Item No. 7 (housing mount) using:
 33060 – 3/8" x 1" Bolts,
 D1150 – 3/8" Lock Washers,
 D1149 – 3/8" Non-Lock Nuts


All Items listed are used for the 6", 8" & 10" Rack & Pinions unless otherwise noted.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	6311374	Rack & Pinion Housing Wldmnt	(7)	631143	Housing Mount f/ 10"
2	1012724	Rack & Pinion Chain Shaft f/ 6"	8	5028A1	Half Band 6" Wide f/ 6"
(2)	1034202	Rack & Pinion Chain Shaft f/ 8"	(8)	5029A1	Half Band, 6" Wide f/ 8"
(2)	1025350	Rack & Pinion Chain Shaft f/ 10"	(8)	5035A1	Half Band, 2" Wide f/ 10"
3	420080	Sprocket, #50, 13T, 1" bore	9	6328C	Roll Pin, 3/8" x 1 1/2" long
(3)	1012344	Sprocket, #60, 13T, 1" bore f/ 8"	10	3180R1	Roll Pin, 5/16" x 2 1/4" long
4	1012729	Sprocket Shaft	11	D1160	Washer, 1" Flat
5	1012727	Handle f/ Rack & Pinion	12	4626	Bolt, 1/4-20 x 2" G8
6	552941	Tube Guide	13	33150	Nut, 1/4-20 Non-Lock
7	6024A1	Housing Mount f/ 6" & 8"	14	1037931	Spacer Plate f/ 8"

RACK & PINION

f/ 10" LOOP SYSTEMS

w/ 13" FLOORS

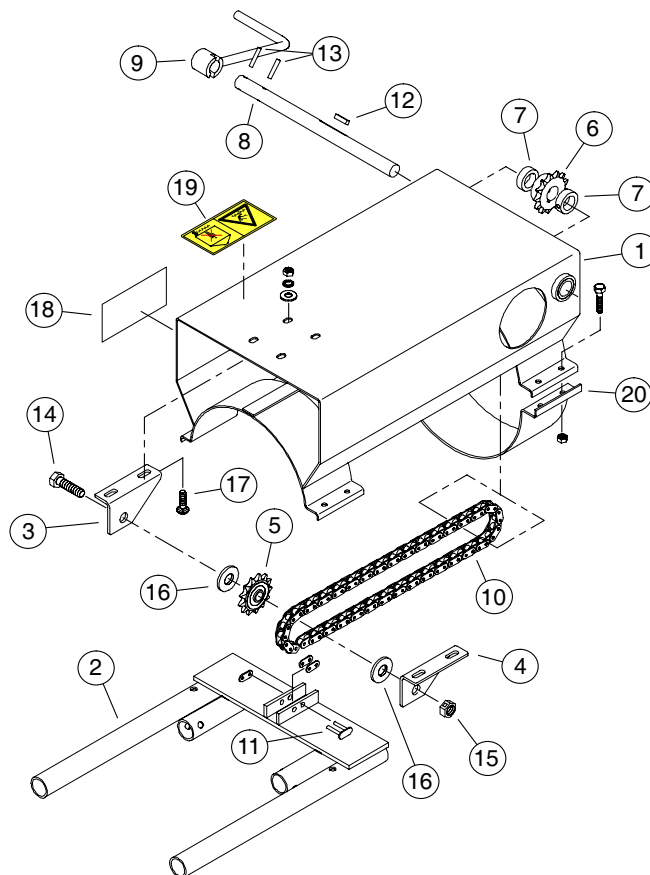




Item No's. 3 & 4 idler sprocket brackets are attached to Item No. 1 (r&p control box) using:
 1001631 – 3/8" x 1" Carriage Bolts,
 D1150 – 3/8" Lock Washers, 33024 – 3/8" Flat Washers
 D1149 – 3/8" Non-Lock Nuts

Item No's. 1 & 20 (control box & half bands) are attached to unload tube using:
 4736 – 5/16" x 1 1/2" Bolts,
 33151 – 5/16" Non-Lock Nuts

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1034555	Rack & Pinion Control Box Wldmnt.	11	40023	Connecting Link #50 Double
2	1041059	Tube Control Weldment	12	4020A1	Key, 1/4" sq. x 1" long
3	52327	Bracket, Idler Sprocket (right)	13	6386C	Roll Pin, 5/16" x 2" long
4	52326	Bracket, Idler Sprocket (left)	14	33244	Bolt, 5/8-11 x 2"
5	6821P	Sprocket, Idler, 13T, 5/8" bore	15	1005111	Nut, 5/8-11 Side Depress Lock
6	5204H	Sprocket, 5 O.B., 13-1" bore	16	33026	Washer, 5/8" Flat
7	3324A1	Collar, 1" Set	17	1001631	Bolt, 3/8-16 x 1" Carriage
8	1034447	Shaft, Pinion Control	18	1006947	Decal, Rack & Pinion
9	1023962	Handle f/ Rack & Pinion	19	1002305	Decal, Danger
10	1018576	Chain, #50, 66 Pitch	20	5044A1	Half Band, 4" Wide

PARTS LIST

TORQUE CHART

<p align="center">General Torque Specification Table</p> <p align="center">Use the Following Torques When Special Torques Are Not Given</p> <p align="center">Note: These values apply to fasteners as received from supplier, dry, or when lubricated with normal engine oil. They do not apply if special graphited or moly-disulphide greases or other extreme pressure lubricants are used. This applies to both UNF and UNC threads.</p>													
SAE Grade No.		SAE 2				SAE 5				SAE 8*			
Bolt head identification marks as per grade Note: Manufacturing marks will vary													
		Torque		Torque		Torque		Torque					
Bolt Size		Foot Pounds		Newton-Meters		Foot Pounds		Newton-Meters		Foot Pounds		Newton-Meters	
Inches	Millimeters	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
1/4	6.35	5	6	6.8	8.13	9	11	12.2	14.9	12	15	16.3	20.3
5/16	7.94	10	12	13.6	16.3	17	20.5	23.1	27.8	24	29	32.5	39.3
3/8	9.53	20	23	27.1	31.2	35	42	47.5	57.0	45	54	61.0	73.2
7/16	11.11	30	35	40.7	47.4	54	64	73.2	86.8	70	84	94.9	113.9
1/2	12.70	45	52	61.0	70.5	80	96	108.5	130.2	110	132	149.2	179.0
9/16	14.29	65	75	88.1	101.6	110	132	149.2	179.0	160	192	217.0	260.4
5/8	15.88	95	105	128.7	142.3	150	180	203.4	244.1	220	264	298.3	358.0
3/4	19.05	150	185	203.3	250.7	270	324	366.1	439.3	380	456	515.3	618.3
7/8	22.23	160	200	216.8	271.0	400	480	542.4	650.9	600	720	813.6	976.3
1	25.40	250	300	338.8	406.5	580	696	786.5	943.8	900	1080	1220.4	1464.5
1 1/8	25.58	----	----	----	----	800	880	1084.8	1193.3	1280	1440	1735.7	1952.6
1 1/4	31.75	----	----	----	----	1120	1240	1518.7	1681.4	1820	2000	2467.9	2712.0
1 3/8	34.93	----	----	----	----	1460	1680	1979.8	2278.1	2380	2720	3227.3	3688.3
1 1/2	38.10	----	----	----	----	1940	2200	2630.6	2983.2	3160	3560	4285.0	4827.4

*Thick nuts must be used with Grade 8 bolts

EC DECLARATION of INCORPORATION



EC Declaration of Incorporation

Manufactured By: Hutchinson I Mayrath
514 West Crawford Street
Post Office Box 629
Clay Center, Kansas 67432 U.S.A.

Declare that the partially complete machinery described below conforms to the applicable health and safety requirements of Part 1 of Annex I of Machinery Directive 2006/42/EC. This partly completed machinery must not be put into service until the equipment into which it is to be incorporated has been declared in conformity with the provisions of Machinery Directive 2006/42/EC. The applicable clauses of Machinery Directive 2006/42/EC must be addressed by the user during installation.

Product: Grain Pump Loop System Models:
6" (152 mm) Systems up to 2 drive stations, 5 HP to 30 HP (4 kw to 22kw)
8" (203 m) Systems up to 2 drive stations, 15 HP to 40 HP (11 kw to 30 kw)
10" (254 mm) Systems up to 2 drive stations, 20 HP to 50 HP (15 kw to 37 kw)
12" (305 mm) Systems up to 2 drive stations, 30 HP to 60 HP (22 kw to 45 kw)

Product Number:

Serial Number:

The following standards have either been referred to or been complied with in part or in full as relevant:

EN ISO 12100-1:2005

EN ISO 12100-2:2005

EN ISO 13857:2008

EN ISO 14121-1:2007

Title

Name

Date

Signature

AGI HUTCHINSON MAYRATH

MANUFACTURED BY
HUTCHINSON | MAYRATH

P.O. Box 629, 514 W. Crawford Street **TF 800.523.6993**
Clay Center, Kansas **P 785.632.2161**
USA 67432 **F 785.632.5964**

hutchinson-mayrath.com